

2. Select the wanted host. Click **Actions** → **Edit Throttle**, as shown in Figure 5-107.

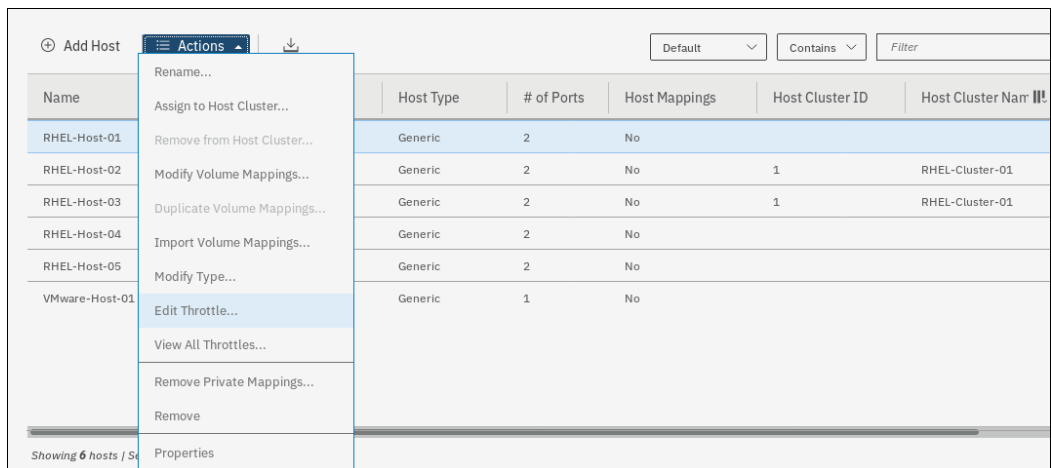


Figure 5-107 Selecting Edit Throttle option

3. Enter the wanted type of I/O throttle (IOPS or Bandwidth). In our example, we set up an IOPS throttle by entering the **IOPS limit**, as shown in Figure 5-108.

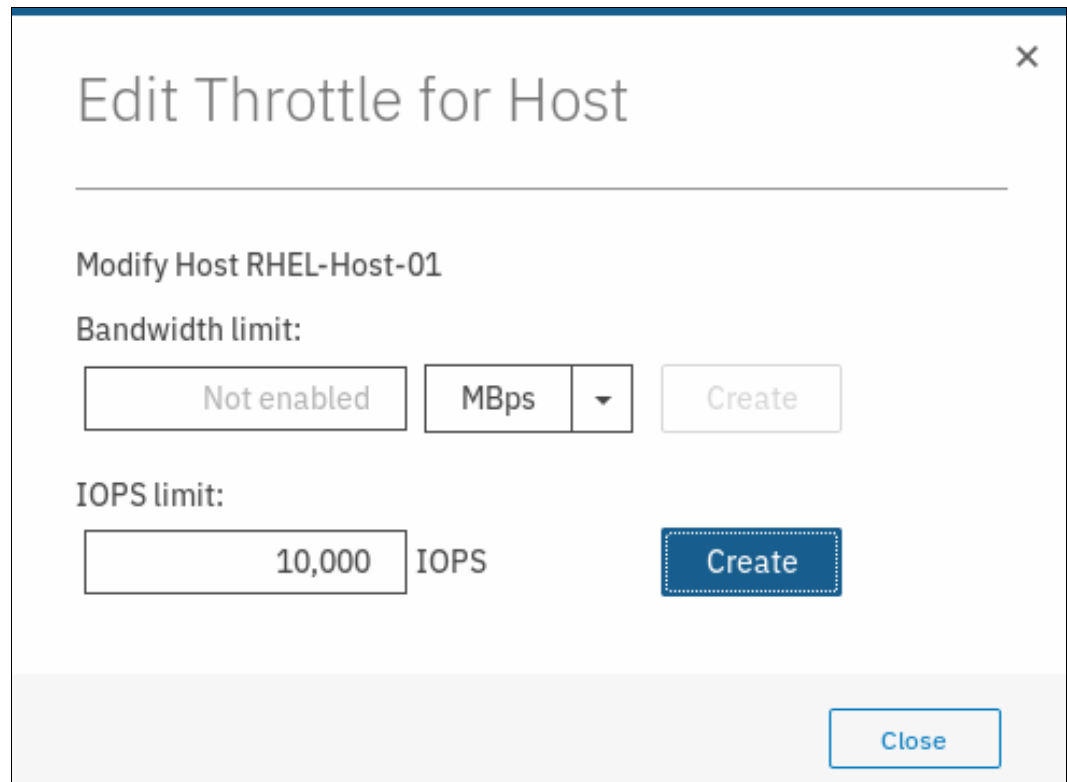


Figure 5-108 Setting IOPS throttle

**Note:** While defining a throttle for a host, you can define a throttle in terms of IOPS or bandwidth, but not both at the same time. If you want to have host throttle defined for both IOPS and bandwidth, you must define them one after the other.

4. Click **Create**. A task completion window opens. Click **Close**.