

- After the Edit Throttle task completes successfully, the **Edit Throttle** window is shown again. At this point, you can set throttle based on the different metrics, modify existing throttle, or close the window without performing any action by clicking **Close**.

7.6.2 Listing volume throttles

To view existing volume throttles, complete these steps:

- From the **Volumes** → **Volumes** menu, click the **Actions** menu, and select **View All Throttles**, as shown in Figure 7-32.

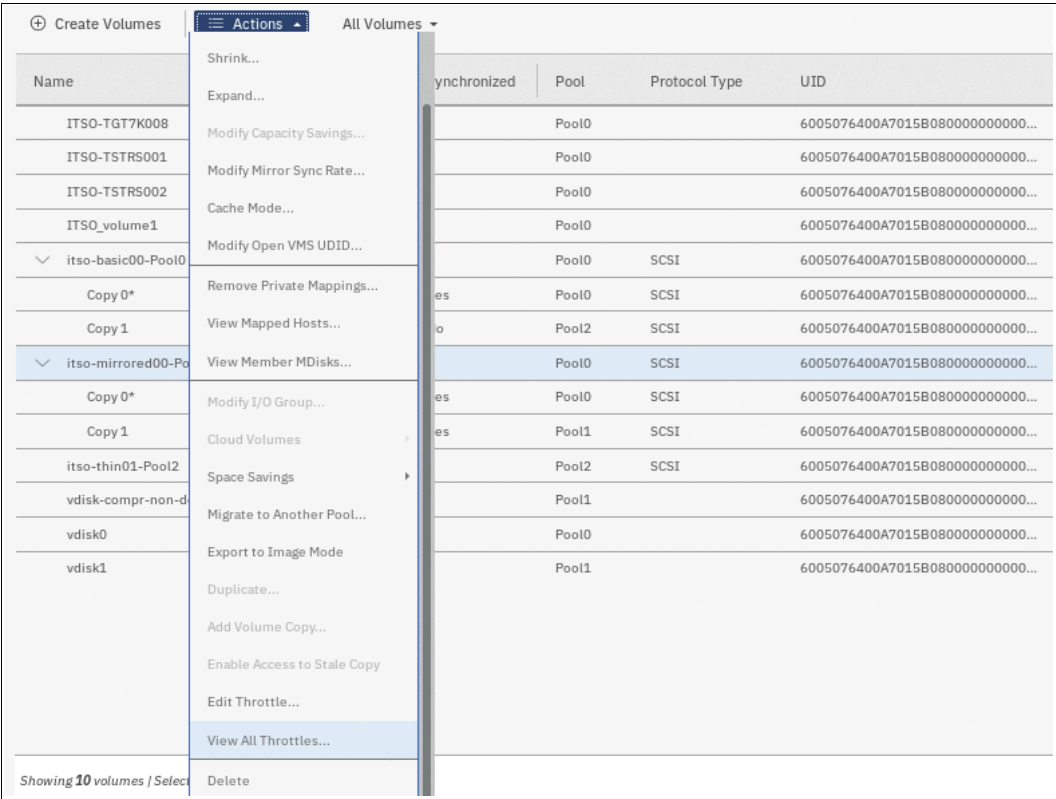


Figure 7-32 View all throttles