


TAKE-OFF

Feed engines from both service tanks. Open cross feeding valve.

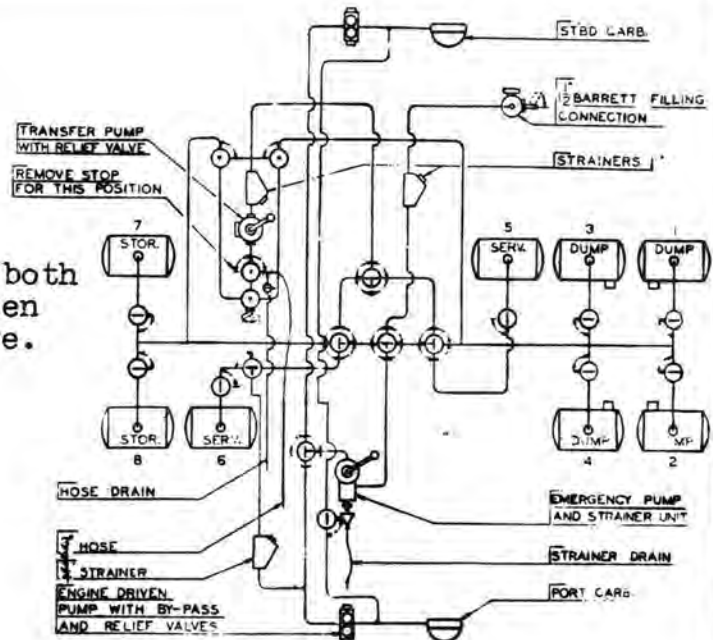


K-3 thru K-10

FUEL SYSTEM K
SCHEMATIC DIAGRAM

Fig. XXVIII-c

FUEL PUMP FAILURES

In case of failure of one engine driven pump open cross connecting valve. In case of failure of both pumps set as indicated in diagram and use emergency pump.

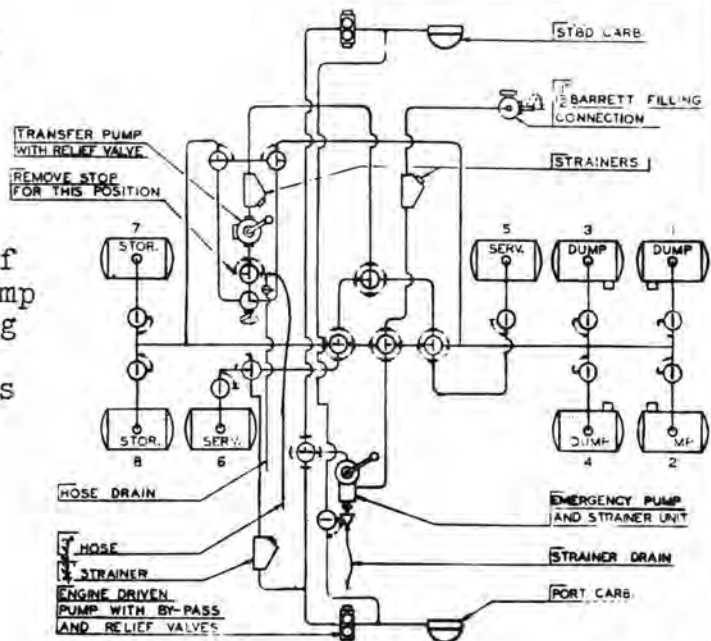

K-3 thru K-10

FUEL SYSTEM K
SCHEMATIC DIAGRAM

Fig. XXVIII-d