


Getting to Know the Stereo Receiver and CD Player—Continued


Display

R-1045/1045DAB

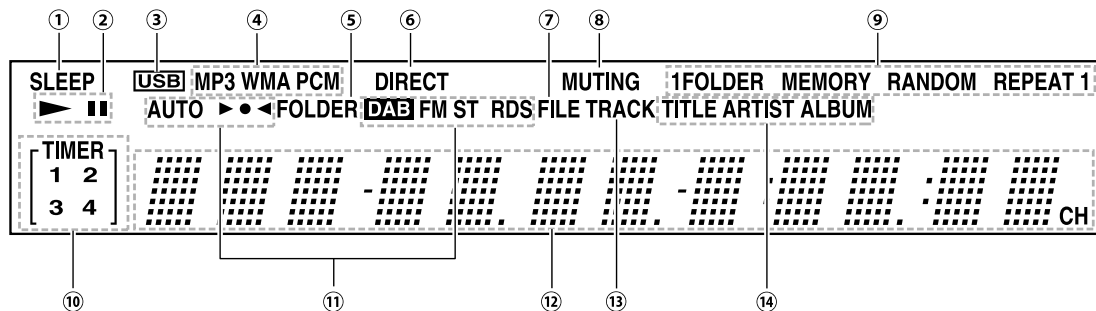

- ① SLEEP indicator
- ② Play [▶] and pause [||] indicators
- ③ USB indicator
- ④ File format indicators
 - MP3
 - WMA
 - PCM
- ⑤ FOLDER indicator
- ⑥ DIRECT indicator
- ⑦ FILE indicator
- ⑧ MUTING indicator
- ⑨ Playback mode indicators
 - 1FOLDER
 - MEMORY
 - RANDOM
 - REPEAT
 - REPEAT 1
- ⑩ TIMER indicators
 - TIMER
 - 1, 2, 3, 4
- ⑪ Tuning indicators
 - AUTO
 - ▶ ● ◀
 - FM ST
 - DAB (R-1045DAB only)
 - RDS
- ⑫ Message area
- ⑬ TRACK indicator
- ⑭ TITLE, ARTIST, and ALBUM indicators

C-1045

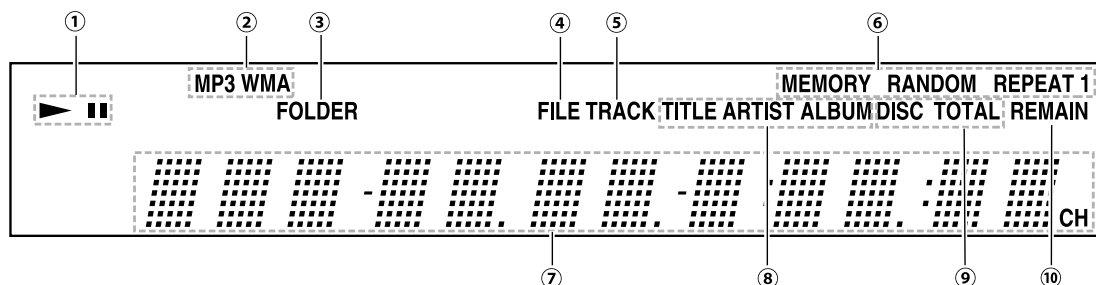

- ① Play and pause indicators
- ② File format indicators
 - MP3
 - WMA
- ③ FOLDER indicator
- ④ FILE indicator
- ⑤ TRACK indicator
- ⑥ Playback mode indicators
 - MEMORY
 - RANDOM
 - REPEAT
 - REPEAT1
- ⑦ Message area
- ⑧ TITLE, ARTIST, and ALBUM indicators
- ⑨ DISC, TOTAL indicators
- ⑩ REMAIN indicator