


4. Pass locking loop over small riser ring and down through riser grommet. Ensure riser-locking loop is not twisted. Insert locking loop through eye on end of cable housing.

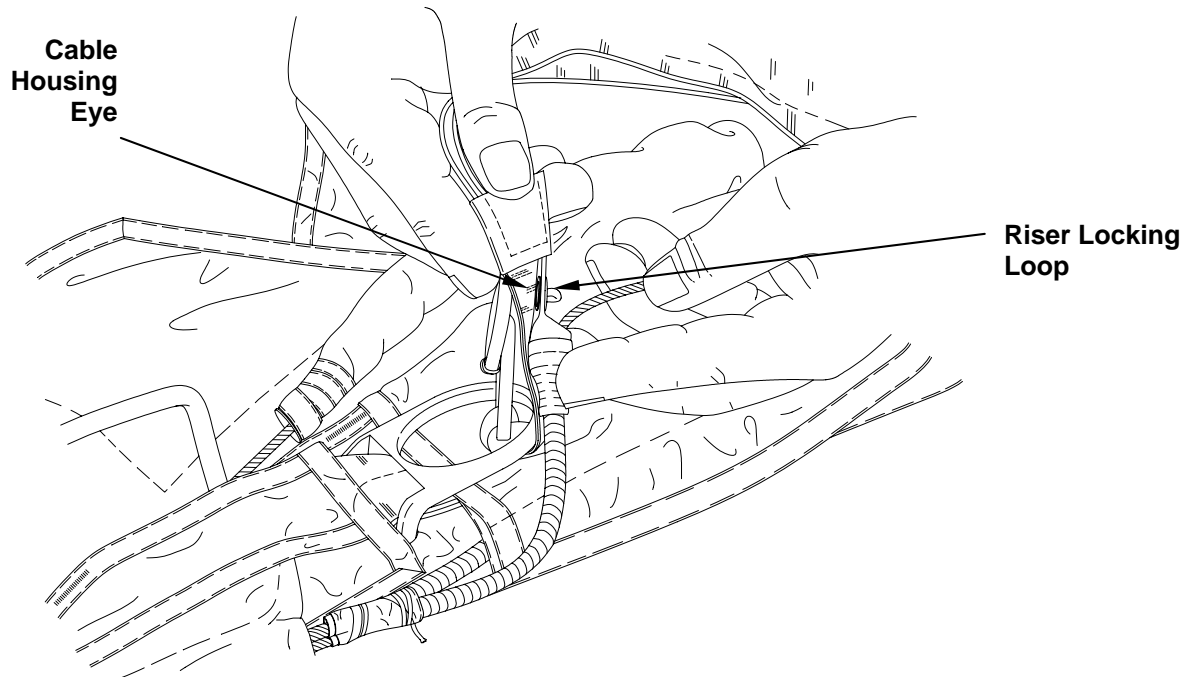

NOTE

Ensure riser locking loop is not twisted.

5. Pass main canopy release cable through locking loop and insert main canopy release cable in riser stowage flute.

