

Driving data


Overview

The driving data display works with the ignition switched on.

In the instrument cluster display

Depending on the equipment, the display of the instrument cluster shows information such as speed, fuel consumption, range, etc.

In Infotainment

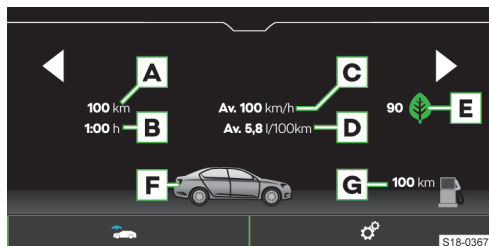

- A** Distance travelled
- B** Driving time
- C** Average speed
- D** Average fuel consumption
- E** Evaluation of driving economy - **Drive-Green** Function (depending on Infotainment type) » [page 104](#)
- F** Graphical fuel gauge - If the expected range is less than 300 km, the vehicle slowly approaches the symbol
- G** Range

Memory

The system saves the driving data in the following memories:

From start or "1" (depending on display type)

- Driving data from the time of switching on the ignition until the ignition is switched off again is stored in the memory. If the journey is interrupted for more than 2 hours, the memory will be reset.

Long term or "2" (depending on display type)

- The driving data of all trips up to a total of 99 hours and 59 minutes driving time or 9999 km driving distance is stored in the memory. If one of the listed values is exceeded, the memory is reset.

From refuelling or "3" (depending on display type)

- Driving data from the time the fuel tank was last filled is stored in the memory. The memory is reset the next time the tank is filled.

Operation

Display driving data in the display of the instrument cluster via the operating lever


- Select the menu item for the driving data in the main menu in the instrument cluster display.



- A** Press - Select information/Set values
- B** Press - Confirm information

Display driving data in the display of the instrument cluster via the multi-functional steering wheel

- Select the menu item for the driving data in the main menu in the instrument cluster display.

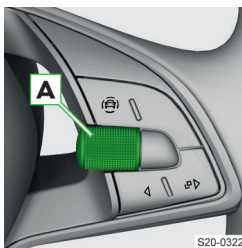

- A** Rotate - Select information/Set values
- Press** - Confirm information

Displaying driving data in the infotainment system

The driving data is displayed in the following menu in the infotainment system:

CAR > > Menu item for driving data

Or:

MENU > > Menu item for the driving data

Select and reset the memory for driving data in the display of the instrument cluster using the control lever



- To **select** the memory for the displayed driving data, press button **A** repeatedly.
- To **reset** the memory, press and hold button

A.