

2. Right-click the relationships that you want to delete and select **Delete**, as shown in Figure 11-150.

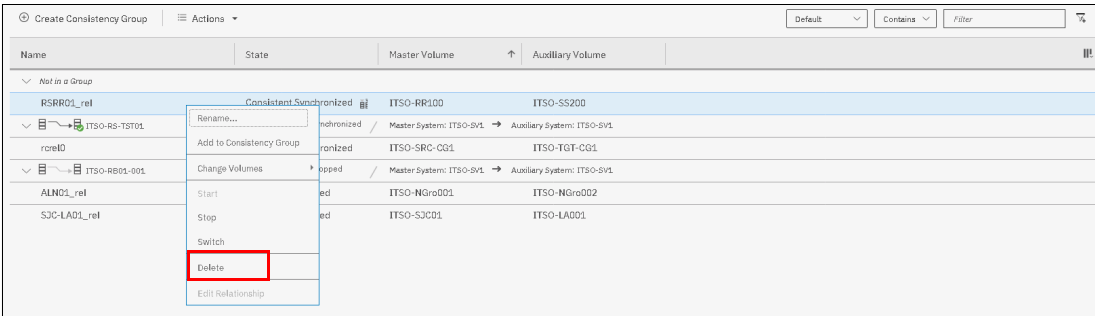


Figure 11-150 Deleting Remote Copy Relationships

3. A confirmation message is displayed, requesting the user to enter the number of relationships to be deleted, as shown in Figure 11-151.

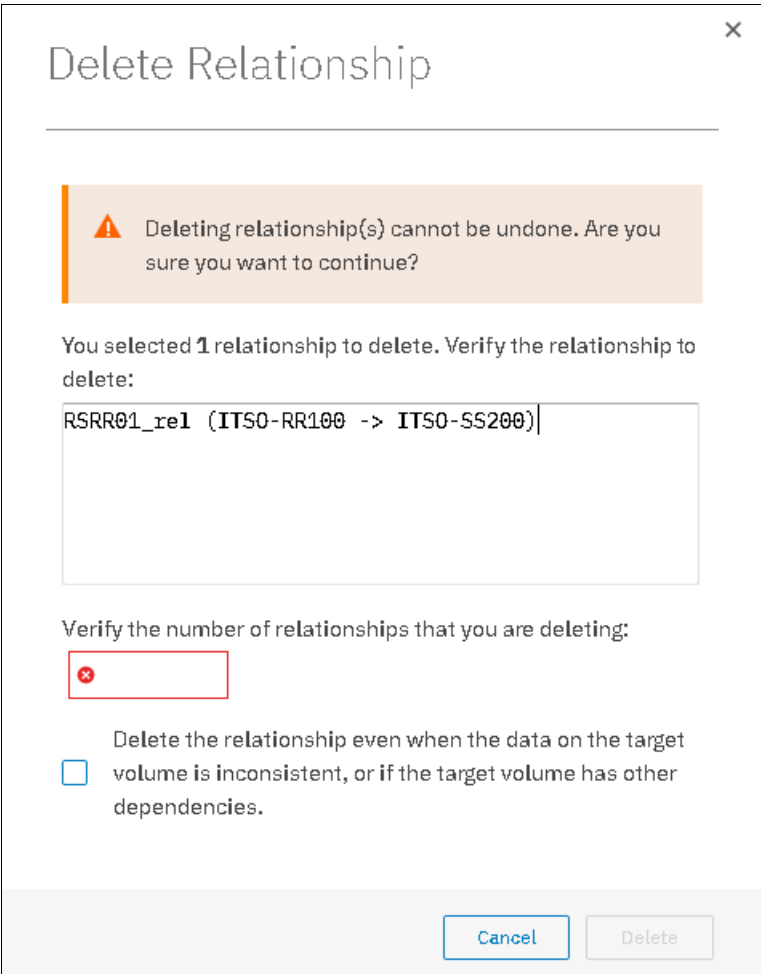


Figure 11-151 Confirmation of relationships deletion