


## Selecting DAB Stations

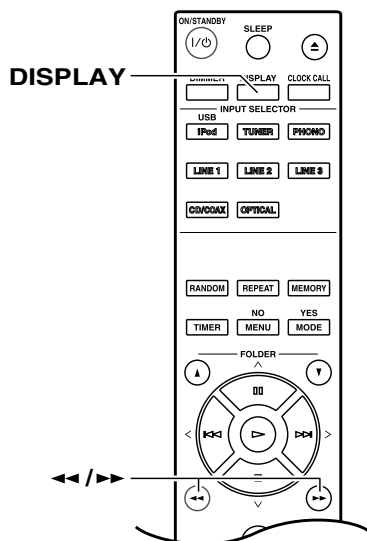

### Use the Fast Reverse and Fast Forward [◀]/[▶] buttons to select the DAB stations.

If a secondary service is available, a right angle bracket (>) is displayed. Press the Fast Forward [▶] button to listen to the secondary service.

\*\*\* DAB  
BBC5Live>

While the secondary service is selected, a left angle bracket (<) is displayed. Press the Fast Reverse [◀] button to return to the primary service.

\*\*\* DAB  
BBC5Live<

When you select a station that you've selected a lot in the past, the letter F (short for Favorite) is displayed.

\*\*\* DAB  
>BBC5Live F  
"F"

If you select a station that cannot be received properly, a question mark (?) is displayed.

\*\*\* DAB  
>BBC5Live ?  
"?"

- Once a DAB station has been preset, these front panel controls will select presets, in Preset mode. To use them to select DAB stations, select DAB as the input source, and then press the Stop [■] button for 3 seconds until "Station Mode" appears on the display.

## Displaying DAB Radio Information

Press the remote controller's [DISPLAY] button repeatedly to display more information about the selected DAB station.

### 1. DLS (Dynamic Label Segment)

When tuned to a station that's broadcasting DLS text data, the text will scroll across the display.

All the late  
←---- (Scroll)

### 2. Program Type

Displays the type of program.

News

### 3. Bit Rate and Audio Mode

Displays the station's bit rate and audio mode (stereo, mono, or joint stereo).

806 kbps Mono

### 4. Signal Quality

Displays the signal quality.

0–59: Poor reception  
60–79: Good reception  
80–100: Excellent reception

Quality: 86

### 5. Multiplex Name

Displays the name of the current multiplex.

BBC DAB

### 6. Multiplex Number and Frequency

Displays the number and frequency of the current multiplex.

12B 225.6MHz

- You can also use the multi control to select DAB stations.