

Now, you must proceed with the storage configuration to select the protocol to be used for storage access for each adapter and configure the storage (access the storage subsystem, allocate storage space, and so on).

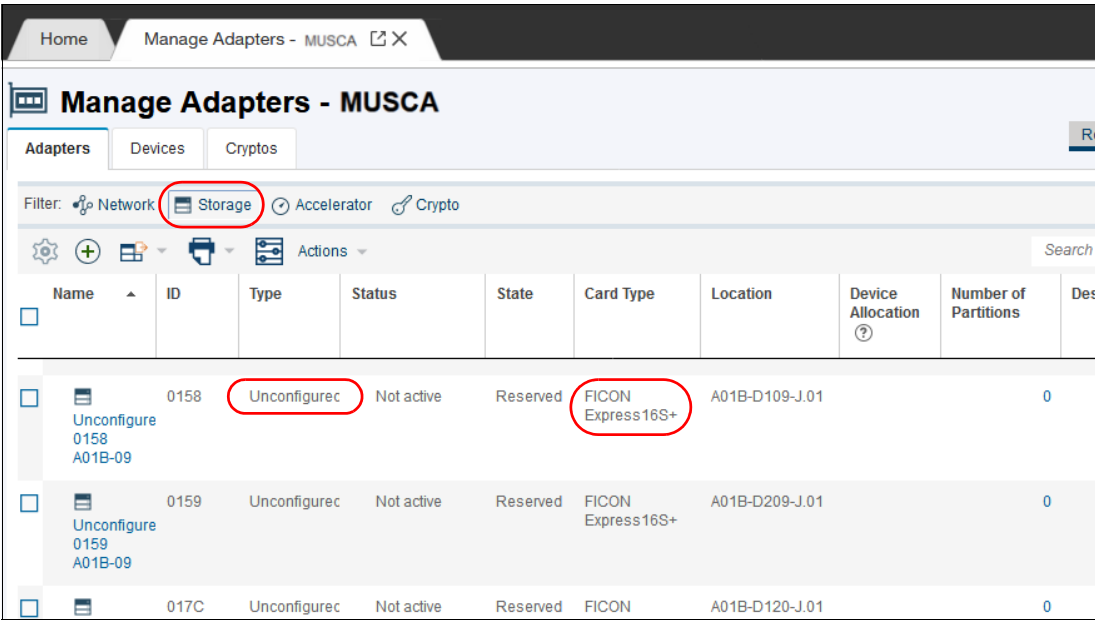


Figure 16-24 Checking available FICON Express adapters

Complete the following steps:

1. Click **Configure Storage** (see Figure 16-25) to access the storage configuration menu.

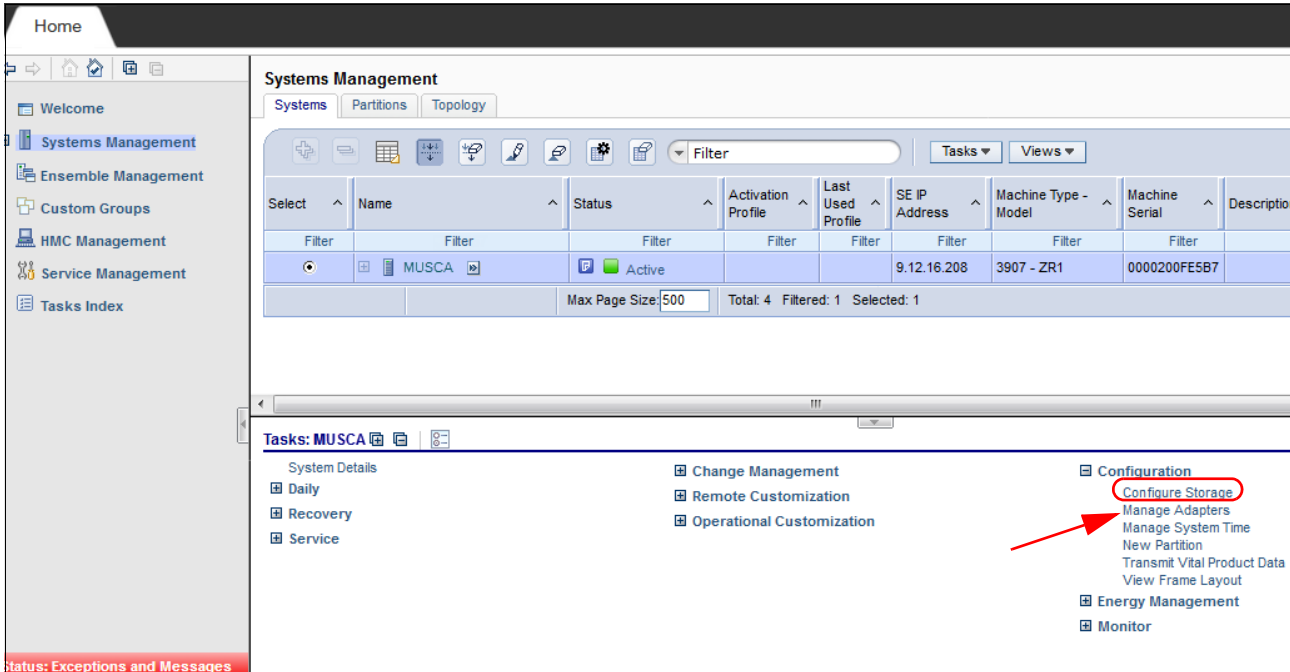


Figure 16-25 Accessing the “Configure Storage” task

2. In the Configure Storage window, configure the cards’ (adapters’) protocol (FICON or FCP), request storage, and configure FICON connections (switches/directors and storage devices).