

11.2.10 Moving FlashCopy mappings across Consistency Groups

To move one or multiple FlashCopy mappings to a Consistency Group, complete the following steps:

1. Open the FlashCopy, Consistency Groups, or FlashCopy Mappings window.
2. Right-click the FlashCopy mappings that you want to move and select **Move to Consistency Group**, as shown in Figure 11-45.

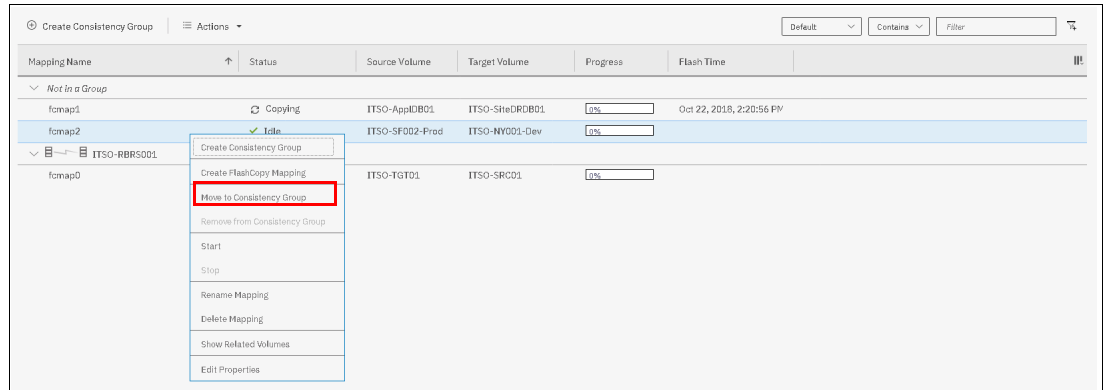


Figure 11-45 Moving a FlashCopy mapping to a consistency group

Note: You cannot move a FlashCopy mapping that is in a copying, stopping, or suspended state. The mapping should be idle-or-copied or stopped to be moved.

3. In the Move FlashCopy Mapping to Consistency Group window, select the Consistency Group for the FlashCopy mappings selection by using the drop-down menu, as shown in Figure 11-46.

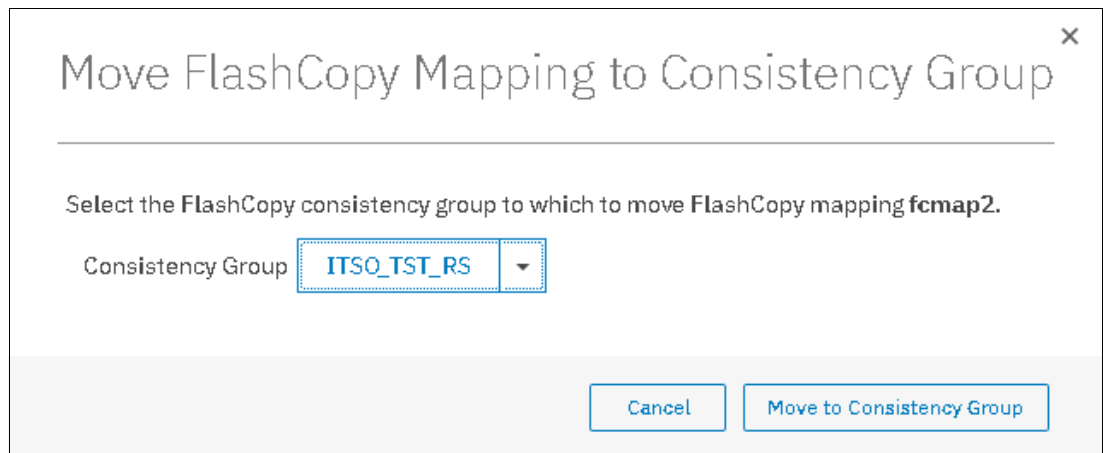


Figure 11-46 Selecting the consistency group where to move the FlashCopy mapping

4. Click **Move to Consistency Group** to confirm your changes.