



# Listening to the Radio

## Tuning into FM/AM Radio Stations

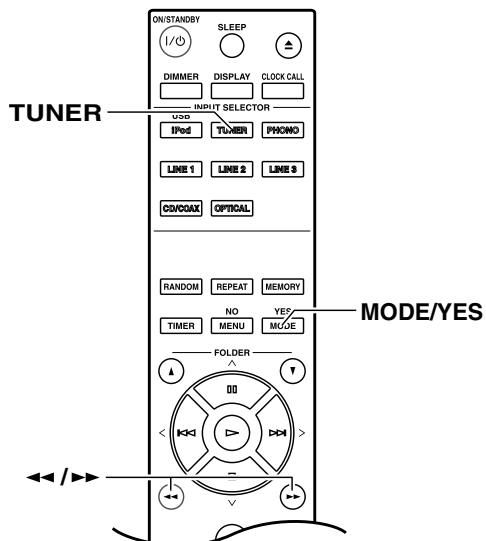

When tuned into a station, the Tuned ►●◄ indicator appears. When tuned into a stereo FM station, the FM ST indicator appears as well.

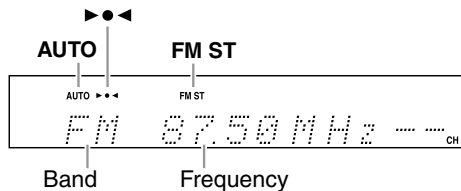

### Tuning into weak stereo FM/AM stations


If the signal from a stereo FM station is weak, it may be impossible to get good reception. In this case, switch to Manual Tuning mode and listen to the station in mono.

## Adjusting the Antennas

### Adjusting and installing the antenna


Choose a location for the antenna while listening to a station.

FM /  
DAB (R-1045DAB only)

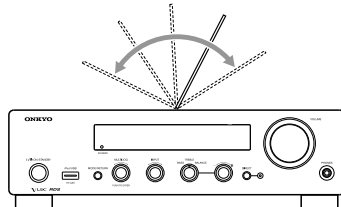


Change the direction of the antenna to achieve the best reception.

AM

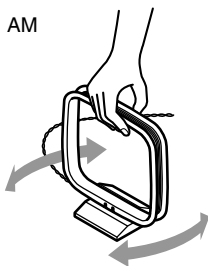


FM

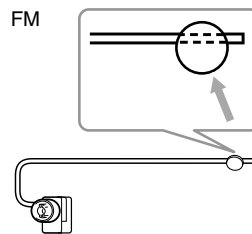

Affix the antenna with a thumbtack. (Do not push the thumbtack through the antenna.)

DAB (R-1045DAB only)

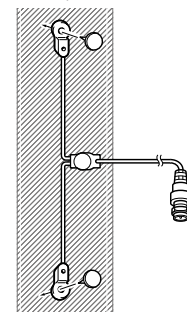

### ! Caution

Be careful not to prick your finger!

- 1** Press the [TUNER] button repeatedly to select “FM” or “AM”.
- 2** Press the [MODE/YES] button repeatedly to select “Auto” or “Manual”.
  - Auto Tuning Mode  
The AUTO indicator appears and stereo radio reception is possible.
  - Manual Tuning Mode  
The AUTO indicator is not displayed and radio reception will be in mono.
- 3** Use the Fast Reverse and Fast Forward [◀]/[▶] buttons or [MULTI JOG] control to tune into a station.  
**In Auto tuning mode**, once a station is found, tuning stops automatically.  
The stereo receiver changes FM frequency in 0.05 MHz steps, AM frequency in 9kHz.  
**In Manual Tuning mode**, the frequency stops changing when you release the button.  
Press the button repeatedly to change the frequency one step at a time.