


5.4.3 Mirroring Paths

Point to the **Copy Services** icon and click **Mirroring Paths** to display the status of all Mirroring Paths.

The DS GUI displays the source and target ports for each path, along with the state, local LSS, and remote LSS, as shown in Figure 5-14.

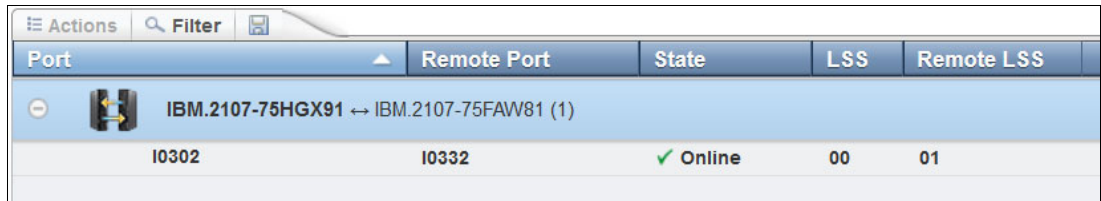

The screenshot shows a table with the following columns: Port, Remote Port, State, LSS, and Remote LSS. The first row of data shows a path between IBM.2107-75HGx91 and IBM.2107-75FAW81 (1) with Port I0302, Remote Port I0332, State Online, LSS 00, and Remote LSS 01.

Port	Remote Port	State	LSS	Remote LSS
IBM.2107-75HGx91 ↔ IBM.2107-75FAW81 (1)				
I0302	I0332	✓ Online	00	01

Figure 5-14 DS8880 GUI Copy Services: Mirroring Paths

Additional information for mirror paths can be displayed by right-clicking a path and selecting **Properties** as shown in Figure 5-15.

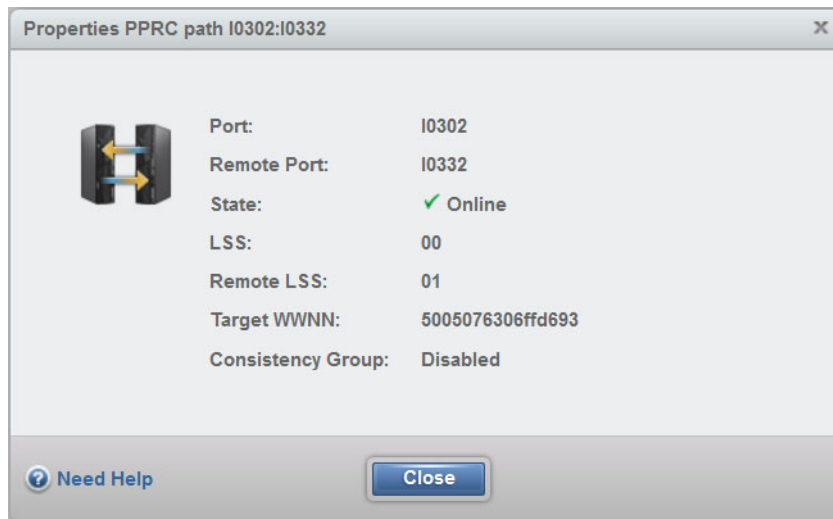


Figure 5-15 DS8880 GUI Copy Services: Mirroring Path Properties