


4. Insert a screwdriver or other suitable tool through eye of power cable to form a T-handle. Secure AR2. Pull eye of power cable until the AR2 mechanism reaches the cocked position and power cable remains extended from power housing (requires approximately 70-pounds pull).
5. Remove the AR2 and Power Cable Assembly as follows:
  - a. Remove AR2 from pocket and unscrew power-housing retainer from spring housing and remove the AR2 from power cable assembly by disengaging ball of power cable from piston rod. Attach storage cable and piston rod cap to AR2.

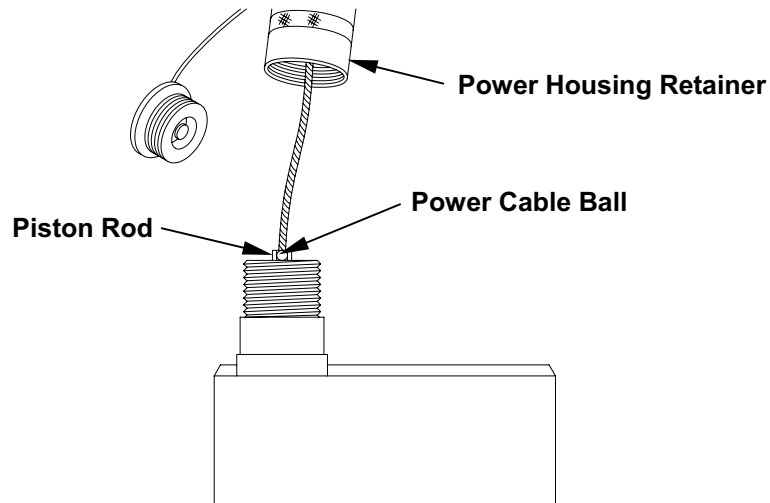

- b. Remove the power cable assembly from the AAD Junction plate by removing the two (2) screws, nuts, backing plate and clamp. These parts (hardware) are accessories attached to the AAD Junction plate.
- c. Remove the power cable through the 1  $\frac{3}{4}$ -inch hole on the right side of the container, through the inside of the container and out through the 1  $\frac{3}{4}$ -inch hole located above the AR2 pocket.

**END OF WORK PACKAGE**