

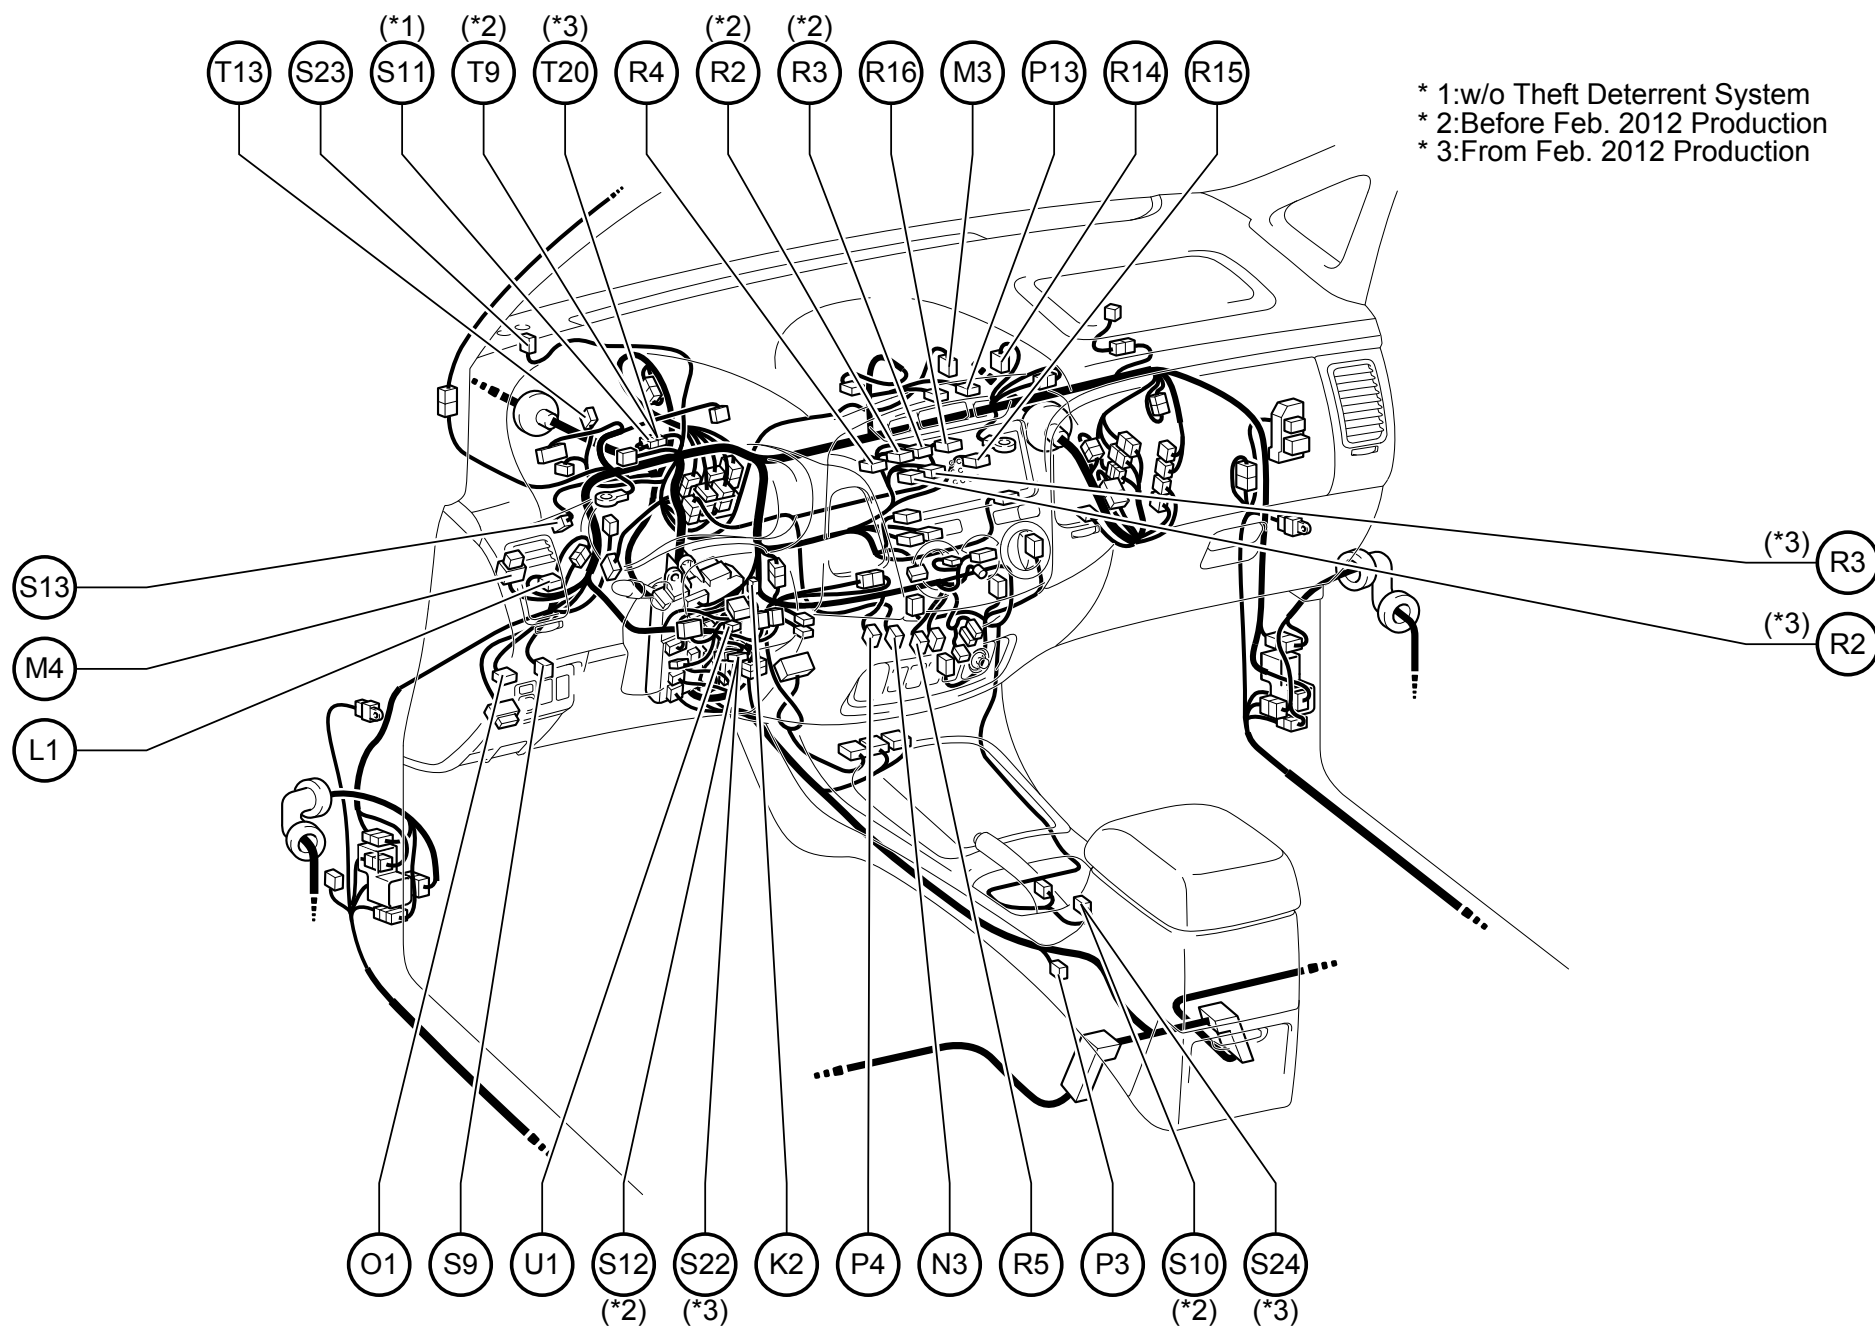
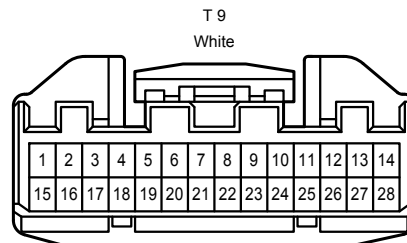
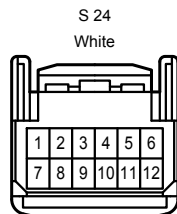
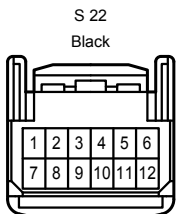
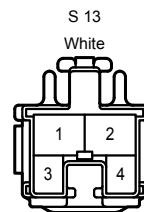
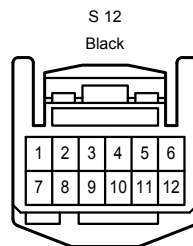
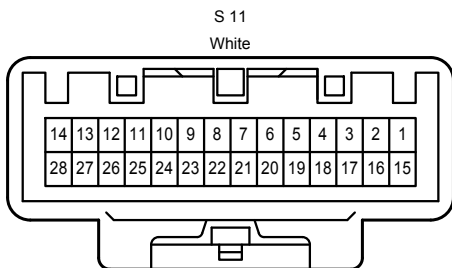
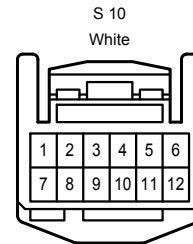
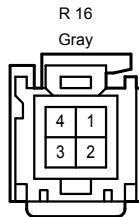
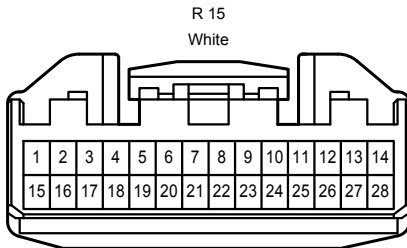
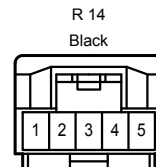
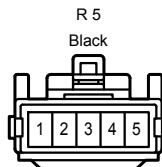
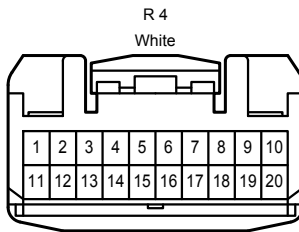
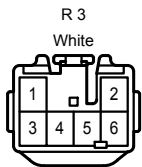
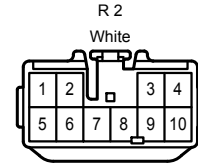
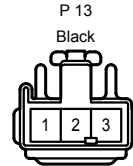

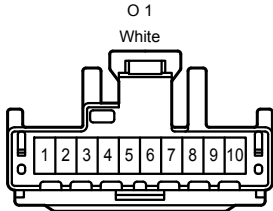
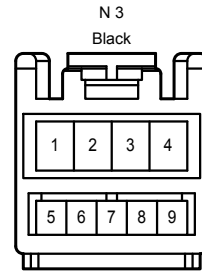
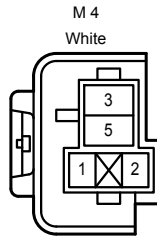
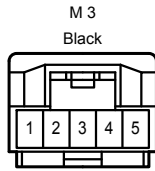


Position of Parts in Instrument Panel



K	2	Key Interlock Solenoid
L	1	Light Control Rheostat
M	3	Mode Damper Servo Sub-Assembly
M	4	Magnet-Clutch Relay
N	3	No. 1 Stereo Jack Adapter Assembly
O	1	Outer Mirror SW
P	3	Parking Brake SW
P	4	Power Point Socket
P	13	Telltale Light Assembly
R	2	Radio Receiver Assembly
R	3	Radio Receiver Assembly
R	4	Radio Receiver Assembly
R	5	Rear Window Defogger SW
R	14	Recirculation Damper Servo Sub-Assembly
R	15	Radio Receiver Assembly
R	16	Radio Receiver Assembly
S	9	Security Indicator Lamp
S	10	Shift Lock Control ECU
S	11	Short Connector (Theft Warning ECU)
S	12	Spiral Cable
S	13	Stop Lamp SW
S	22	Spiral Cable
S	23	A/C Solar Sensor (Cooler (Solar Sensor) Thermistor)
S	24	Shift Lock Control ECU
T	9	Theft Warning ECU
T	13	Turn Signal Flasher
T	20	Theft Warning ECU
U	1	Unlock Warning SW

Position of Parts in Instrument Panel



Position of Parts in Instrument Panel

