


Position of Parts in Engine Compartment

- * 1: Before Feb. 2012 Production
- * 2: From Feb. 2012 Production
- * 3: Before Jun. 2005 Production

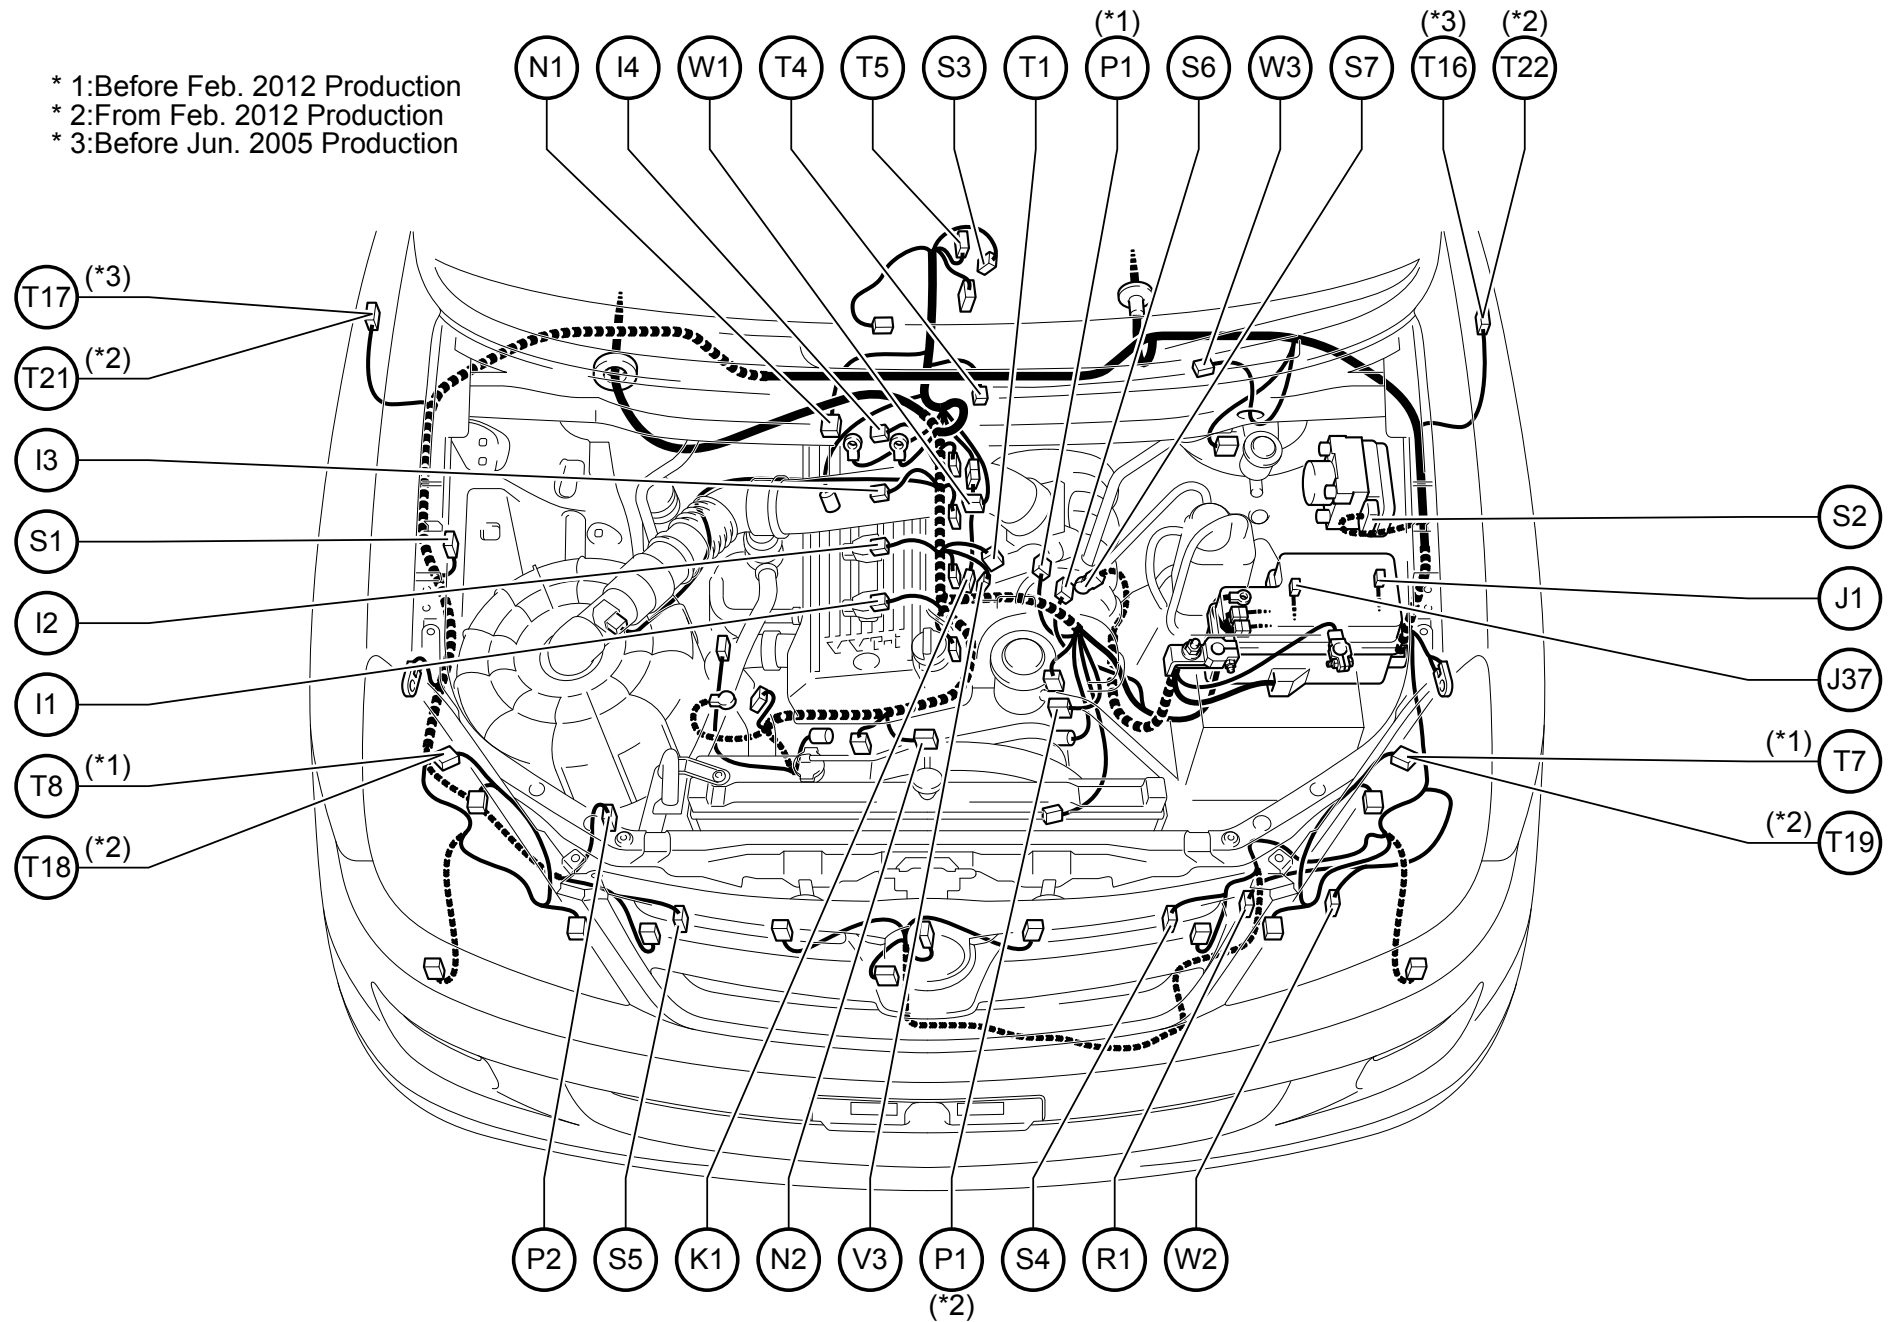

Position of Parts in Engine Compartment

- I 1 Ignition Coil (No.1)
- I 2 Ignition Coil (No.2)
- I 3 Ignition Coil (No.3)
- I 4 Ignition Coil (No.4)

- J 1 Junction Connector
- J 37 Junction Connector

- K 1 Knock Control Sensor (Bank 1)

- N 1 Park/Neutral Position SW
- N 2 Noise Filter (Ignition)
- N 2 Noise Filter (Ignition)

- P 1 Power Steering Oil Pressure SW
- P 2 Pressure SW

- R 1 Rear Washer Motor


- S 1 Security Horn
- S 2 Skid Control ECU with Actuator
- S 3 Speed Sensor
- S 4 Speed Sensor (Front LH)
- S 5 Speed Sensor (Front RH)
- S 6 Starter
- S 7 Starter

- T 1 Throttle Body Assembly
- T 4 Transmission Revolution Sensor (Input)
- T 5 Transmission Revolution Sensor (Output)
- T 7 Turn Signal Lamp (Front LH)
- T 8 Turn Signal Lamp (Front RH)
- T 16 Turn Signal Lamp (Front Side LH)
- T 17 Turn Signal Lamp (Front Side RH)
- T 18 Turn Signal Lamp (Front RH)
- T 19 Turn Signal Lamp (Front LH)
- T 21 Turn Signal Lamp (Front Side RH)
- T 22 Turn Signal Lamp (Front Side LH)

- V 3 VSV (Purge)

- W 1 Water Temp. Sensor
- W 2 Windshield Washer Motor
- W 3 Windshield Wiper Motor

Position of Parts in Engine Compartment

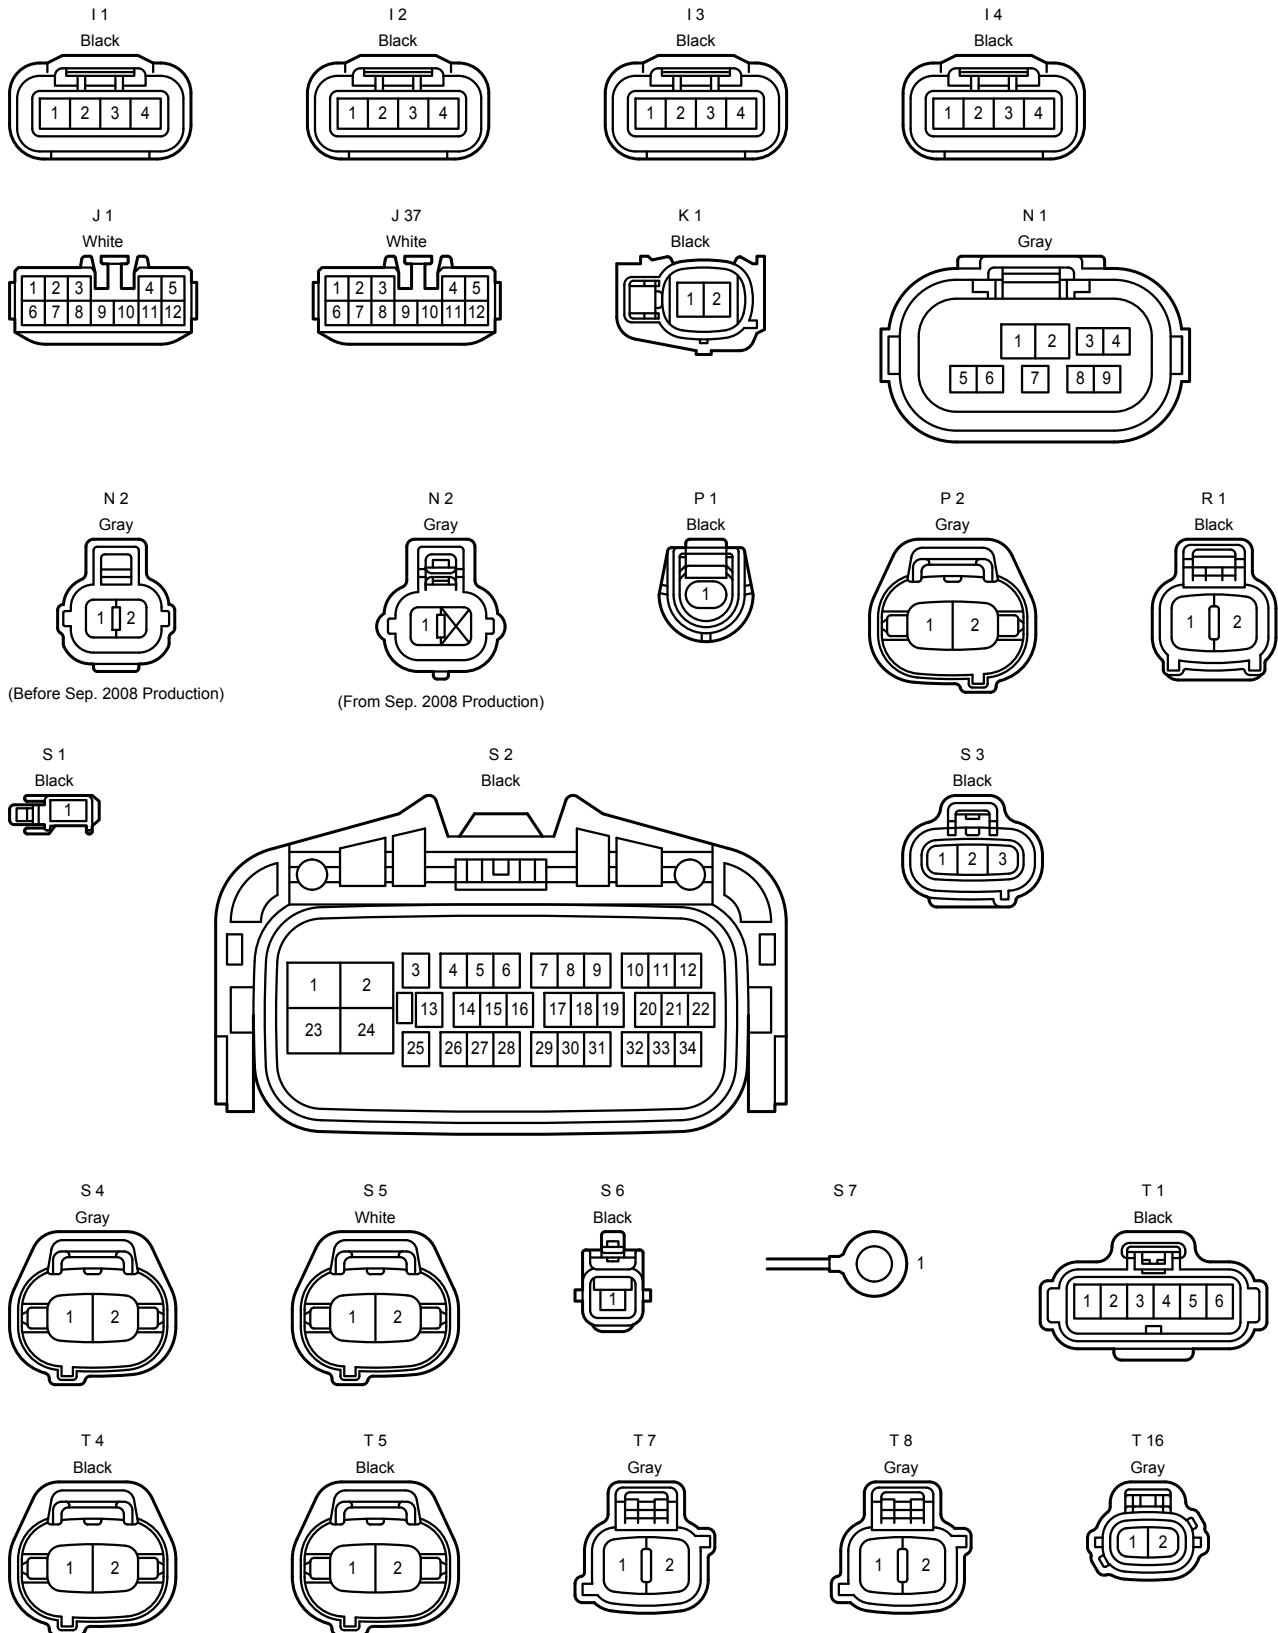

Position of Parts in Engine Compartment

