


Position of Parts in Engine Compartment

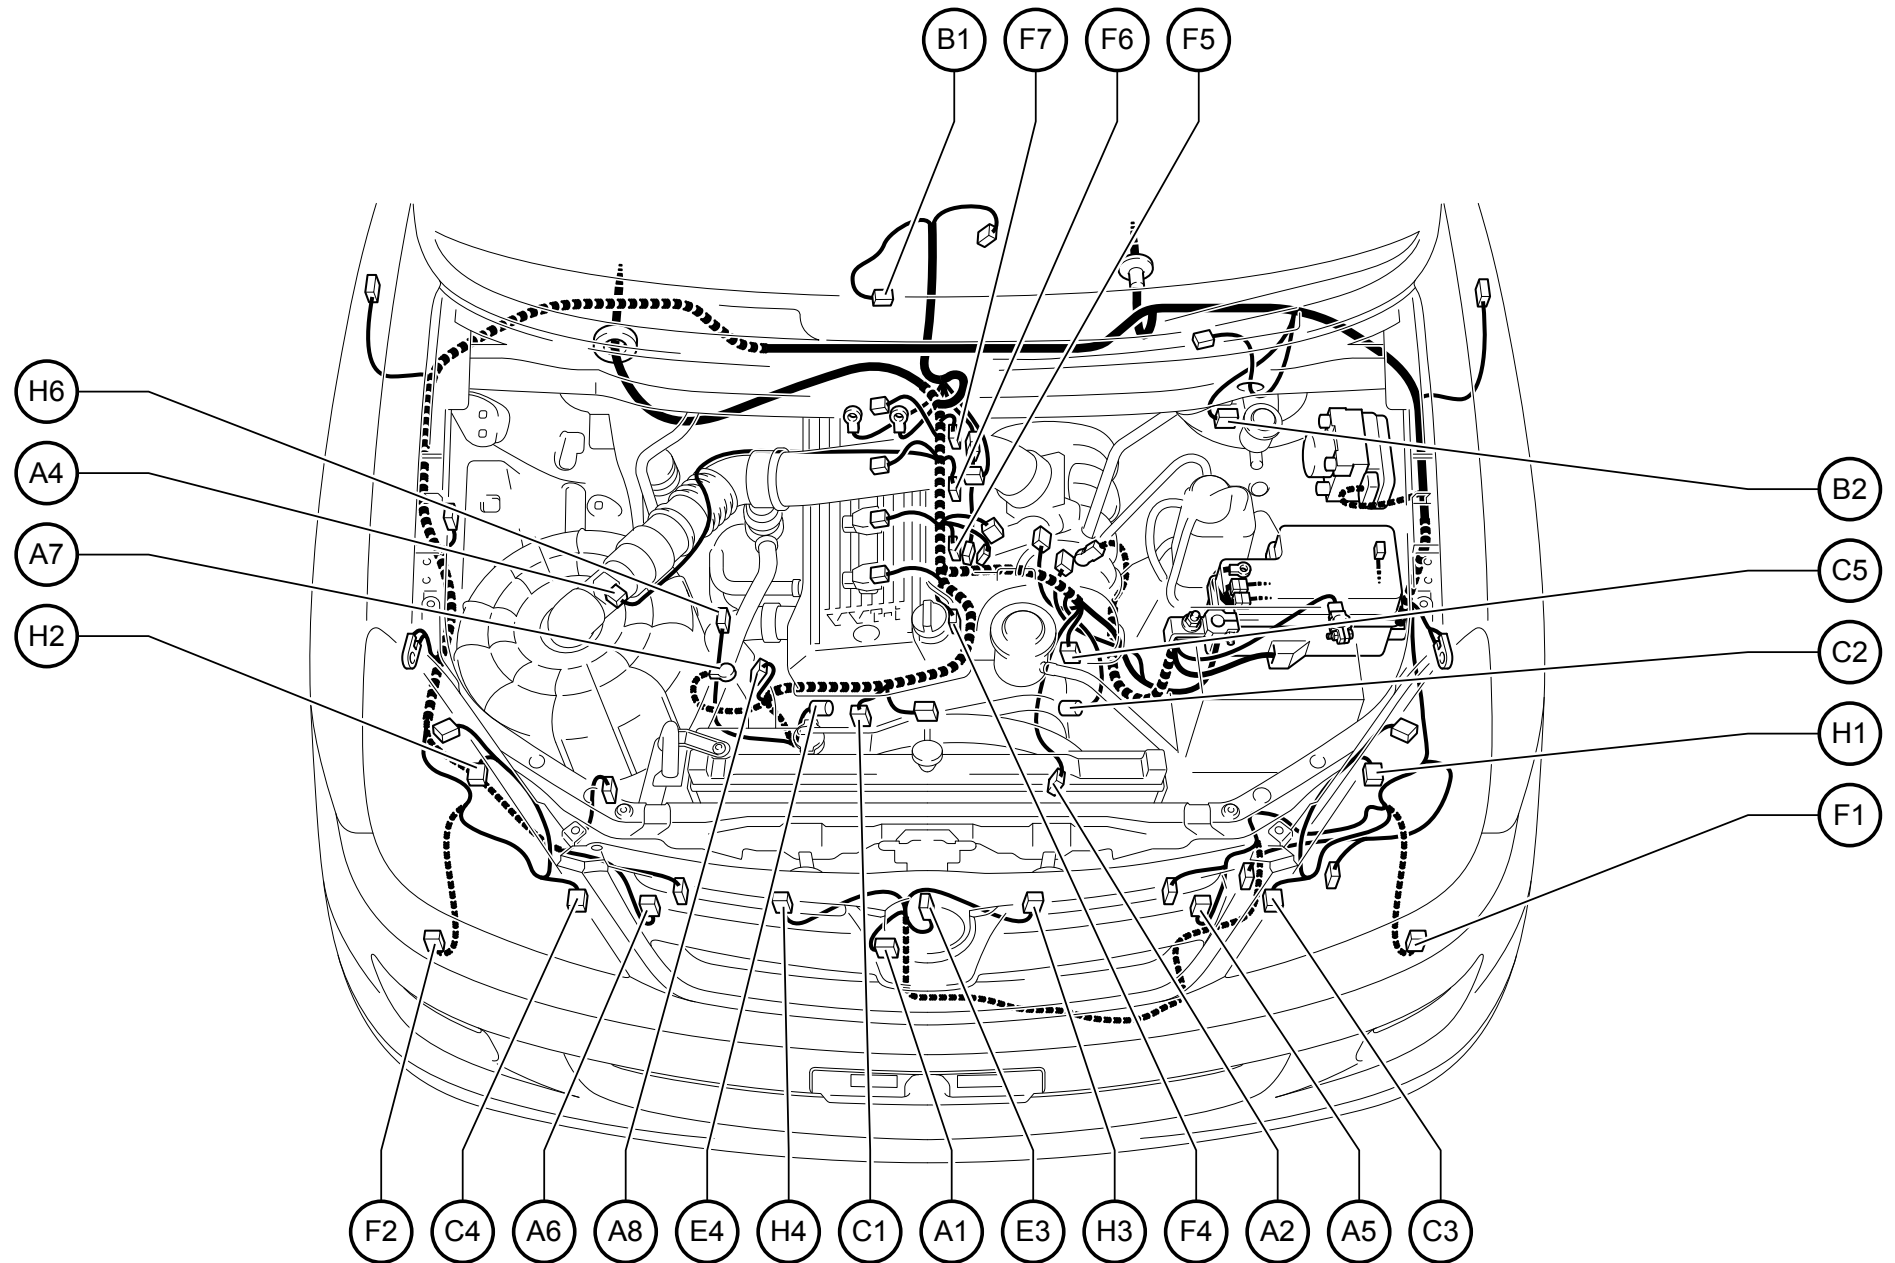

---

**Position of Parts in Engine Compartment**

---

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Compressor
- A 4 Air Flow Meter
- A 5 Airbag Sensor (Front LH)
- A 6 Airbag Sensor (Front RH)
- A 7 Alternator
- A 8 Alternator
  
- B 1 Back-Up Lamp SW
- B 2 Brake Fluid Level Warning SW
  
- C 1 Camshaft Position Sensor
- C 2 Camshaft Timing Oil Control Valve
- C 3 Clearance Lamp (Front LH)
- C 4 Clearance Lamp (Front RH)
- C 5 Crankshaft Position Sensor
  
- E 3 Engine Hood Courtesy SW
- E 4 Engine Oil Pressure SW
  
- F 1 Fog Lamp (Front LH)
- F 2 Fog Lamp (Front RH)
- F 4 Fuel Injector (No.1)
- F 5 Fuel Injector (No.2)
- F 6 Fuel Injector (No.3)
- F 7 Fuel Injector (No.4)
  
- H 1 Headlamp (LH)
- H 2 Headlamp (RH)
- H 3 Horn (High)
- H 4 Horn (Low)
- H 6 Heated Oxygen Sensor (Bank 1 Sensor 1)

# Position of Parts in Engine Compartment

