


Position of Parts in Engine Compartment

* 1:Before Feb. 2012 Production

* 2:From Feb. 2012 Production

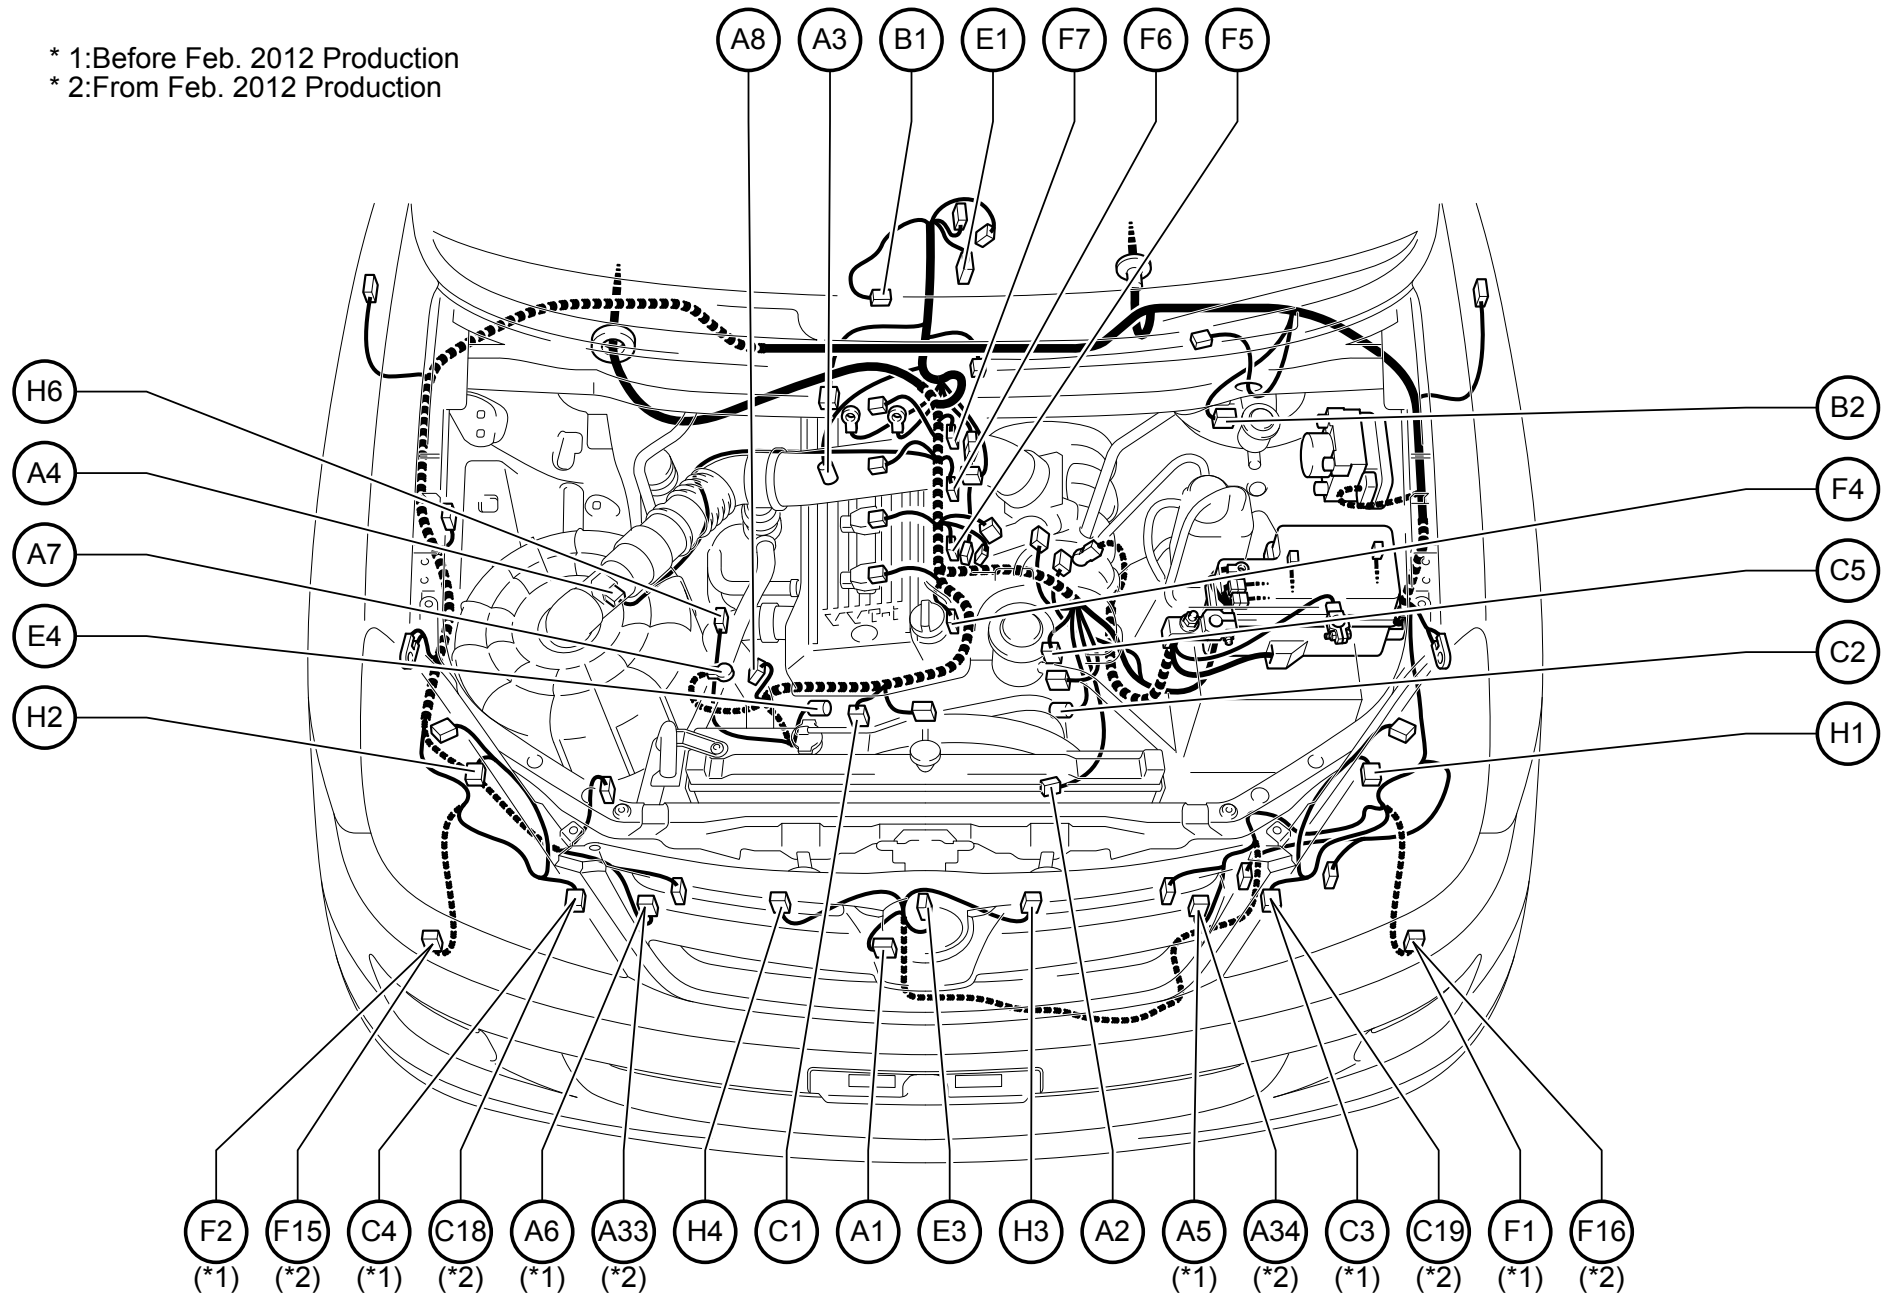

Position of Parts in Engine Compartment

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Compressor
- A 3 A/T Fluid Temp. Sensor
- A 4 Air Flow Meter
- A 5 Airbag Sensor (Front LH)
- A 6 Airbag Sensor (Front RH)
- A 7 Alternator
- A 8 Alternator
- A 33 Airbag Sensor (Front RH)
- A 34 Airbag Sensor (Front LH)

- B 1 Back-Up Lamp SW
- B 2 Brake Fluid Level Warning SW

- C 1 Camshaft Position Sensor
- C 2 Camshaft Timing Oil Control Valve
- C 3 Clearance Lamp (Front LH)
- C 4 Clearance Lamp (Front RH)
- C 5 Crankshaft Position Sensor
- C 18 Clearance Lamp (Front RH)
- C 19 Clearance Lamp (Front LH)

- E 1 ECT Solenoid
- E 3 Engine Hood Courtesy SW
- E 4 Engine Oil Pressure SW

- F 1 Fog Lamp (Front LH)
- F 2 Fog Lamp (Front RH)
- F 4 Fuel Injector (No.1)
- F 5 Fuel Injector (No.2)
- F 6 Fuel Injector (No.3)
- F 7 Fuel Injector (No.4)
- F 15 Fog Lamp (Front RH)
- F 16 Fog Lamp (Front LH)

- H 1 Headlamp (LH)
- H 2 Headlamp (RH)
- H 3 Horn (High)
- H 4 Horn (Low)
- H 6 Heated Oxygen Sensor (Bank 1 Sensor 1)

Position of Parts in Engine Compartment

