



Software Safety Requirements and Architecture

Lane Assistance

Document Version: 1.0

Template Version 1.0, Released on 2017-06-21



Document history

Date	Version	Editor	Description
08.15.2018	1.0	Liang Zhang	First Attempt

Table of Contents

[Document history](#)

[Table of Contents](#)

[Purpose](#)

[Inputs to the Software Requirements and Architecture Document](#)

[Technical safety requirements](#)

[Refined Architecture Diagram from the Technical Safety Concept](#)

[Software Requirements](#)

[Refined Architecture Diagram](#)

Purpose

The purpose of this document is to derive technical software requirements from technical safety concept. These software requirements are more specific which can be used for software design and implementation. After that, it assign these software requirements to a software architecture.

Inputs to the Software Requirements and Architecture Document


Technical safety requirements

Technical Safety Requirements related to Functional Safety Requirement 01-01 are:

ID	Technical Safety Requirement	ASIL	Fault Tolerant Time Interval	Architecture Allocation	Safe State
Technical Safety Requirement 01	The LDW safety component shall ensure that the amplitude of the 'LDW_Torque_Request' sent to the 'Final electronic power steering Torque' component is below 'Max_Torque_Amplitude.'	C	50 ms	LDW safety block	Deactivate the LDW feature and 'LDW_Torque_Request' shall be set to zero
Technical Safety Requirement 02	The validity and integrity of the data transmission for 'LDW_Torque_Request' shall be ensured.	C	50 ms	Data Transmission Integrity Check	Deactivate the LDW feature and 'LDW_Torque_Request' shall be set to zero
Technical Safety Requirement 03	As soon as the LDW function deactivates the LDW feature, the 'LDW Safety' software block shall send a signal to the car display ECU to turn on a warning light.	C	50 ms	LDW safety block	Deactivate the LDW feature and 'LDW_Torque_Request' shall be set to zero
Technical Safety Requirement 04	As soon as a failure is detected by the LDW function, it shall deactivate the LDW feature and the 'LDW_Torque_Request' shall be set to zero.	C	50 ms	LDW safety block	Deactivate the LDW feature and 'LDW_Torque_Request' shall be set to zero
Technical Safety Requirement	Memory test shall be conducted at start up of the EPS ECU to check for any memory	A	ignition cycle	Data Transmission Integrity Check	Deactivate the LDW feature and 'LDW_Torque

05	problems。				_Request' shall be set to zero
----	-----------	--	--	--	--------------------------------

Refined Architecture Diagram from the Technical Safety Concept

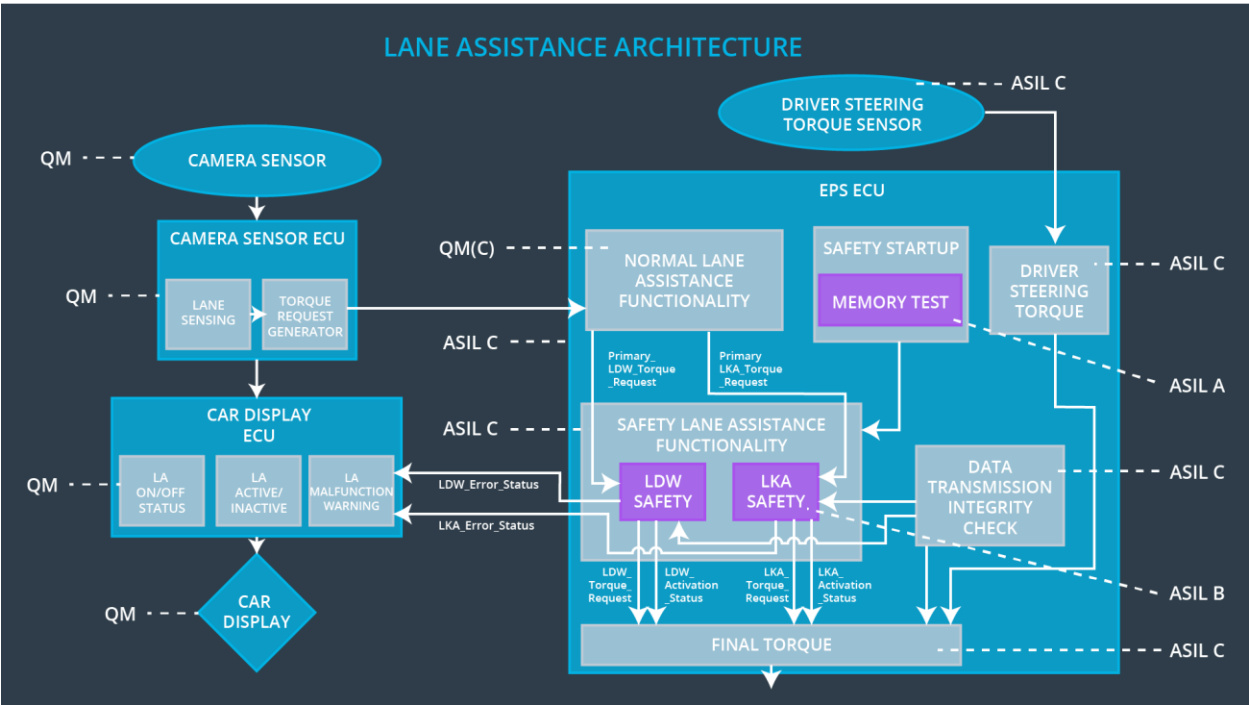

Software Requirements

Lane Departure Warning (LDW) Amplitude Malfunction Software Requirements:

Software Safety Requirements Derived from Technical Safety Requirement 01

ID	Technical Safety Requirement	ASIL	Fault Tolerant Time Interval	Allocation to Architecture	Safe State

Technical Safety Requirement 01	The LDW safety component shall ensure that the amplitude of the LDW_Torque_Request sent to the Final Electronic Power Steering Torque component is below Max_Torque_Amplitude	C	50 ms	LDW safety block	Deactivate the LDW feature and 'LDW_Torque_Request' shall be set to zero
---------------------------------	---	---	-------	------------------	--

ID	Software Safety Requirement	A S I L	Allocation Software Elements	Safe State
Software Safety Requirement 01-01	The input signal "Primary_LDW_Torq_Req" shall be read and pre-processed to determine the torque request coming from the "Basic/Main LAF functionality" SW Component. Signal "processed_LDW_Torq_Req" shall be generated at the end of the processing.	C	LDW_SAFETY_INPUT_PROCESSING	N/A
Software Safety Requirement 01-02	In case the "processed_LDW_Torq_Req" signal has a value greater than "Max_Torque_Amplitude_LDW" (maximum allowed safe torque), the torque signal "limited_LDW_Torq_Req" shall be set to 0, else "limited_LDW_Torq_Req" shall take the value of "processed_LDW_Torq_Req".	C	TORQUE_LIMITER	"limited_LDW_Torq_Req" = 0 (Nm=Newton-meter)
Software Safety Requirement 01-03	The "limited_LDW_Torq_Req" shall be transformed into a signal "LDW_Torq_Req" which is suitable to be transmitted outside of the LDW Safety component ("LDW Safety") to the "Final EPS Torque" component. Also see SofSafReq02-01 and SofSafReq02-02	C	LDW_SAFETY_OUTPUT_GENERATOR	LDW_Torq_Req = 0 (Nm)

Software Safety Requirements Derived from Technical Safety Requirement 02

ID	Technical Safety Requirement	A S I L	Fault Tolerant Time Interval	Allocation to Architecture	Safe State
Technical Safety Requirement 02	The validity and integrity of the data transmission for LDW_Torque_Request signal shall be ensured	C	50 ms	Data Transmission Integrity Check	Deactivate the LDW feature and 'LDW_Torque_Request' shall be set to zero

ID	Software Safety Requirement	A S I L	Allocation Software Elements	Safe State
Software Safety Requirement 02-01	Any data to be transmitted outside of the LDW Safety component ("LDW Safety") including "LDW_Torque_Req" and "activation_status" (see SofSafReq03-02) shall be protected by an End2End(E2E) protection mechanism	C	E2ECalc	LDW_Torq_Req = 0 (Nm)
Software Safety Requirement 02-02	The E2E protection protocol shall contain and attach the control data: alive counter (SQC) and CRC to the data to be transmitted.	C	E2ECalc	LDW_Torq_Req = 0 (Nm)

Software Safety Requirements Derived from Technical Safety Requirement 03

ID	Technical Safety Requirement	A S I L	Fault Tolerant Time Interval	Allocation to Architecture	Safe State
Technical Safety Requirement 03	As soon as a failure is detected by the LDW function, it shall deactivate the LDW feature and the LDW_Torque_Request shall be set to zero	C	50 ms	LDW safety block	Deactivate the LDW feature and 'LDW_Torque_Request' shall be set to zero

ID	Software Safety Requirement	A S I L	Allocation Software Elements	Safe State
Software Safety Requirement 03-01	Each of the SW elements shall output a signal to indicate any error which is detected by the element. Error signal = error_status_input(LDW_SAFETY_INPUT_PROCESSING), error_status_torque_limiter(TORQUE_LIMITER), error_status_output_gen(LDW_SAFETY_OUTPUT_GENERATOR)	C	All	N/A
Software Safety Requirement 03-02	A software element shall evaluate the error status of all the other software elements and in case any 1 of them indicates an error, it shall deactivate the LDW feature ("activation_status"=0)	C	LDW_SAFETY_ACTIVATION	Activation_status = 0 (LDW function deactivated)
Software	In case of no errors from the	C	LDW_SAFETY	N/A

Safety Requirement 03-03	software elements, the status of the LDW feature shall be set to activated ("activation_status"=1)		_ACTIVATION	
Software Safety Requirement 03-04	In case an error is detected by any of the software elements, it shall set the value of its corresponding torque to 0 so that "LDW_Torq_Req" is set to 0	C	All	LDW_Torq_Req = 0
Software Safety Requirement 03-05	Once the LDW functionality has been deactivated, it shall stay deactivated till the time the ignition is switched from off to on again.	C	LDW_SAFETY_ACTIVATION	Activation_status = 0 (LDW function deactivated)

Software Safety Requirements Derived from Technical Safety Requirement 04

ID	Technical Safety Requirement	A S I L	Fault Tolerant Time Interval	Allocation to Architecture	Safe State
Technical Safety Requirement 04	As soon as the LDW function deactivates the LDW feature, the LDW Safety software block shall send a signal to the car display ECU to turn on a warning light	C	50 ms	LDW safety block	Deactivate the LDW feature and 'LDW_Torque_Request' shall be set to zero

ID	Software Safety Requirement	A S I L	Allocation Software Elements	Safe State
Software Safety Requirement 04-01	When the LDW function is deactivated (activation_status set to 0), the activation_status shall be sent to the car display ECU.	C	LDW_SAFETY_ACTIVATION, CarDisplay ECU	N/A

Software Safety Requirements Derived from Technical Safety Requirement 05

ID	Technical Safety Requirement	A S I L	Fault Tolerant Time Interval	Allocation to Architecture	Safe State
Technical Safety Requirement 05	Memory test shall be conducted at start up of the EPS ECU to check for any faults in memory	A	ignition cycle	Data Transmission Integrity Check	Deactivate the LDW feature and 'LDW_Torque_Request' shall be set to zero

ID	Software Safety Requirement	A S I L	Allocation Software Elements	Safe State
Software Safety Requirement 05-01	A CRC verification check over the software code in the Flash memory shall be done every time the ignition is switched from off to on to check for any corruption of content.	A	MEMORYTEST	Activation_status = 0
Software Safety Requirement 05-02	Standard RAM tests to check the data bus, address bus and device integrity shall be done every time the ignition is switched from off to on (E.g.walking 1s test, RAM pattern test. Refer RAM and processor vendor recommendations)	A	MEMORYTEST	Activation_status = 0
Software Safety Requirement 05-03	The test result of the RAM or Flash memory shall be indicated to the LDW_Safety component via the "test_status" signal	A	MEMORYTEST	Activation_status = 0
Software Safety Requirement 05-04	In case any fault is indicated via the "test_status" signal the INPUT_LDW_PROCESSING shall set an error on	A	LDW_SAFETY_INPUT_PROCESSING	Activation_status = 0

	error_status_input (=1) so that the LDW functionality is deactivated and the LDWTorque is set to 0			
--	--	--	--	--

Refined Architecture Diagram

