

**HEATING, VENTILATION & AIR CONDITIONING :**

(if installed)

**A. Temperature Control Knob :**

The air temperature in the car can be controlled by operating the temperature control knob (A) at the left hand side of the control panel. The temperature can be increased by rotating the knob towards the red segment and decreased by rotating it towards the blue segment.






**B. Blower Speed Regulation Knob :**

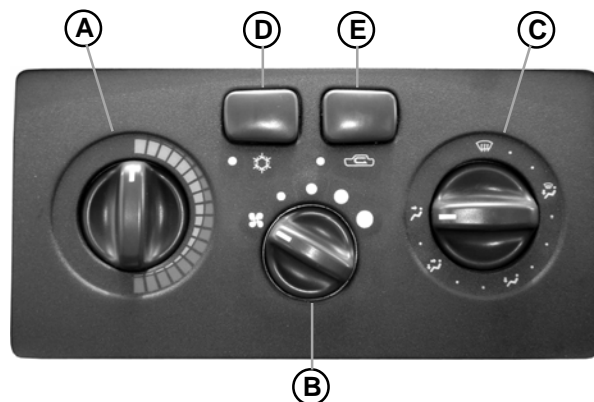
The ventilation system has a three/four speed blower. The blower speeds can be regulated to any one of the following speeds by operating the knob (B) at the centre of the control panel.

- LOW • MEDIUM • HIGH • VERY HIGH

**C. Air Direction Control Knob :**

The air flow can be changed by turning the switch (C) to the desired direction.

	Towards face
	Towards face and feet
	Towards feet
	Towards feet and windshield ( Recommended for clearing fogging on windshield)
	Air demist / defrost windshield (Recommended for clearing heavy fog and snow)

**H.V.A.C. Controls**

- A. Temperature Control Knob
- B. Blower Speed Regulation Knob
- C. Air Direction Control Knob
- D. AC ON / OFF Switch
- E. Air Circulation Switch