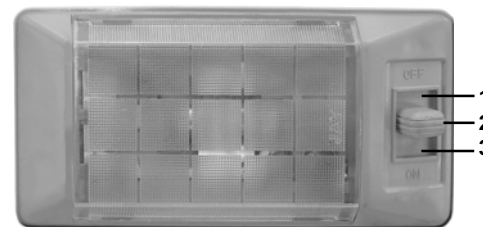


Interior Lamps :

Two interior lamps are provided for convenience. While one lamp is situated near the inside rear view mirror (IRVM), the other is located just above the passenger compartment. The individual 'ON / OFF' switches are provided to operate these lamps.

Lamp positions Interior Roof lamp

POSITION	FUNCTION
II	The lamp will remain ON at all times irrespective of whether any of the doors is open
I	The lamp will come 'ON' only when any of the five doors are opened (For GX version)
	In this mode, the lamp will come ON only when driver's door is opened (For EX version)
0	The lamp will remain 'OFF' irrespective of whether any of the five doors are opened

*Rooflamp*

1. Lamp off
2. Door control mode
3. Lamp on