


- Main Odometer (Non- resettable) - Counts up to 999999 kms
- Trip meter A (Resettable) - Counts up to 1999.9 kms
- Trip meter B (Resettable) - Counts up to 1999.9 kms
- Intensity level of instrument panel illumination - Selection among preset levels.

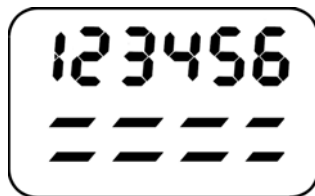

Intensity Level Indicator

LCD has two line display. The first line displays the Odometer count.

The second line displays either of Trip meter A, Trip meter B, Intensity level of panel illumination. The selection and control of functions are done through 'MODE' and 'SET' push buttons (knobs) provided on either side of the LCD. The 'MODE' knob is used to select one of the Trip meter A, Trip meter B OR Intensity level of panel illumination. Switching among the above three functions can be done by pressing the knob.

The 'SET' knob is used to control the chosen function. Pressing the knob for a few seconds resets the chosen trip meter and varies the intensity level of instrument panel illumination.

The panel illumination intensity varies among preset levels as follows:

= Min

= = = Max

This display returns to Trip meter A after a few seconds of intensity level selection, if left in this mode.

NOTICE

Main odometer and trip meter 'A' indication will remain on display even if the ignition key is removed.