

Bonnet opening and closing :

To open pull lever (1). This will release the bonnet lock. To open fully, lift the additional lock lever located on the bonnet centre with the help of finger. Use the bonnet stay rod to keep the bonnet open.

For closing the bonnet, disengage the stay rod, clamp it properly and press down the bonnet till it is fully shut.

Ensure that the bonnet is fully locked before driving off.


In case of failure of cable attached to lever (1) bonnet lock can be opened by inserting a screw driver from the top centre position of grill through a slot provided behind it on the sheet metal and by pressing the lock plate towards your left. Push upward the additional lock lever at your right and lift the bonnet while the lock plate is kept pressed with the help of screw driver.

Fuel filling Cap :

The fuel filling cap is located at the rear on the left hand side of the vehicle. The fuel filler lid can be opened by using a cable operated lever located on the right of the driver's seat. Simply push the lid back to its original position to lock it.

NOTICE

This feature is available only in few versions.

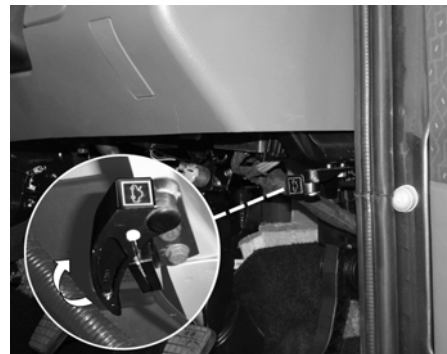

Bonnet Opening Lever



Fuel Lid Opening Lever