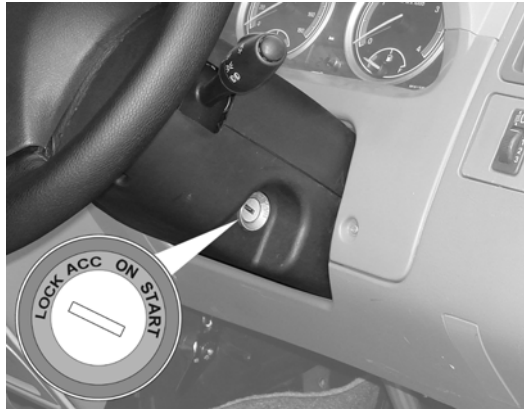


Steering lock cum ignition switch :

Steering Lock Cum Ignition Switch

Steering is provided with steering lock cum ignition switch

- To lock steering while parking the vehicle as safety against theft.
- To start and stop the engine.
- To switch 'ON' and 'OFF' the electrical system other than listed below.

Horn, parking lamps, engine inspection lamp and hazard warning indicators are not connected through this switch and operate independently.

- To switch on and off the accessories only.

The switch is located on the steering column support and has the following key positions:

LOCK

Key can be inserted or taken out only in this position. Steering gets locked only after the key is withdrawn from the switch.

After withdrawing the key from the switch ensure that steering is locked by turning steering wheel clockwise and anticlockwise. To unlock the steering, insert the key into the switch and turn it clockwise. If any difficulty arises in unlocking turn the steering wheel a little clockwise or anticlockwise while turning the key.

ACC

By turning the key to 'ACC' position power supply to accessories is switched 'ON'.