

Spare Wheel


Spare wheel is mounted below the cab at rear.

Fitment of spare wheel :

1. Place the spare wheel on ground below its location with outer side of the wheel rim facing upwards.
2. Locate the retaining plate in the central hole of spare wheel.
3. Using the wheel spanner the spare wheel can be raised by rotating the wheel winch screw in anticlockwise direction.
4. Align one of the wheel mounting screw hole with the locating pin on frame while raising the spare wheel.
5. Continue to rotate the wheel winch screw in anticlockwise direction until spare wheel is raised completely.



Spare wheel

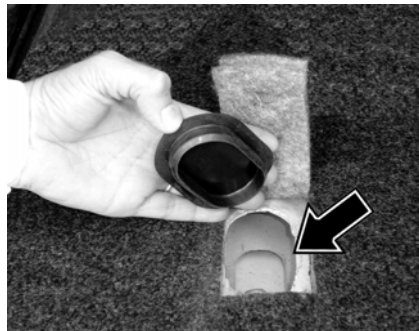

Spare wheel winch grommet



Loosening/Tightening of wheel winch screw



Spare Wheel Retaininmg Plate