

Door Locking

The front doors can be locked and unlocked from the outside with the key or from the inside using the door lock lever. In your vehicle, the driver's door & co-driver's door (if provided) have separate locking facilities. To lock from inside turn the lever (2) towards the inner hinged handle (3).


Where the central locking system is provided, if you lock/unlock the driver door with the key, the remaining three doors get locked/unlocked at a time. The tail gate door is not part of the central locking provision.

To open the door from the outside use the swing handle (1). After unlocking the door with the key, pull the swing handle upward. The swing handles are provided on each door.

To open the door from the inside pull hinged handle outward.

Manual window winding

For raising and lowering window glasses use handle (1)

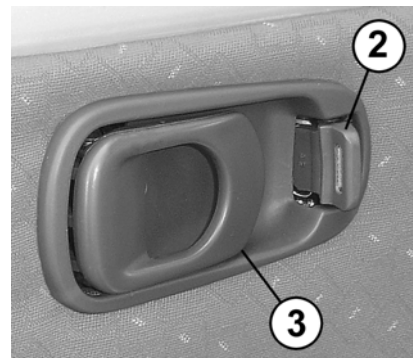

2. Locking / Unlocking Lever
3. Hinged Handle



4. Window winding Lever