

Gear shift lever :

The different gear positions are marked on the knob. The 5 th gear (an overdrive) has been provided to obtain better fuel economy while driving on highways.




Gear Shift Lever

Parking brake lever :

The parking brake is mounted on floor console between driver's seat and co-driver's seat.

To apply the parking brake, pull lever UP. To release it, pull the lever up slightly, press the release button and push the lever DOWN.

Ensure parking brake is released before driving the vehicle. Indication is given on instrument cluster.

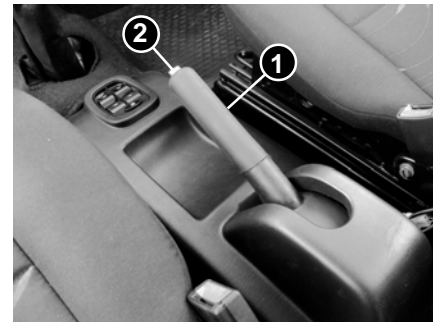

1. Parking Brake Lever
2. Release Button