


Outer Rear view mirrors

Outer rear view mirror is fitted on the driver's door from the outside. It can be adjusted to the desired positions by hand. In few versions it can be adjusted by the lever provided inside the door. The mirror can be folded backwards for convenience when the vehicle is to be driven through narrow passages. In few versions, the same rear view mirror is also provided on co-driver's door.

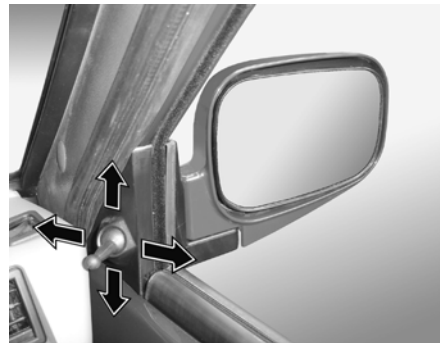


Outside Rear View Mirror

Inner Rear view mirror

Inner rear view mirror is also fitted inside the cab between sun visors. In few versions an additional adjustable anti-glare rear view mirror is provided inside the cab. Provision has been made for two positions.

1. Normal position
2. Anti-glare position

Use anti-glare position only if necessary as it reduces the rear view clarity considerably.

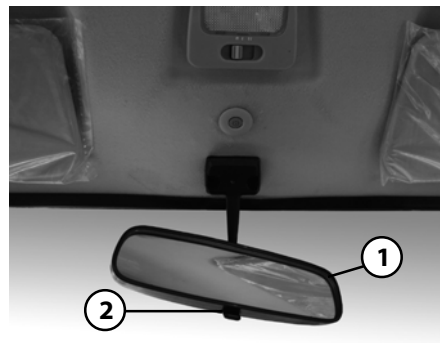

1. Inner rear view mirror
2. Operating Knob