

SEAT BELT

The vehicle has been fitted with three point belt for extra safety for driver, co-driver and passengers on middle seat. If not fastened, with key in 'IGN' position, audio alarm (only for GX) and visual indication is given on instrument panel.

Fastening the belt

Insert belt tongue into buckle, a positive locking 'click' indicates correct and safe assembly.

Releasing the belt

Press the release button, the tongue will be ejected clear of the locking mechanism within the buckle.

Belt adjustment

When the vehicle is at rest, adjust the length of the belt to suit convenience. Insert belt tongue in buckle. A positive click indicates correct assembly.

Adjust length of the belt to suit you and fasten. The lap section should be comfortably tight, the diagonal sections should be adjusted so that a flat hand will pass between the chest and the strap.

To tighten (shorten) the belt.


Pull free end of webbing through adjuster until required adjustment is achieved.

To loosen (lengthen) the belt.

Tilt the adjuster by means of the grip and slide it along the strap until suitably adjusted.



1. Seat Belt 2. Tongue
3. Lock Buckle 4. Lap Belt

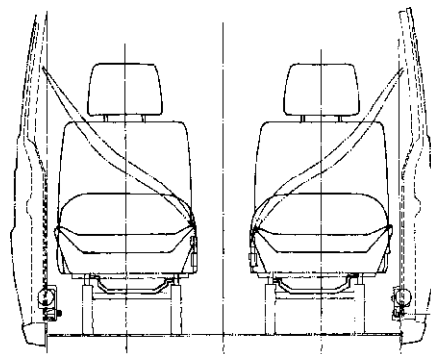

Seat-belt Arrangement on Driver
& Co-driver's Seat