



1. Brake Fluid Container 2. Clutch Fluid Container 3. Power Steering Container

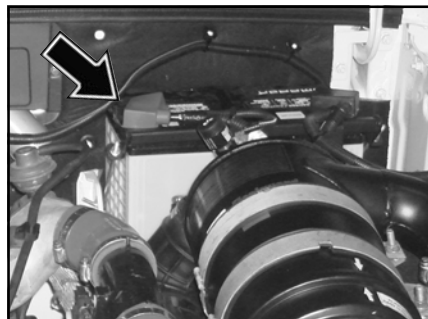

Battery (CR-4)

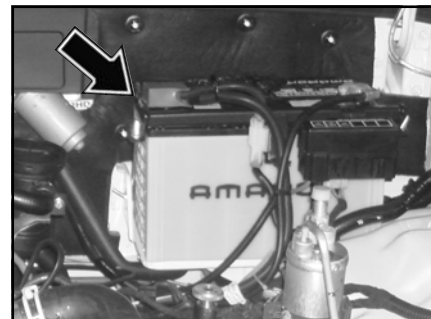

Battery (4SPTC)

NOTICE

Always use genuine radiator cap only of 1.0 kg / cm² (14 psi), if required to be replaced.

4. **Ensure battery electrolyte** level is 10-12 mm above top of battery plates. Top up with distilled water if required (NOT ACID). Keep battery terminals clean and tight. Apply petroleum jelly / vaseline on terminals for protection against corrosion. Secure covers provided over terminals.

5. **Check all lights, horn, gauges, switches and wiper for proper functioning.**
6. **Check condition and tension of fan belt. Adjust** tension if necessary.
7. **Check leakages of coolant, fuel and oil at all joints of hoses and pipes and rectify, if any.** If coolant leakages is noticed, rectify the leakages and top up radiator also with recommended coolant.

8. Check level of brake fluid in plastic container. Top up if necessary. **Do not overfill.**

Use only genuine company branded brake fluid.

9. **Check level of clutch fluid** in plastic container. Top up if necessary. Do not overfill as this would result in spillage during clutch operation.

Use only genuine company branded clutch fluid.