


**Fan belt tension adjustment**

Check the conditions of belts on the engine. Examine the edge of the belt for cracks or fraying.

Check the tension of the belt by pushing on it with your thumb for A.C. compressor belt and Alternator / Power Steering belt as shown in figure.

The belts should have deflection of 8 to 10 mm.

If the belt tension is not proper, get it attended at the nearest Authorised service outlet.

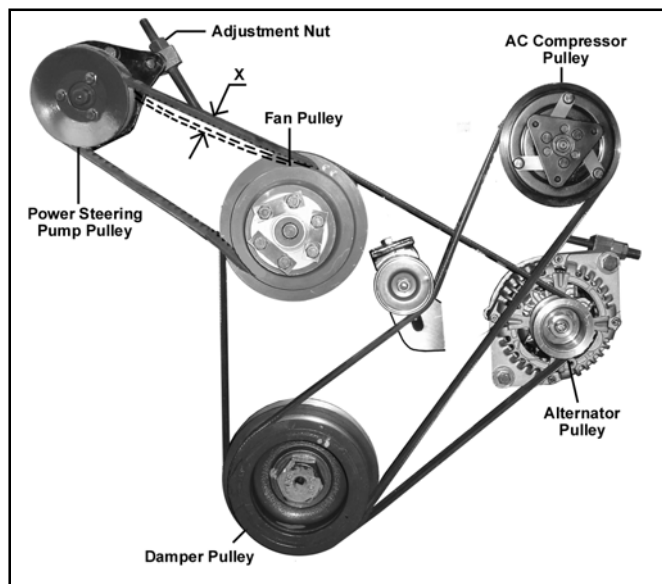

*Belt Arrangement - Engine with AC compressor and power steering pump*