

**Brake adjustment**

The front wheels are fitted with disc brake and rear wheels are fitted with drum brakes. Both these brakes are self-adjusting, therefore need no adjustment. In case you find brake pedal going down excessively while applying the brake, please contact our authorised service outlet.


**Adjustment of parking brake :**

Ensure that all four rear brake shoes have been properly adjusted.

1. Put chocks on front wheels.
2. Jack up the rear axle.
3. Loosen check nut (2) . Pull parking brake lever upto second notch.
4. Tighten the parking brake adjustment nut (1) till rear wheels start jamming and cannot be rotated.
5. Release the parking brake and ensure that wheels are rotating freely., then tighten check nut (2). Operate parking brake a few times to ensure proper operation.

***ENSURE THAT ON RELEASING THE PARKING BRAKE BOTH REAR WHEELS ARE FREE .***

6. Lower down the rear axle.
7. Remove chocks from front wheels.

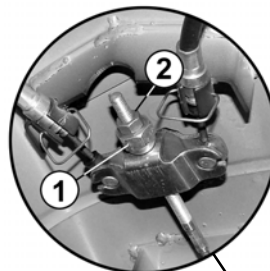

1. Parking Brake Adjustment Nut  
2. Check Nut