



Jack location at front

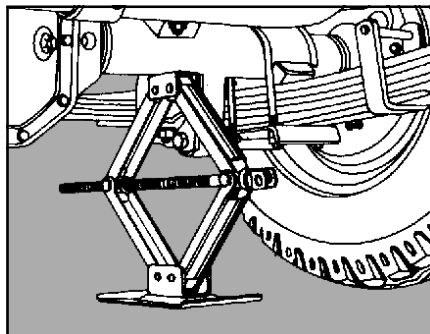

Jack location at rear

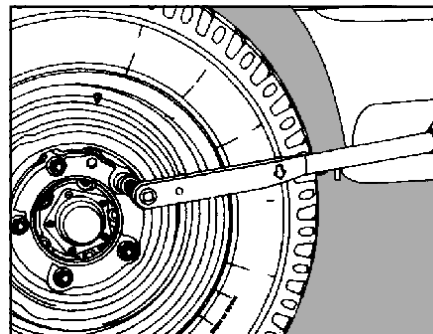

Tightening wheel nuts

Wheels and tyres

Always use only recommended size wheel rims and tyres. Use of rims and tyres not recommended by us may have adverse effect on vehicle safety and further more could infringe on motor vehicle regulations.

Wheel change

When changing wheels use the jack provided with the vehicle.

Jack should be placed below chassis long member behind front wheel for changing front tyres and before rear wheel as shown.

Wheel alignment

If uneven tyre wear is noticed, get the vehicle examine and

attended by **TATA MOTORS** authorised workshop. Periodically check and maintain correct tyre pressure to obtain longer tyre life.

Recommended tyre pressures : (with cold tyres)

For 215/75 R15 LT Tyres (CR-4) Tubeless

At	For Ride	For Fuel Economy
Front/Rear	32 psi	35 psi

For 215/75 R15 LT Tyres (4SPTC):

At	For Ride	For Fuel Economy
Front/Rear	32 psi	35 psi