

OA0-72A FOR USE WITH DS-8200

Mounting ETCO2 Module OR External Output Box

Connecting the Gas Unit I/F (HPD-810)

CO₂ Gas Unit (HCP-810)

⚠ WARNING

- When lifting this equipment with the Base Unit and HS Adapter attached, hold the bottom part of the Base Unit.

NOTE

- To connect the gas unit, Gas Unit/External Output Box Mounting Bracket (OA0-72A) is required. For details of the connection procedure, refer to the OA0-72A Assembly Instruction.


1 Connect the Gas Unit I/F or CO₂ Gas Unit to the HS Adapter.

NOTE

- Make sure that the power of DS-8200 system is turned OFF when connecting/disconnecting the cable.
- To connect the HPD-810 and HCP-810, use the AUX connection cable (CJO-15RR0.65). If the connection is not secure, contact failure may occur.

- Attach the OA0-72A to the groove on the side of the gas unit (or the external output box) and fix it to the HS Adapter (HSB-80) using the screws (2 locations).


- 1 HS Adapter (HSB-80)
- 2 Gas Unit (HPD-810, HCP-810)
- 3 Gas Unit / External Output Box Mounting Bracket (OA0-72A)
- 4 Screw

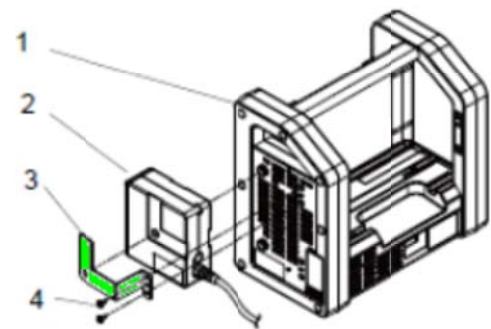

2 Attach the cable cover.

1 Disassemble the cable cover.

- 1 Cable Cover (Front)
- 2 Cable Cover (Back)

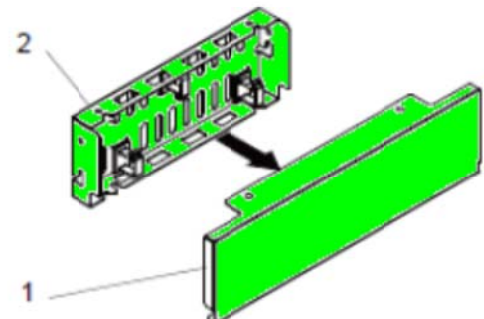


OAO-72A FOR USE WITH DS-8200

Mounting ETCO2 Module OR External Output Box


- 2** Attach the cable cover (rear) to the HS Adapter (HSB-80) using the screws (2 locations).

- 1 HS Adapter (HSB-80)
- 2 Cable Cover (Back)
- 3 Screw

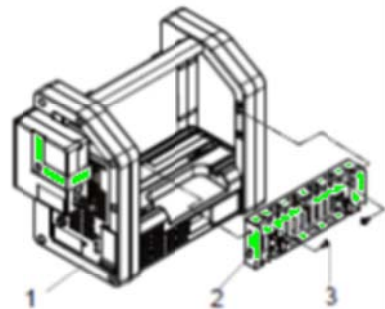


- 3** Connect the cable of Gas Unit I/F or CO₂ Gas Unit to the Super Unit (HS-8000).

- 1 Super Unit (HS-8000)
- 2 Cables

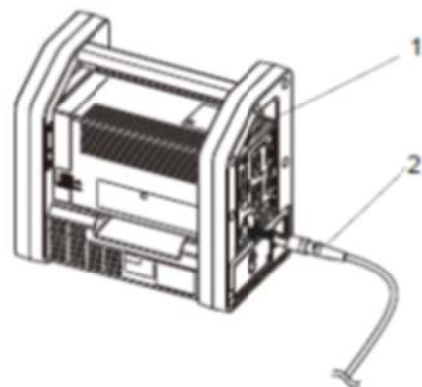

- 4** Secure the cable(s) with the cable clamps (3 locations) in the cable cover (rear).

- 1 Cable Cover (Back)
- 2 HS Adapter (HSB-80)
- 3 Cable Clamp
- 4 Cables

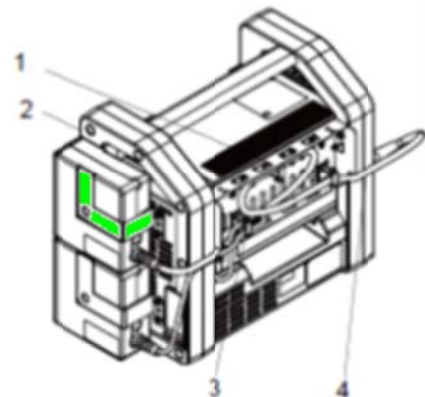

- 5** Attach the cable cover (front).

- 1 Gas Unit (HPD-810, HCP-810)
- 2 Cable Cover (Front)

