

## Instructions with immediate alarm

### IN CASE OF FIRE ALARM

Red "FIRE" indications and steady buzzer

1

Silence the buzzer

2


Identify the zone in alarm

3

FIND THE ORIGIN OF THE ALARM IN THE BUILDING

4

Check the presence of a fire

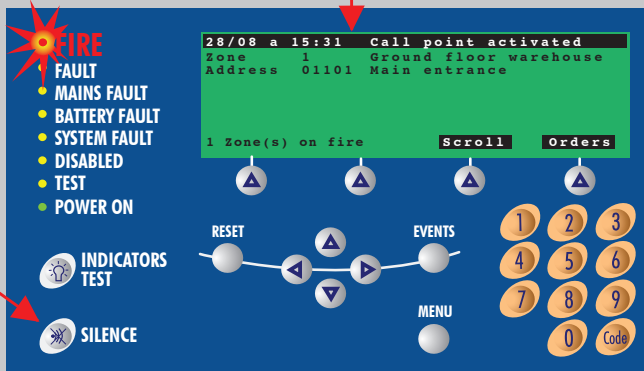


in case of real fire,  
and if signals are not activated

Press 3 seconds on the button  
**EVACUATION**

and apply the building  
safety instructions

in case of no fire

Wait for minutes until  
the automatic stop  
of the alarm signal.  
Suppress the origin  
of activation.  
Reset the panel.

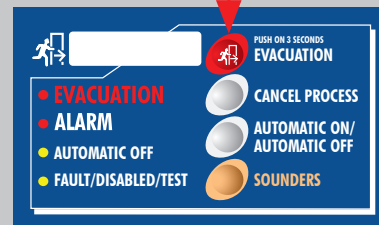

### IN CASE OF FAULT

Yellow indicator(s) on and intermittent buzzer

1


Silence the buzzer

2

Identify other  
yellow indicators  
which can be  
switched on

3

Suppress  
the origin  
of the fault and  
reset the panel

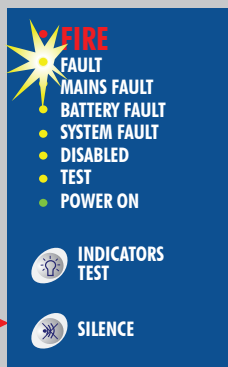

**Nota :** in case of main fault or battery fault, the fault is automatically reset when the mains fault or the battery fault no longer exist.

### TO REARM THE PANEL

1

Suppress  
the origin  
of fire or fault

2


Enter a code  
to access  
to level 2

3

Press on the  
"Reset" button

4

Select  
Fire or Fault  
and confirm

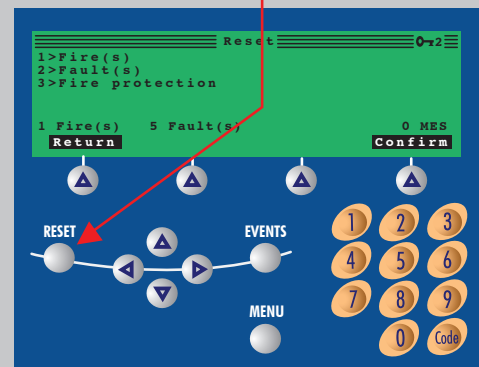

If the fire alarm or fault can't be reset, check the operating instructions or contact the technical support.

## Instructions with delayed alarm

### IN CASE OF FIRE ALARM

Red "FIRE" indications and steady buzzer

1

Silence the buzzer

2


Identify the zone in alarm

3

FIND THE ORIGIN OF THE ALARM IN THE BUILDING

4

Check the presence of a fire

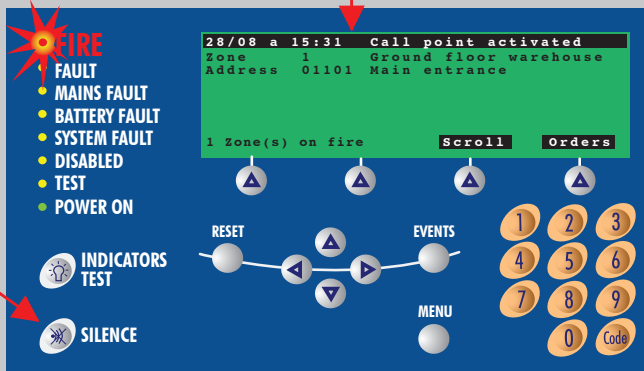

in case of real fire

Press 3 seconds on the button


EVACUATION

and apply the building safety instructions

in case of no fire and before the alarm signal\* activation

Stop the alarm process :

- enter a code to access to level 2
- press on the "Cancel Process" button

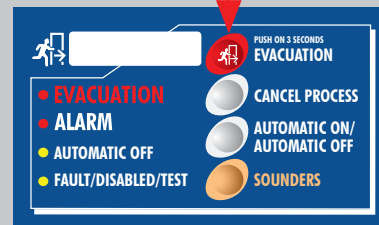

\* The alarm automatically stop after 5 minutes minimum of activation

### IN CASE OF FAULT

Yellow indicator(s) on and intermittent buzzer

1


Silence the buzzer

2

Identify other yellow indicators which can be switched on

3

Suppress the origin of the fault and reset the panel

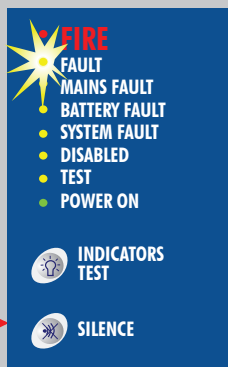

**Nota :** in case of main fault or battery fault, the fault is automatically reset when the mains fault or the battery fault no longer exist.

### TO REARM THE PANEL

1

Suppress the origin of fire or fault

2


Enter a code to access to level 2

3

Press on the "Reset" button

4

Select Fire or Fault and confirm

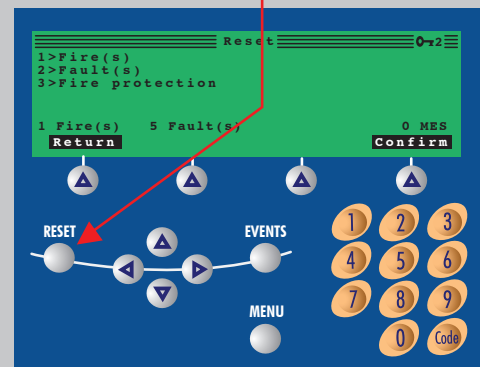

If the fire alarm or fault can't be reset, check the operating instructions or contact the technical support.