

IN CASE OF FIRE ALARM

Red "FIRE" indication on an steady buzzer

1

Mute the buzzer

2


Identify the zone(s) in alarm

3

FIND THE ORIGIN OF THE ALARM IN THE BUILDING

4

Check the presence of fire

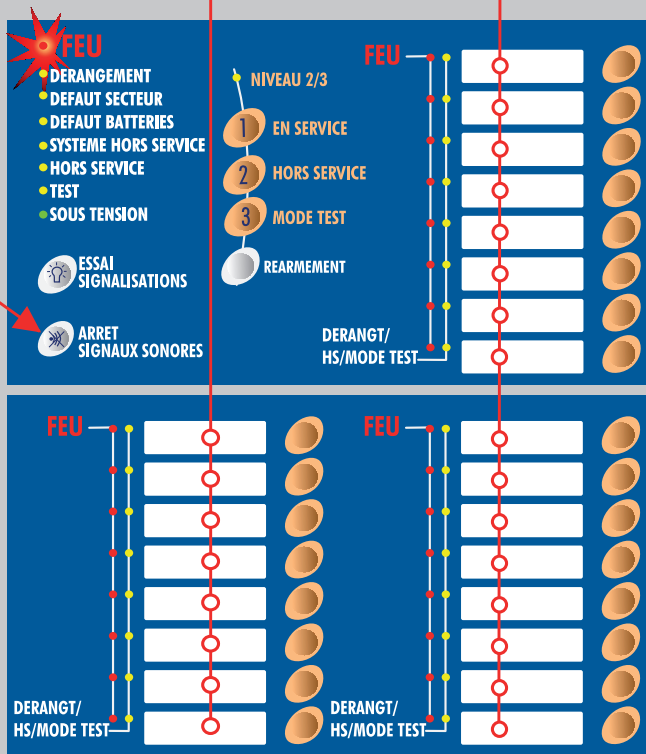

in case of real fire if the evacuation signal is not activated

Press 3 second on the


COMMANDE ÉVACUATION button, and apply the safety instructions for the building

in absence of fire

wait 5 minutes for the stop of the evacuation signal

Remove the origin of the command

Reset the panel

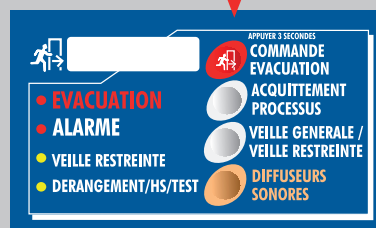

IN CASE OF FAULT

Yellow indicator(s) on and intermittent buzzer

1

Mute the buzzer

2

Identify others yellow indicators which can be ON

3

Suppress the origin of the fault and reset the panel



Nota : in case of main fault or battery fault, the fault is automatically reset when the mains fault or the battery fault no longer exist.

TO RESET THE PANEL

1

Suppress the origin of fire or fault

2

Enter a code to access to level 2

3

Press on "REARMEMENT" button



If the fire alarm or fault can't be reset, check the operating instructions or contact the technical support.

IN CASE OF FIRE ALARM

Red "FIRE" indication on an steady buzzer

1

Mute the buzzer

2


Identify the zone(s) in alarm

3

FIND THE ORIGIN OF THE ALARM IN THE BUILDING

4

Check the presence of fire

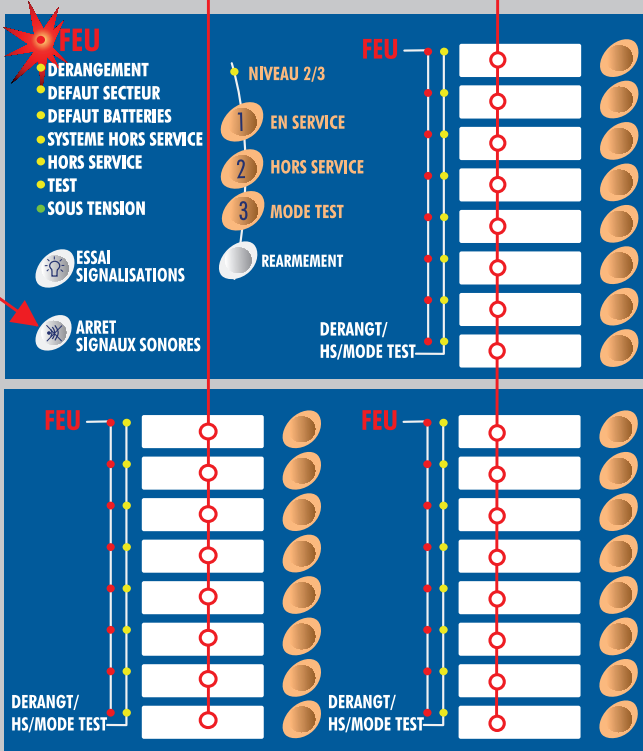


in case of real fire

Press 3 second on the **COMMANDE ÉVACUATION** button, and apply the safety instructions for the building

in absence of fire and before the activation of the evacuation signal*

Stop the evacuation process :

- Enter a code to access to level 2
- Push on the **ACQUITTEMENT PROCESSUS** command

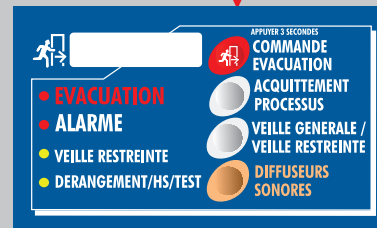

* The evacuation signal automatically stop after 5 minutes

IN CASE OF FAULT

Yellow indicator(s) on and intermittent buzzer

1


Mute the buzzer

2

Identify others yellow indicators which can be ON

3

Suppress the origin of the fault and reset the panel

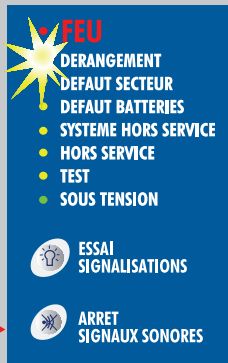

Nota : in case of main fault or battery fault, the fault is automatically reset when the mains fault or the battery fault no longer exist.

TO RESET THE PANEL

1

Suppress the origin of fire or fault

2

Enter a code to access to level 2

3

Press on "REARMEMENT" button



If the fire alarm or fault can't be reset, check the operating instructions or contact the technical support.