

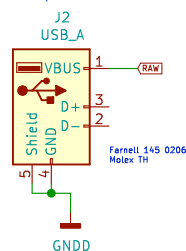






5V In from portable PowerPack

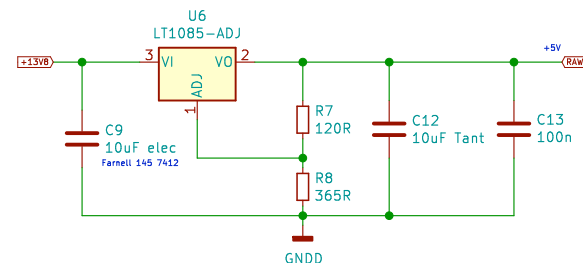

External +5V If not powered from USB



Before fitting the Teensy module, disconnect Mini USB supply.
See link for full details:
https://www.pjrc.com/teensy/external_power.html

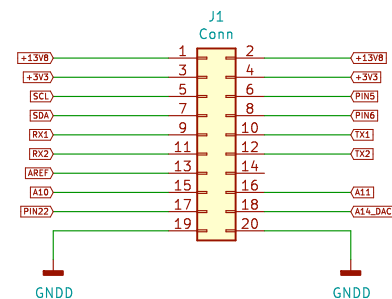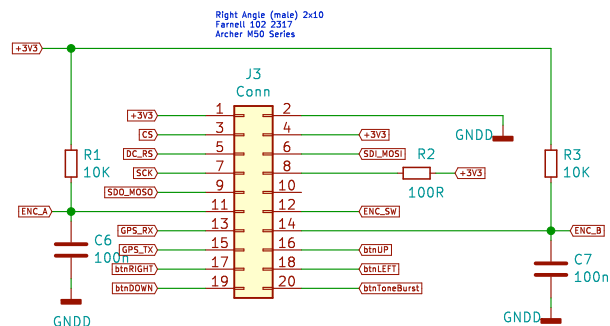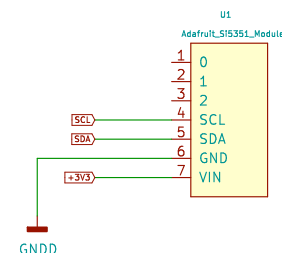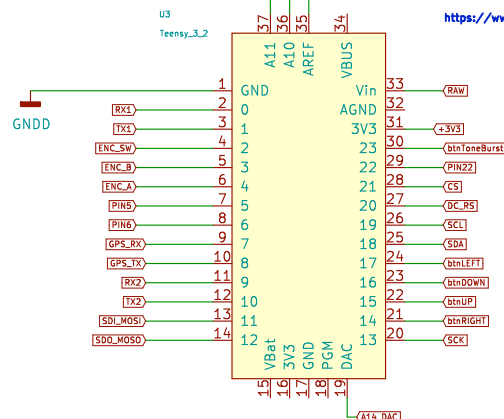

Copyright (C) K Wheatley 2020
This documentation describes Open Hardware and is licensed under the CERN OHL v.1.2.
You may redistribute and modify this documentation under the terms of the CERN OHL v.1.2.
(<http://ohwr.org/cernohl>).
This documentation is distributed WITHOUT ANY EXPRESS OR IMPLIED WARRANTY,
INCLUDING OF MERCHANTABILITY, SATISFACTORY QUALITY AND FITNESS FOR A PARTICULAR PURPOSE.
Please see the CERN OHL v.1.2 for applicable conditions.

Sheet: /
File: Simple_VFO.sch

Title: Simple VFO

Size: A4 Date: 5 April 2020

KiCad E.D.A. kicad (5.1.4-0)

Rev: V1.0

Id: 1/1