



Register Screen

23:19

Surname

First name

Address

Email address

Password

Confirm password

☒ Accept AGB

< Back

Submit >

We can also choose a radiobutton or a checkbox

23:19

Question one:

☐ not selected

☒ selected

☐ indeterminate

☐ disabled

Question two:

☐ selected


☐ not selected

☒ selected

☐ not selected

< Back

Submit >

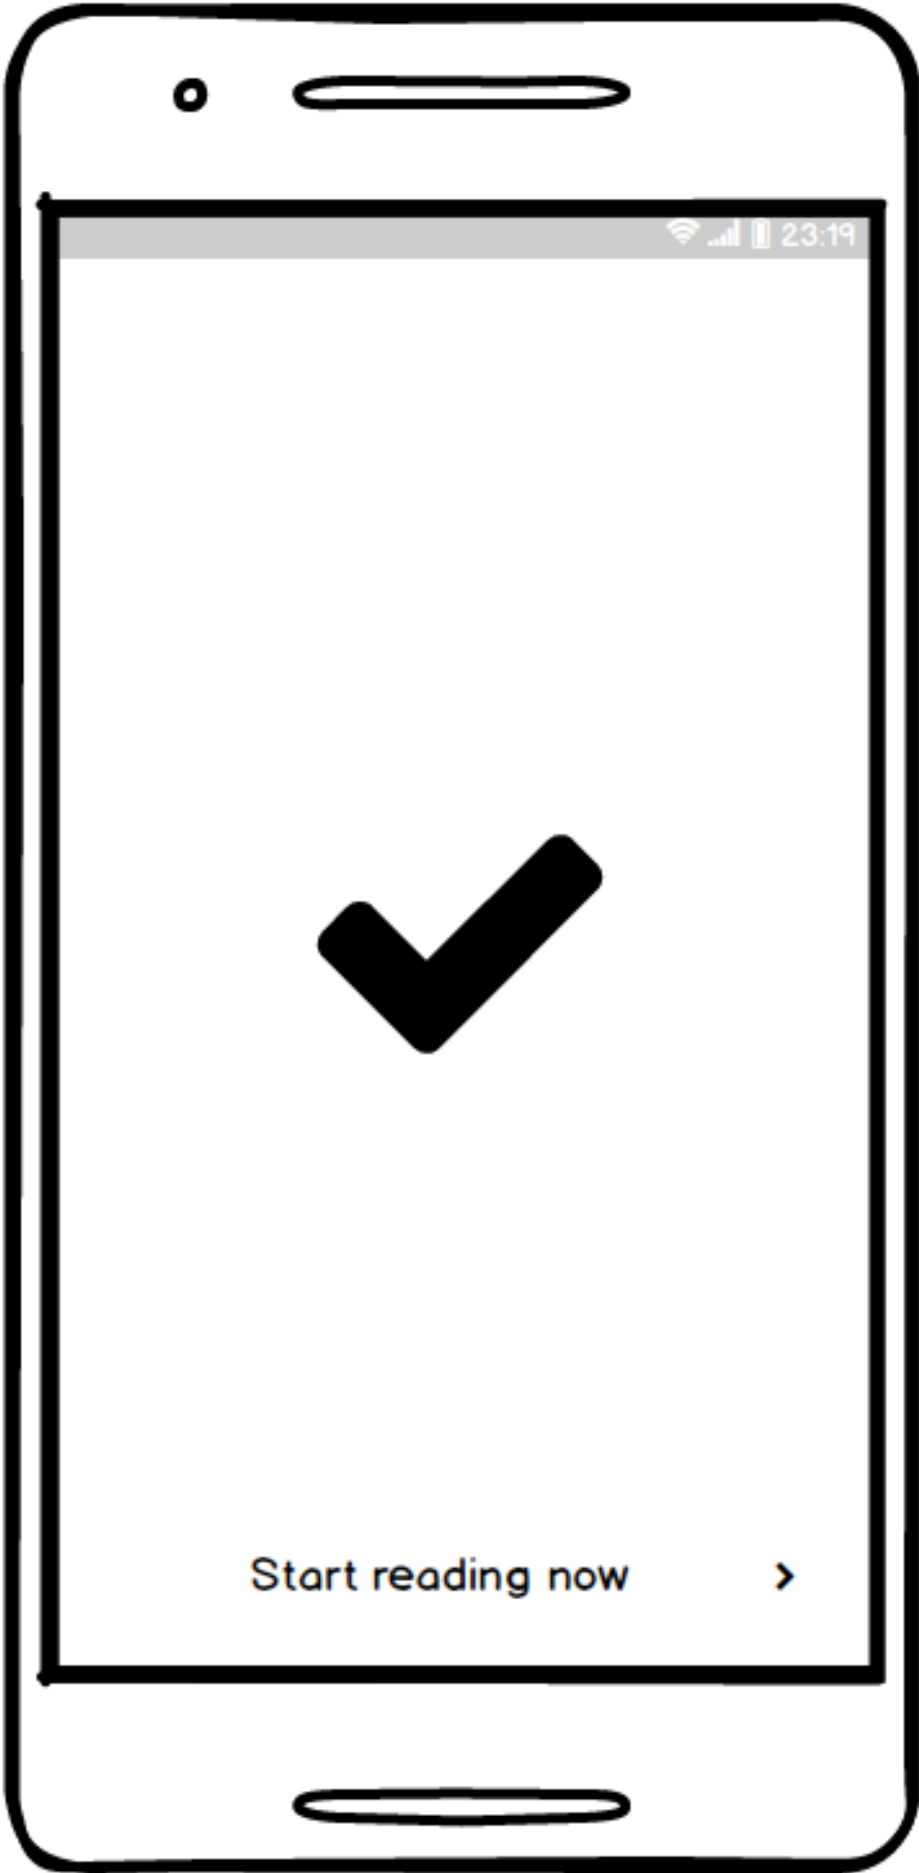

Login Screen

23:19

Username

Password

< Back

Submit >

Login Screen falsche Usereingabe

A hand-drawn sketch of a mobile phone screen displaying a login interface. At the top, there is a status bar with a Wi-Fi icon, a cellular signal icon, a battery icon, and the time 23:19. Below the status bar, a grey rounded rectangle contains the error message "Falscher Username oder Passwort". Underneath this, there are two input fields: "Username" and "Password", each followed by a rectangular text box. Below the "Password" field is a blue underlined link that says "Passwort anfordern". At the bottom of the screen, there are two buttons: "Back" with a left-pointing chevron to its left, and "Submit" with a right-pointing chevron to its right.

23:19

Falscher Username oder Passwort

Username

Password

[Passwort anfordern](#)

< Back Submit >

