

## FBWF System Console Using Instruction V1.1

**FBWF System Console** is used to protect the Windows system files from being defected & avoid blue screen problem and network error & protect the Windows system.

1. After you install the new Windows XP, FBWF system console would be on as default.
  2. When you would like to install a printer driver or change the resolution of the LCD screen, first you need to close FBWF system console, and then restart the instrument to install a printer driver or change the resolution of the LCD screen.
  3. Please check the following procedure to close FBWF system console & restart the instrument.
- (1). Double click the icon of FBWF system console as figure 1

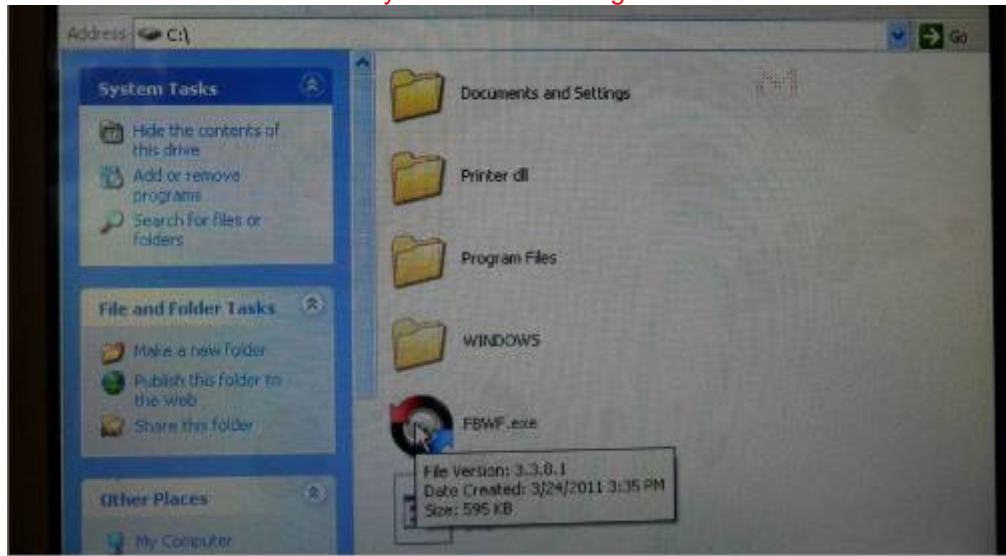


Figure 1

- (2). Input the password "1008" & click the "OK" button as figure 2, and then you will find figure 3 showed on the instrument.


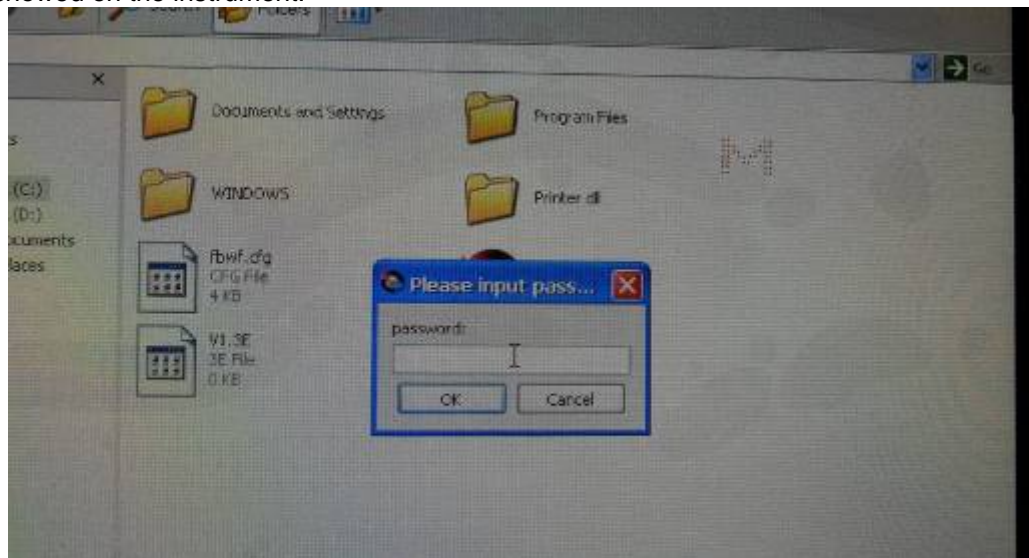



Figure 2

- (3). Click the button as figure 3 to close FBWF system console, and then the instrument will remind you that you need to restart the instrument as figure 4. You need to click "OK" as figure 4 & click the button as figure 5 to restart the instrument. After you restart the instrument, you can install a printer driver or change the resolution of the LCD screen.

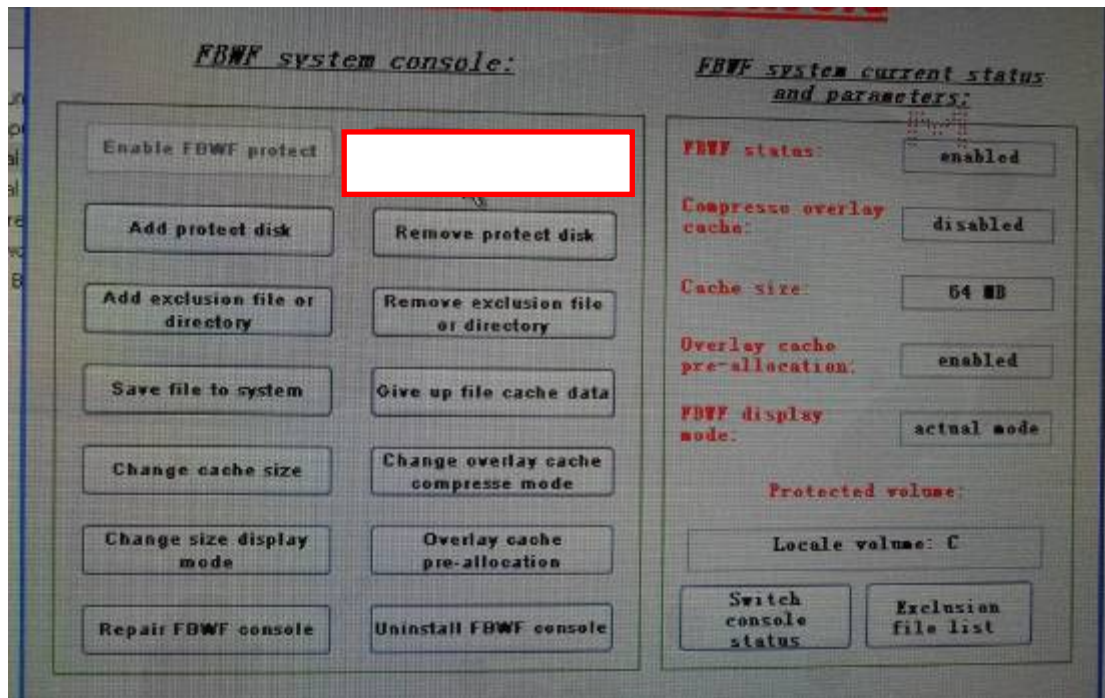

Click this button

Figure 3

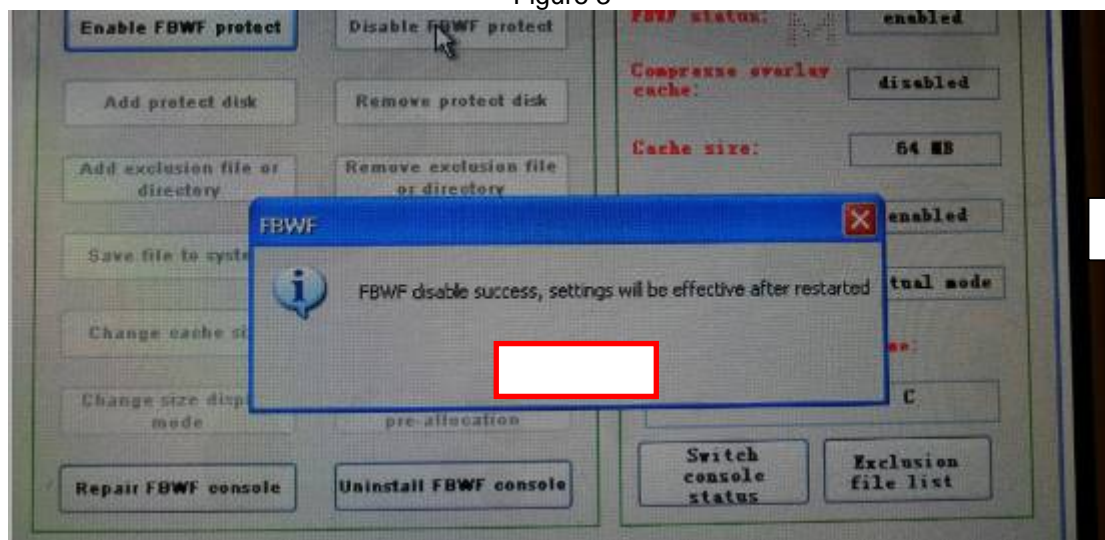

Click "OK"

Figure 4

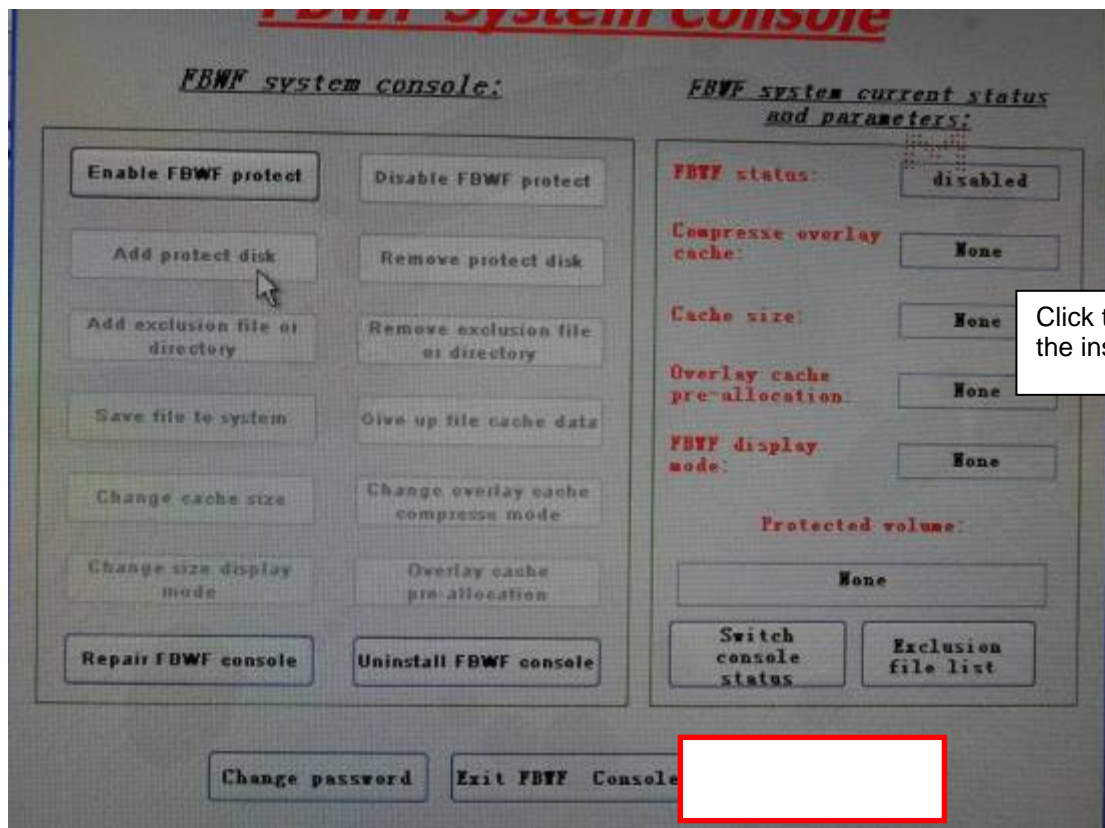


Figure 5

4. After you install a printer driver or change the resolution of the LCD screen, please check the following procedures to open FBWF system console again.
  - (1). Please click the button as figure 6, and then the instrument will remind you that you need to restart the instrument as figure 7.

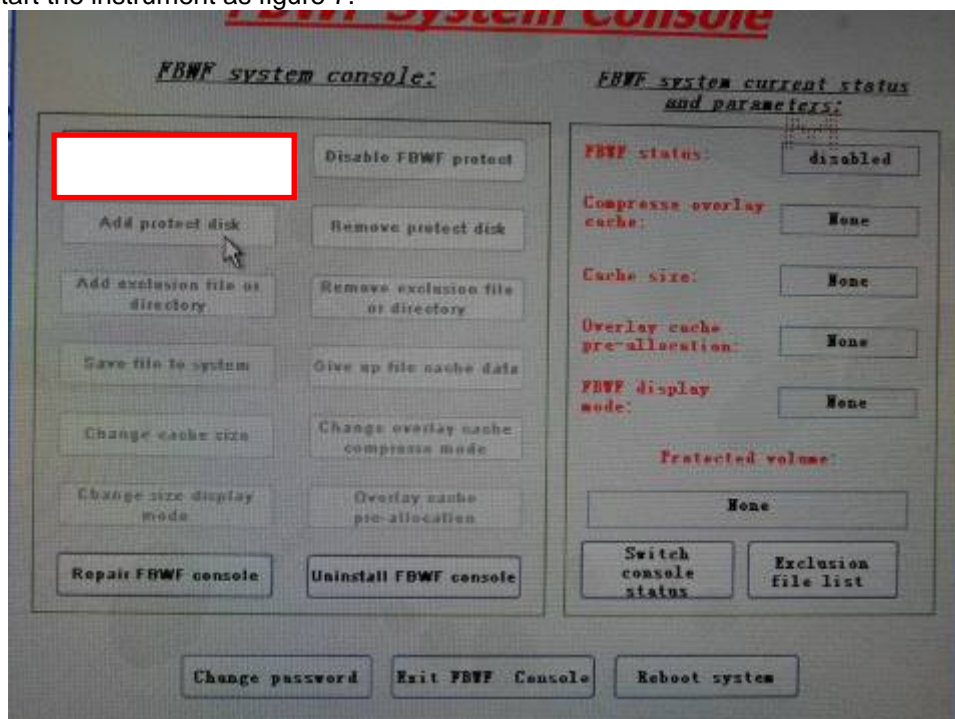


Figure 6



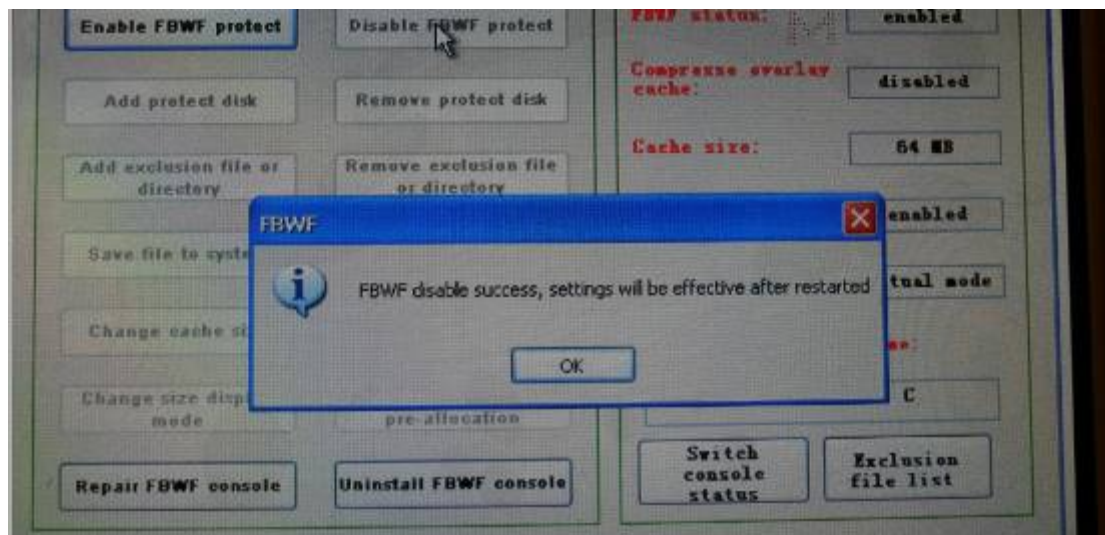


Figure 7

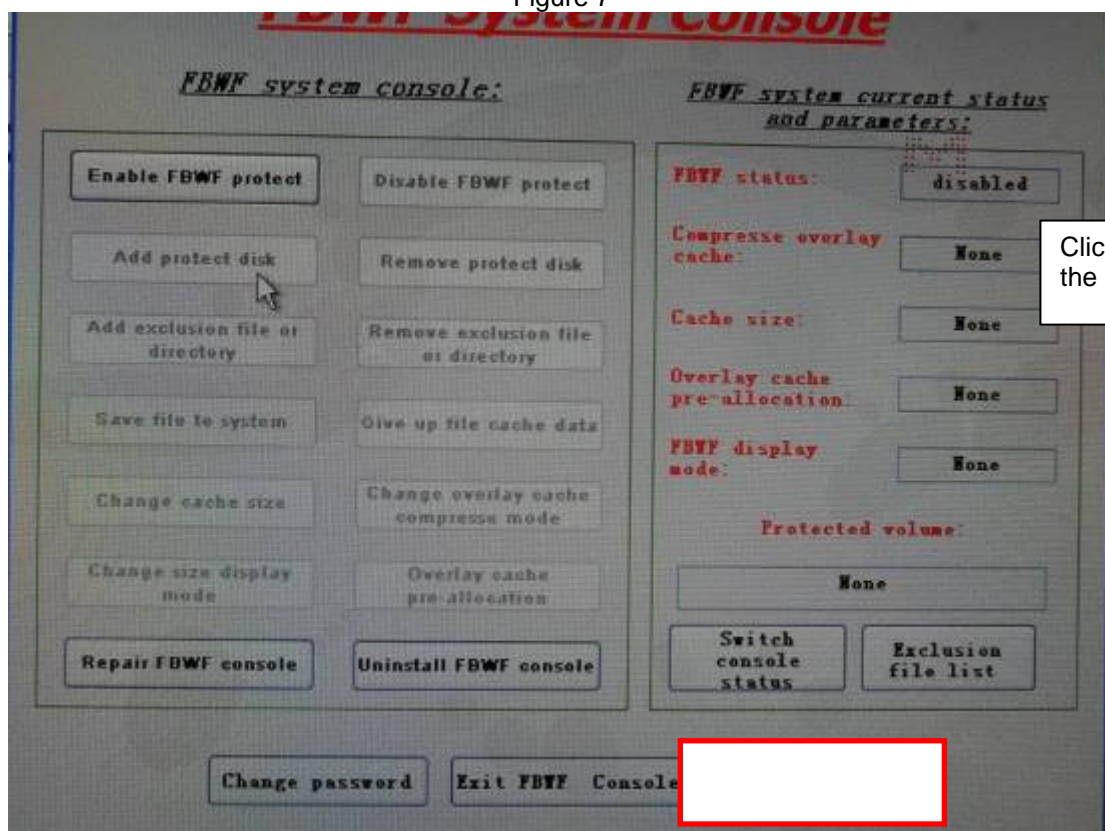


Figure 8

(2). You need to click "OK" as figure 7 & click the button as figure 8 to restart the instrument. After you restart the instrument, FBWF system console is opened again.