



STEP 1) Highlight the project name in IConfig. Look for WeldGaps in Property screen. Click on the ellipsis <...>

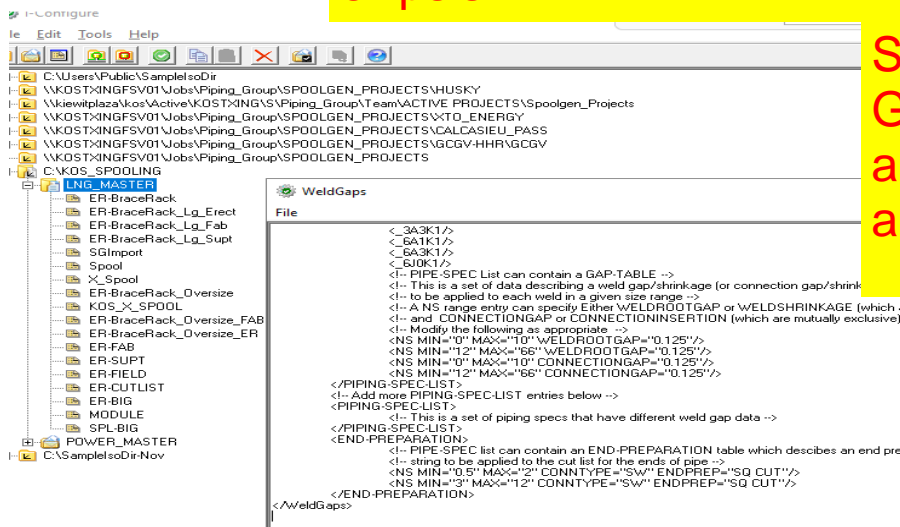

Step 1 continued: The Weld Gap screen will open. Select all the existing (CTRL A) and delete existing text.

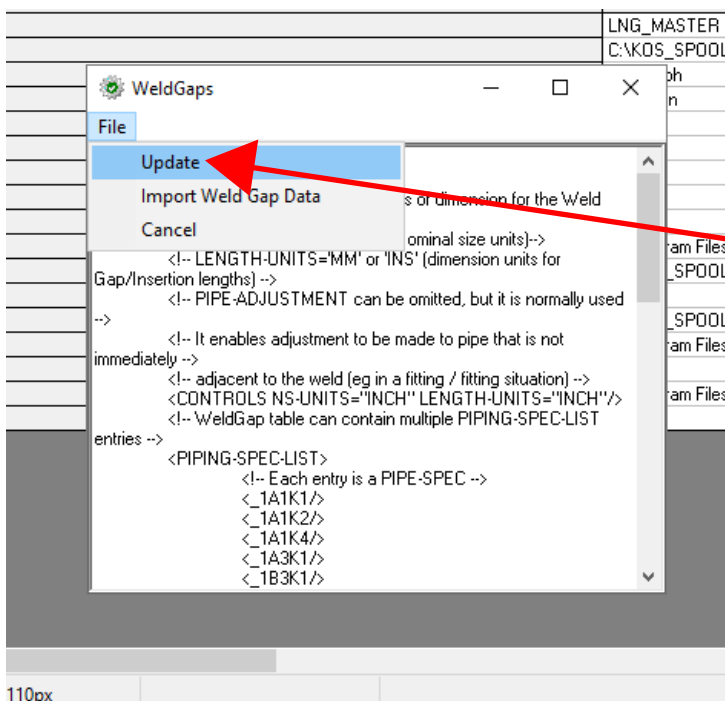

Step 2) Copy the contents of the txt file > paste into the WeldGaps screen. At the top of Weld Gaps screen click on UPDATE and choose "Update."

In Spoolgen, Log back into the project to make the new WeldGap settings "sync."