

Maintenance Procedure


No. MP925

Page 1 of 1

| |
|---|
| TASK DESCRIPTION TEST UPPER CONSOLE INDICATOR LAMPS |
| BUILDER'S OR VENDOR'S MAINTENANCE INSTRUCTIONS MPI LOCOMOTIVE MAINTENANCE MANUAL, SECTION 9 |
| SPECIAL TOOLS REQUIRED: |
| RELATED MAINTENANCE PROCEDURES MODIFICATIONS, POINTERS, ETC. |
| SAFETY PRECAUTIONS: CONTRACTOR TO ASSUME RESPONSIBILITY FOR SAFETY RULES AND COMPLIANCE. |
| PREPARATION: |

PROCEDURE

Press the front of each indicator lamp on the engine control panel in the electrical cabinet.
Replace any bulb which fails to properly function.

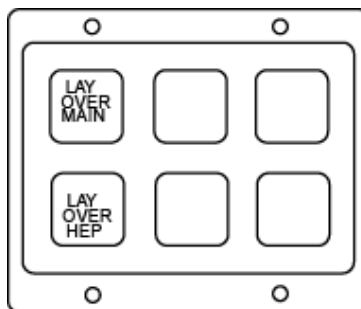

| | | |
|---------------------|----------------|--------------------------------|
| DATE OF FIRST ISSUE | September 2007 | AUTHORIZED BY: |
| REVISION 1 | August 2009 | TITLE: Manager, Rail Equipment |