


No. MP580

TASK DESCRIPTION REPLACE TURBOCHARGER FILTER ELEMENTS
BUILDER'S OR VENDOR'S MAINTENANCE INSTRUCTIONS MPI LOCOMOTIVE MAINTENANCE MANUAL, SECTION 5
SPECIAL TOOLS REQUIRED:
RELATED MAINTENANCE PROCEDURES MODIFICATIONS, POINTERS, ETC.
SAFETY PRECAUTIONS: CONTRACTOR TO ASSUME RESPONSIBILITY FOR SAFETY RULES AND COMPLIANCE.
PREPARATION:

PROCEDURE

Note: New filter elements must be of a quality equal to original equipment. The interval of change for turbocharger and soak back filter elements is influenced by load factor, kind of lubricating oil, type of operation, climatic conditions, and maintenance of main lube oil filters.

1. Remove the spin-on type filter element and properly dispose of it.
3. Thoroughly clean the filter manifold.
4. Install a new element.
5. Check the seal, replace if damaged.


	<p style="text-align: center;">CAUTION</p> <p style="text-align: center;">Do not over tighten as the seal may be damaged</p>
---	---

DATE OF FIRST ISSUE	September 2007	AUTHORIZED BY: TITLE: Manager, Rail Equipment
REVISION 1	August 2009	

Maintenance Procedure

No. MP580

Page 2 of 2

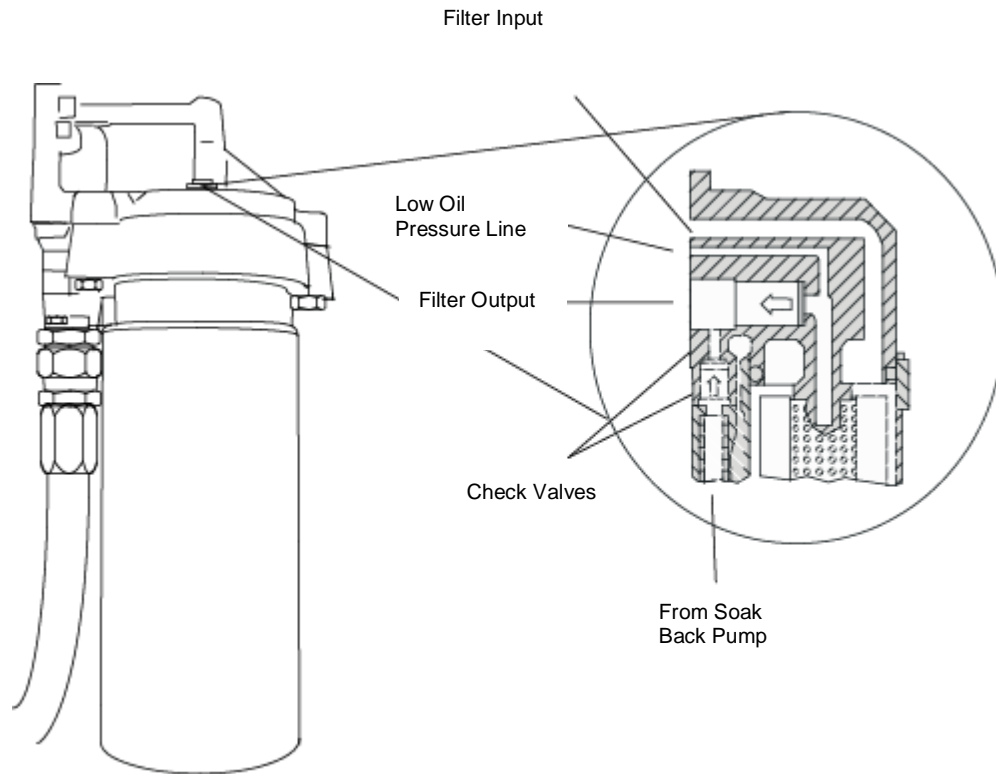

DATE OF FIRST ISSUE	September 2007	AUTHORIZED BY:
REVISION 1	August 2009	TITLE: Manager, Rail Equipment