


No. MP1125

TASK DESCRIPTION REPLACE HVAC AIR FILTER
BUILDER'S OR VENDOR'S MAINTENANCE INSTRUCTIONS MPI LOCOMOTIVE MAINTENANCE MANUAL, SECTION 11
SPECIAL TOOLS REQUIRED:
RELATED MAINTENANCE PROCEDURES MODIFICATIONS, POINTERS, ETC.
SAFETY PRECAUTIONS: CONTRACTOR TO ASSUME RESPONSIBILITY FOR SAFETY RULES AND COMPLIANCE.
PREPARATION:

PROCEDURE

1. Loosen the two thumbscrew fasteners securing the return air grill below the helper's desktop, and swing the grill up to access the air filter.
2. Replace the air filter, lower the grill, and retighten the thumbscrew fasteners.

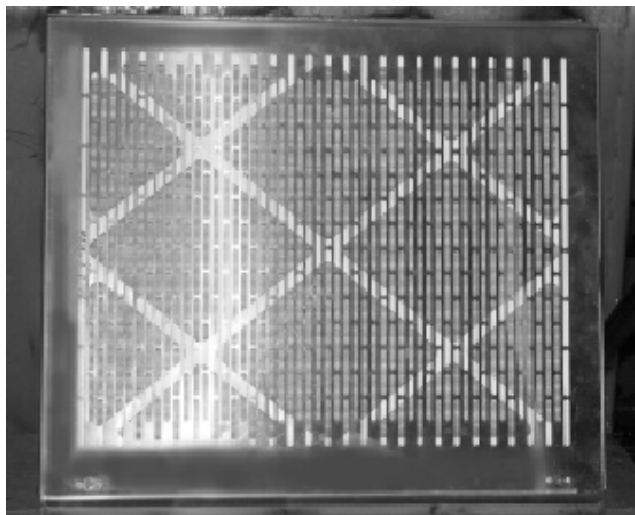

HVAC Filter
(Beneath Helper's Console)

DATE OF FIRST ISSUE	September 2007	AUTHORIZED BY:
REVISION 1	August 2009	