


Maintenance Procedure No. MP602

Page 1 of 1

TASK DESCRIPTION
CHECK AIR COMPRESSOR INTERCOOLER AND DRAIN CONDENSATION
BUILDER'S OR VENDOR'S MAINTENANCE INSTRUCTIONS
MPI LOCOMOTIVE MAINTENANCE MANUAL, SECTION 6
SPECIAL TOOLS REQUIRED:
RELATED MAINTENANCE PROCEDURES MODIFICATIONS, POINTERS, ETC.
SAFETY PRECAUTIONS:
CONTRACTOR TO ASSUME RESPONSIBILITY FOR SAFETY RULES AND COMPLIANCE.
PREPARATION:

PROCEDURE

1. Open intercooler drain valves to drain condensation.
2. Close valves after condensation has drained.

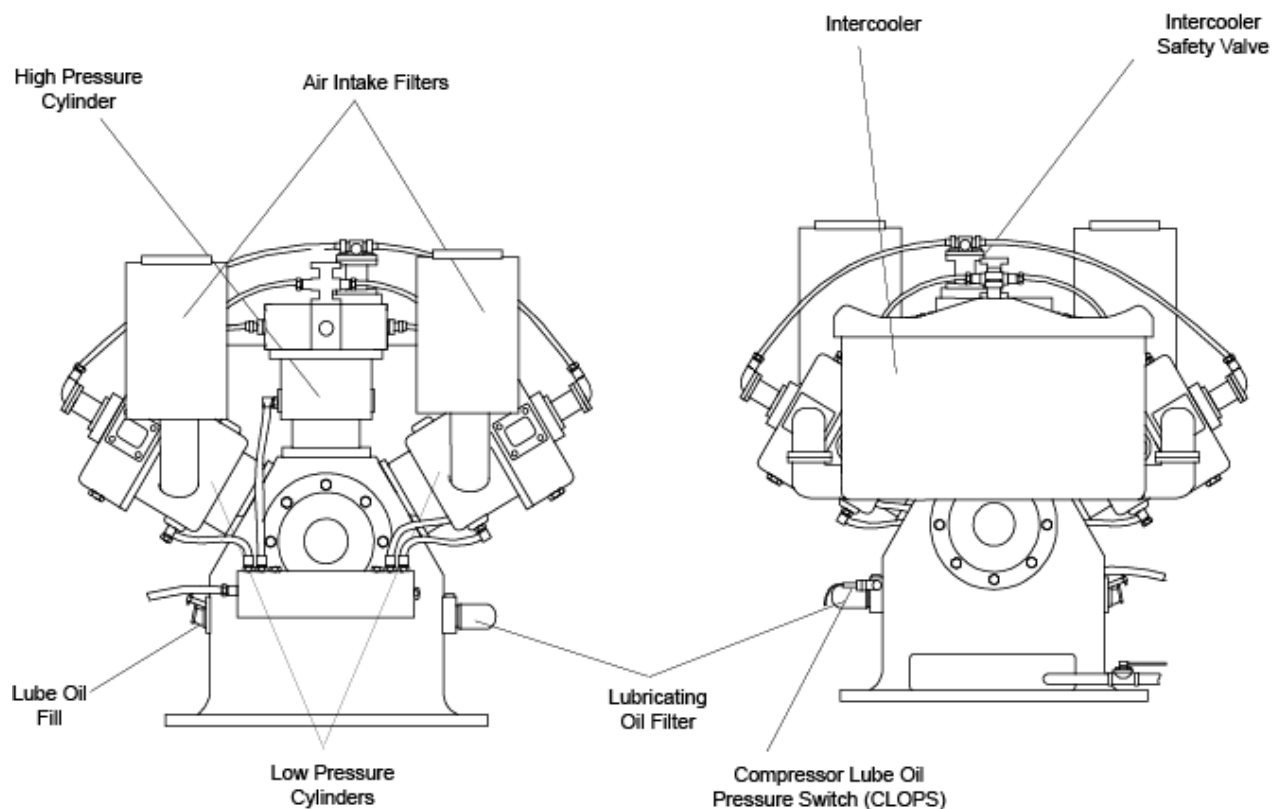

DATE OF FIRST ISSUE	September 2007	AUTHORIZED BY:
REVISION 1	August 2009	TITLE: Manager, Rail Equipment