

Maintenance Procedure




No. MP920

Page 1 of 1

TASK DESCRIPTION
TEST OPERATOR'S CONSOLE SWITCHES
BUILDER'S OR VENDOR'S MAINTENANCE INSTRUCTIONS
MPI LOCOMOTIVE MAINTENANCE MANUAL, SECTION 9
SPECIAL TOOLS REQUIRED:
RELATED MAINTENANCE PROCEDURES MODIFICATIONS, POINTERS, ETC.
SAFETY PRECAUTIONS:
CONTRACTOR TO ASSUME RESPONSIBILITY FOR SAFETY RULES AND COMPLIANCE.
PREPARATION:

PROCEDURE

Check function of all electrical switches in the operator's console. Replace any switches which fail to properly function.

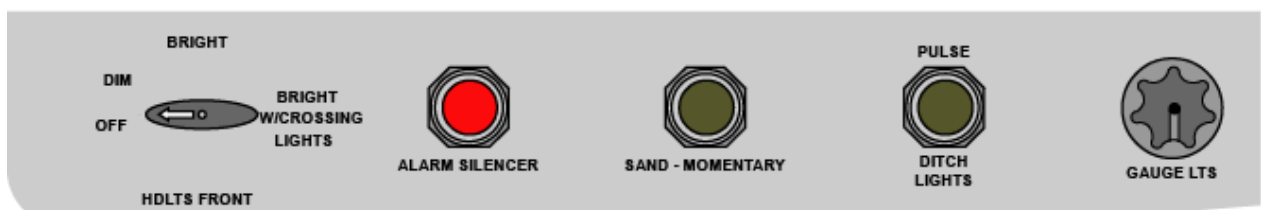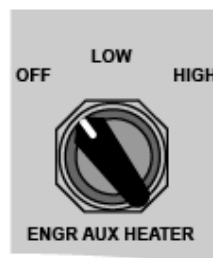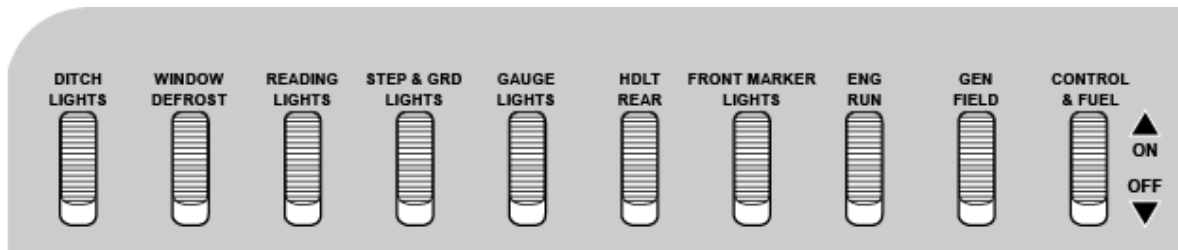

DATE OF FIRST ISSUE	September 2007	AUTHORIZED BY:
REVISION 1	August 2009	TITLE: Manager, Rail Equipment