


I-ICE MACHINES
SELF-CONTAINED 1 PHASE
CAUTION: DISCONNECT POWER BEFORE WORKING
ON ELECTRICAL CIRCUITRY.

SEE SERIAL PLATE FOR VOLTAGE

WATER VALVE

L2 OR N

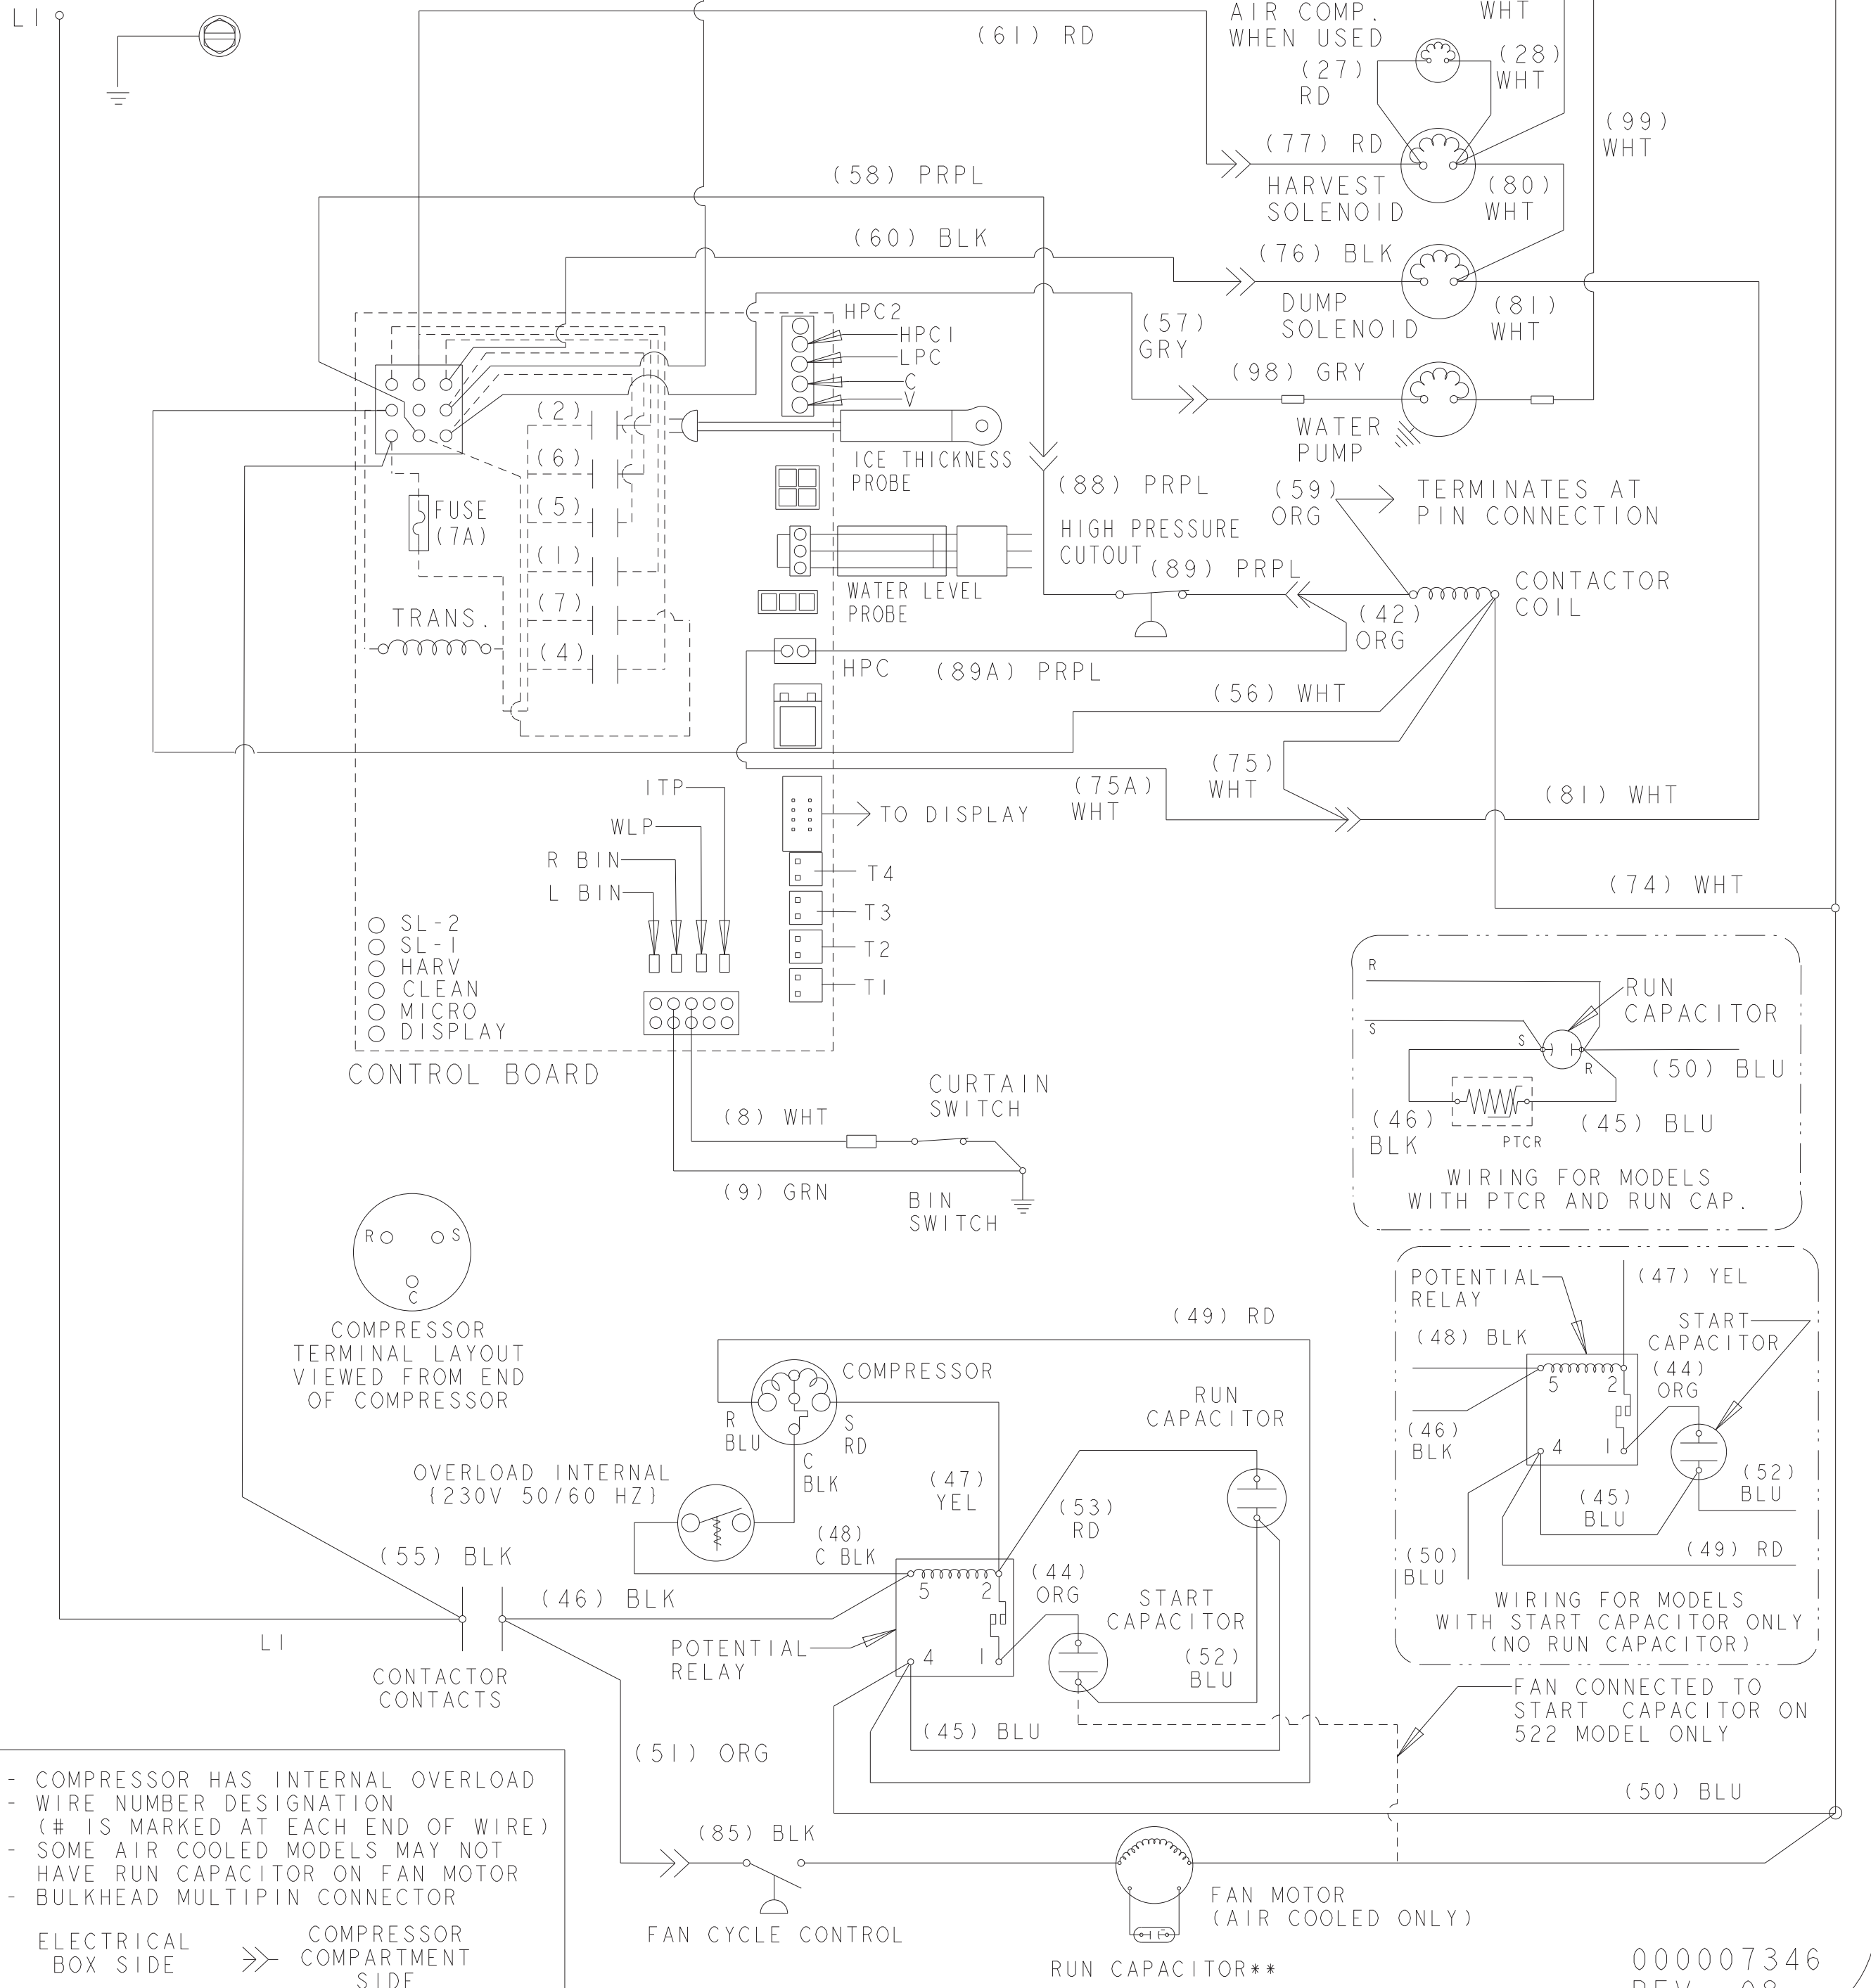

- * - COMPRESSOR HAS INTERNAL OVERLOAD
- () - WIRE NUMBER DESIGNATION (# IS MARKED AT EACH END OF WIRE)
- ** - SOME AIR COOLED MODELS MAY NOT HAVE RUN CAPACITOR ON FAN MOTOR
- - BULKHEAD MULTIPIN CONNECTOR

ELECTRICAL BOX SIDE ➤ COMPRESSOR COMPARTMENT SIDE

000007346
REV. 08