


U-ICE MACHINES - WIRING DIAGRAM SELF-CONTAINED 1 PHASE

CAUTION: DISCONNECT POWER BEFORE WORKING
ON ELECTRICAL CIRCUITRY.

SEE SERIAL PLATE FOR VOLTAGE

DIAGRAM SHOWN DURING FREEZE CYCLE

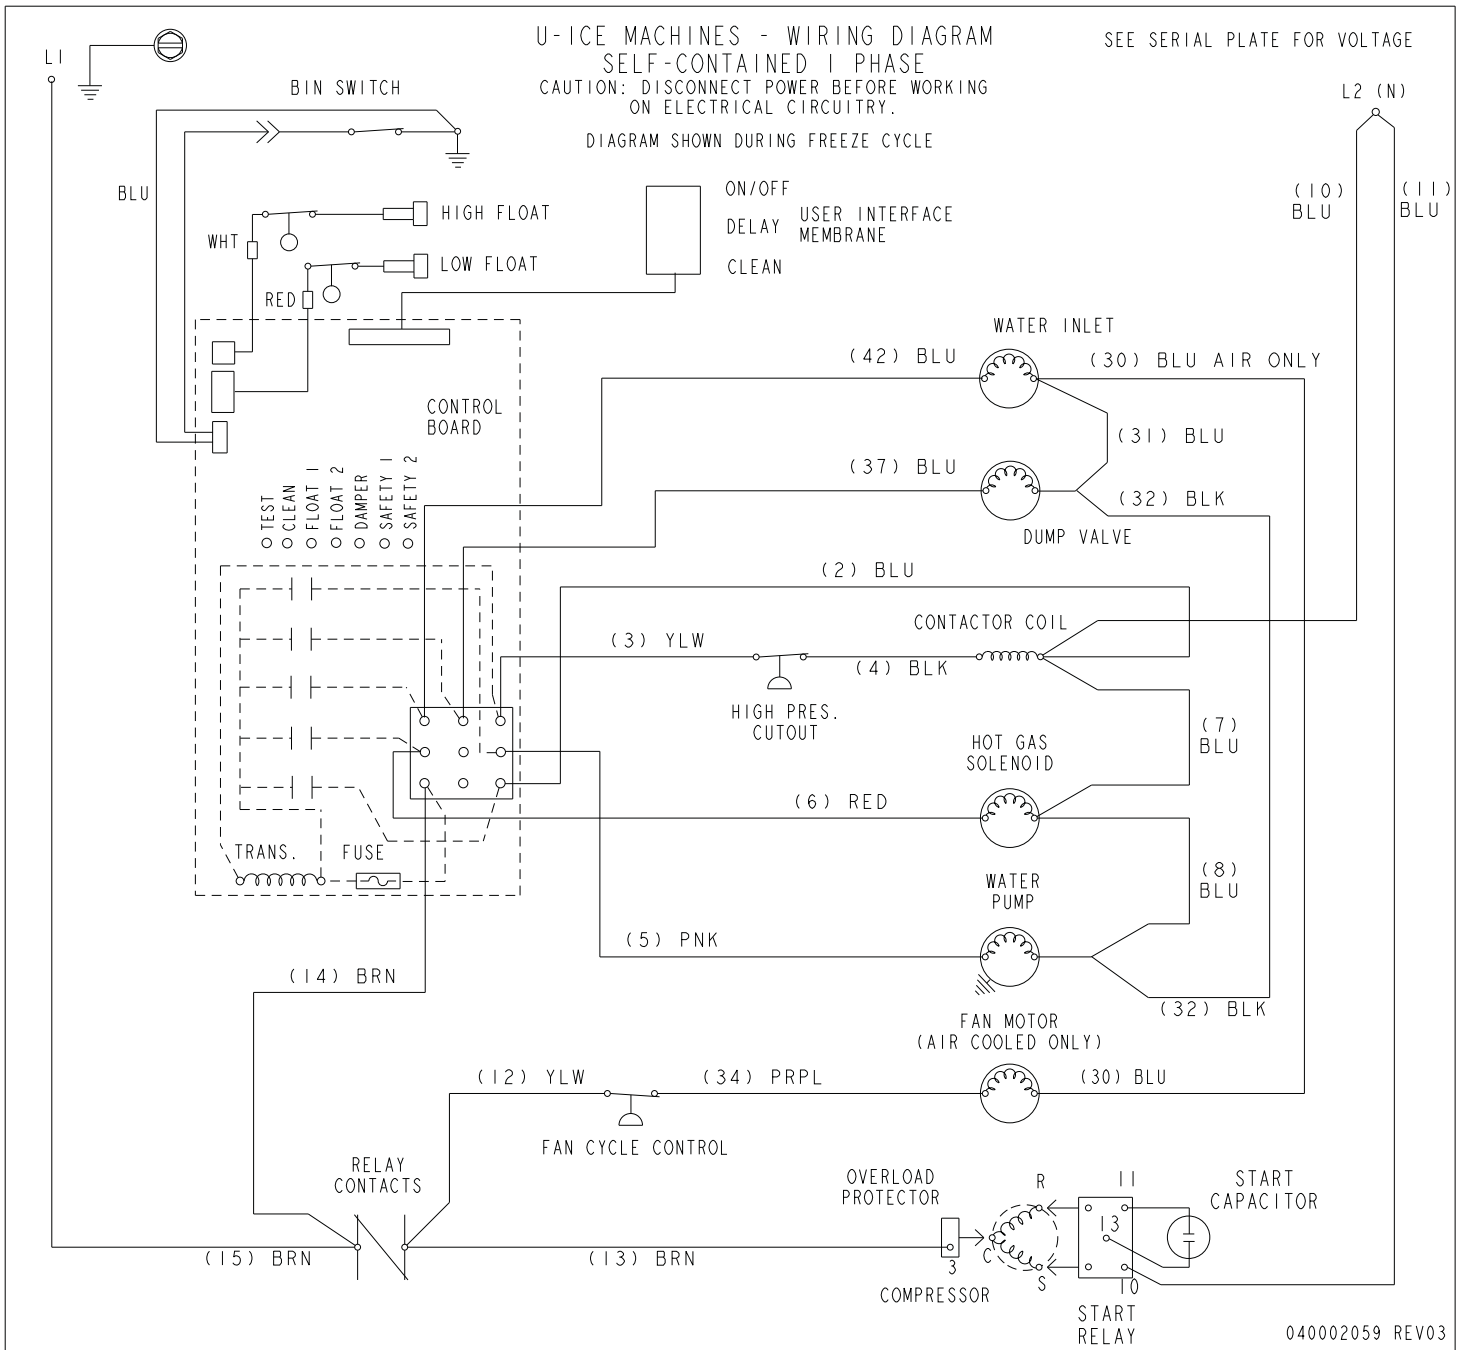

040002059 REV03