


Note: The 42E/57E serial port is RS485 level, so a TTL to RS485 level module is required.

① Serial communication wiring instructions between MKS SERVO 42E and Arduino UNO

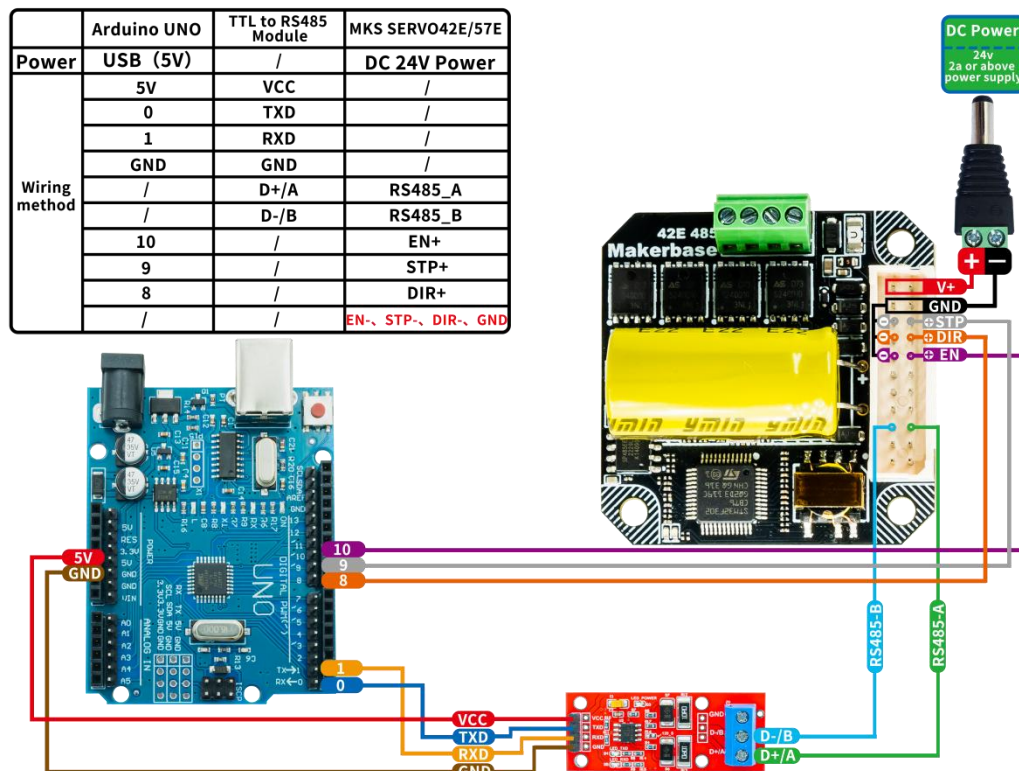

② Serial communication wiring instructions between MKS SERVO 57E and Arduino UNO

