


Touch Switch

USER QUICK GUIDE

Introduction

The Touch Switch can control 3.5 mm audio outputs like in the Xbox Adaptive Controller and other switch adapted products. This device may benefit users with limited hand dexterity and strength who find it challenging to trigger mechanical switches.

Features

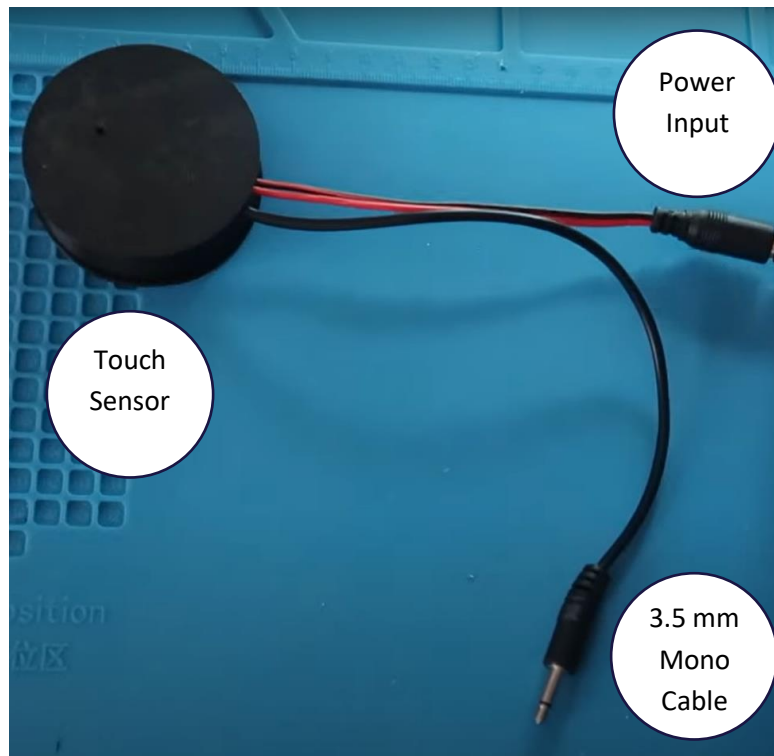

Usage

To use the Touch Switch, plug in the power supply and connect the mono cable to a switch-controlled device. Simply touch the top surface to engage the switch, indicated by a red LED.

Compatibility

This device can trigger any device that requires a 3.5 mm momentary switch.

Specifications

Diameter	Height	Power Input	Switch Output
6.1 cm	1.8 cm	5V 2A	3.5 mm mono cable

Cleaning

Unplug the device and wipe down with a damp cloth or cleaning wipes. Do not get the internal electronics wet.



© 2023 by [Neil Squire / Makers Making Change](#)

This work is licensed under the CC BY SA 4.0 License: <http://creativecommons.org/licenses/by-sa/4.0>

Files available at <https://makersmakingchange.com/project/touch-switch/>