

# Switch Adapted Climbing Ducks Toy

## MAKER GUIDE

### Required Components

<p>1.</p> 	<p>2.</p> 	<p><b>BOM</b></p> <ol style="list-style-type: none"> <li>1. Amazon LED Electric Duck Climbing Stairs Toy</li> <li>2. Mono jacks x2</li> <li>3. 22 AWG Wire</li> <li>4. 2 AA Batteries</li> </ol>
<p>3.</p> 	<p>4.</p> 	

### Required Tools

- Phillips Screwdriver
- Soldering iron
- Wire stripper
- Flush cutter
- Drill and ¼ drill bit

### Required Personal Protective Equipment (PPE)


- Safety Glasses

# Switch Adapted Climbing Ducks Toy

## MAKER GUIDE

### Assembly Instructions


#### Step 1

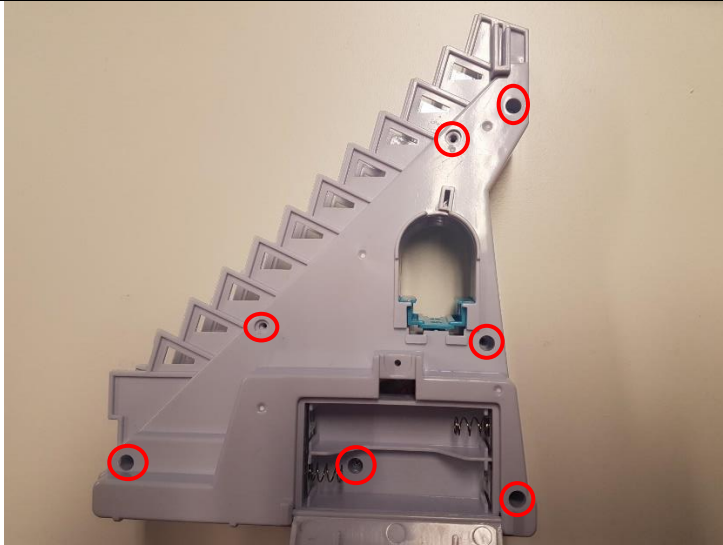

- Carefully remove toy from packaging, the toy will be put back in packaging (if possible) after it is adapted
- This toy has a lot of parts – ducks and a track that can be kept in the box
- Using a screwdriver, turn screws indicated in the red circles to open the toy – including the screw inside the battery compartment
- Set screws aside in a safe place


# Switch Adapted Climbing Ducks Toy MAKER GUIDE

## Step 2

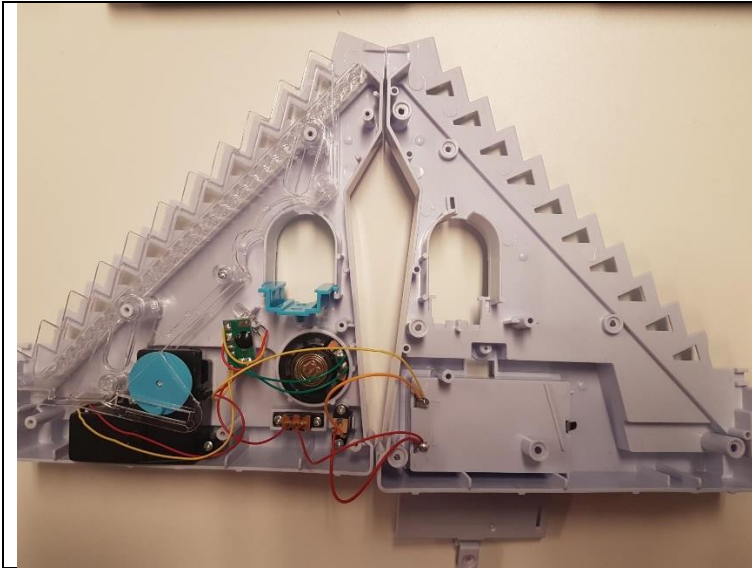

- After screws are undone, gently pull the toy into two halves. Be very careful while doing this as to not pull off any existing wires or connections
- If some parts move, just take note of how everything fits together but they can also be set aside while you work on the toy.

## Step 3

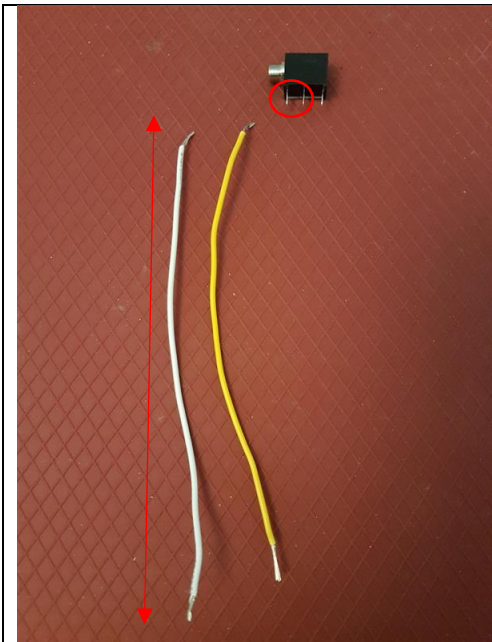

Next we will prepare the mono jack and wires.

Cut 2 pieces of wire each 8 cms in length


Strip both ends of both wires, leaving about .5 cm of exposed wire on each end



# Switch Adapted Climbing Ducks Toy

## MAKER GUIDE

### Step 4

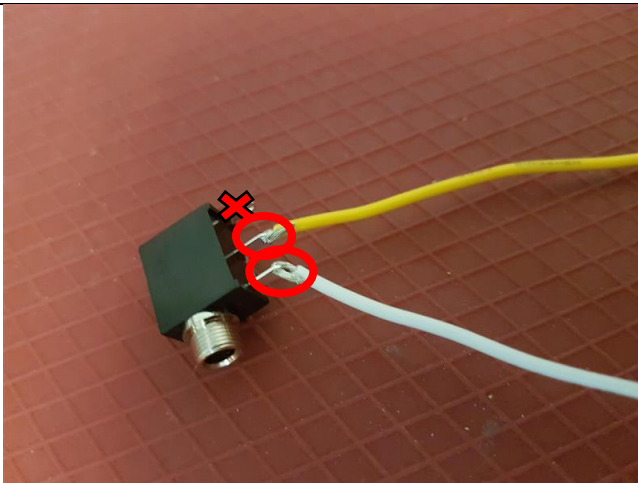

- Pick one wire, slide exposed wire into first metal arm on mono jack (the arm closest to the circular jack)
- With second wire, slide one end of exposed wire into the middle metal arm on mono jack
- Solder wire to mono jack

Please Note: Check that you have the correct metal arms of mono jack, refer to picture


### Step 5



- Tin the ends of your wire. The best way to do this is cover the exposed wire end in solder.
- This will help you stick the wires to an existing spot where there is solder


# Switch Adapted Climbing Ducks Toy MAKER GUIDE

## Step 6

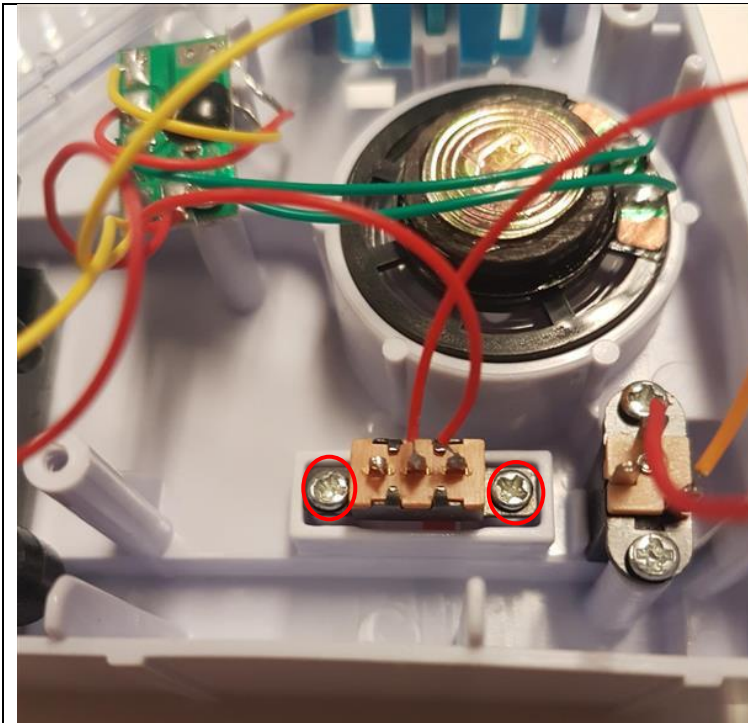

- Locate where the on/off switch is located. Undo the screws and gently pull the switch to give yourself space to work with it
- For this assembly, we are attaching our mono jack + wires to the same spots on the original switch

## Step 7

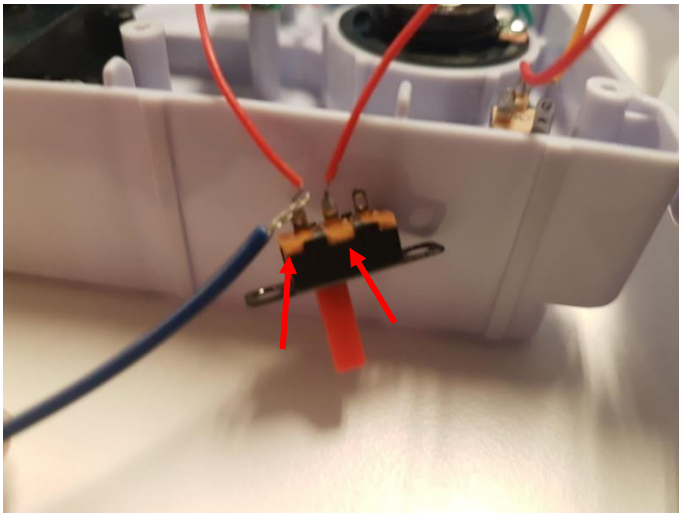


- Using the wires and mono jack you previously prepared, you will solder the ends of your new wire to where the current red wires are.
- You will have one new wire and one old wire coming from each spot indicated in the circles
- **Test your connections using an assistive switch.** Listen for the motor to start when the switch is activated. Please note: you will need batteries to test



# Switch Adapted Climbing Ducks Toy MAKER GUIDE

## Step 8

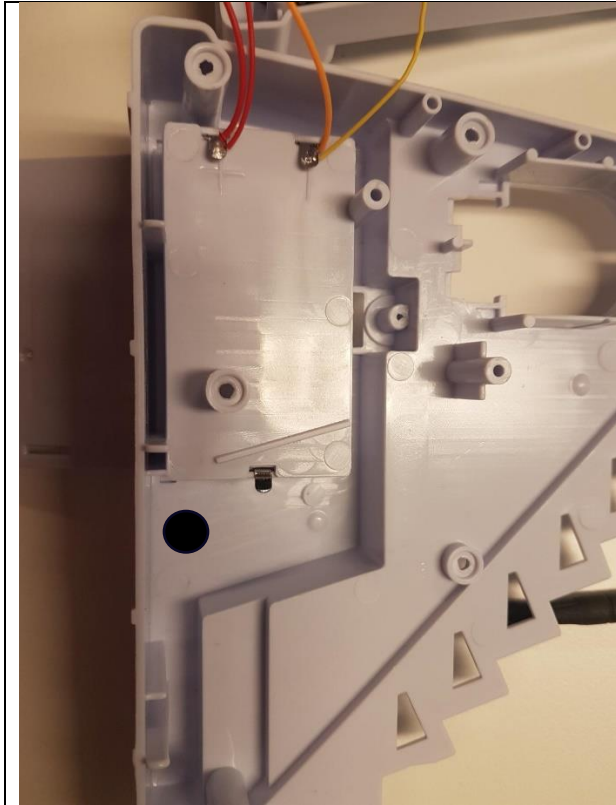

- Using a ¼ inch drill bit, drill a hole to the side of the battery compartment.
- Check that the mono jack end fits through the hole and that it does not interfere with any mechanism of the toy.
- Add the ring to the outside of the toy to hold the mono jack in place.

## Step 9



- Reassemble the original switch to its original position, close the toy – checking that no wires are being pinched and the mechanics are moving.
- Reassemble by adding the screws to their original spots.

**Test the toy again once reassembled.**