

Tips on how to modify the text limit to English

Version: V1.0

version	description	date	Examine
V1.0 create a document		<u>2016-06-08</u>	Li Yong

table of Contents

The first 1 chapter Pop-up custom keyboard application Error! Bookmark not defined.

1.1	Outline	1
1.2	operating	1
1.2.1.	Ready to art pictures	1
1.2.2	Keyboard Configuration	????? Error! Bookmark not defined.
1.2.3	Export System Keyboard	Error! Bookmark not defined.
1.2.4	Keyboard transplant	????? Error! Bookmark not defined.
1.2.5	System recovery software that comes with the keyboard	Error! Bookmark not defined.
1.3	Notices and Services	4

The first 1 chapter Tips on how to modify the text limit to English

1.1 Outline

When we want to limit the values the user entered text when an interval, we can set limits input text control, the system default prompt for the Chinese, this document explains how to put the Chinese into English prompt prompt.

1.2 operating

1.2.1. Preparation Profile

Ready to replace the English keyboard configuration file, this file can get to our sales. Then unzip "English value configuration. rar
"File, get" DeviceInfo.xml "Configuration file, as 1-1 Fig.

Note: The bag limit Chinese as well as the backup file configuration, if you want to exchange for Chinese, consistent approach.



Map 1-1 unzip files


1.2.2 Replacement Profile

1 , Right-click on the Desktop VisualTFT-> Open the file location, you can quickly find VisualTFT Installation directory.




Map 1-2 Open File Location

2, Just unzip the resulting " DeviceInfo.xml "Configuration file copy and paste into English VisualTFT Installation directory, as 1-3 Fig.

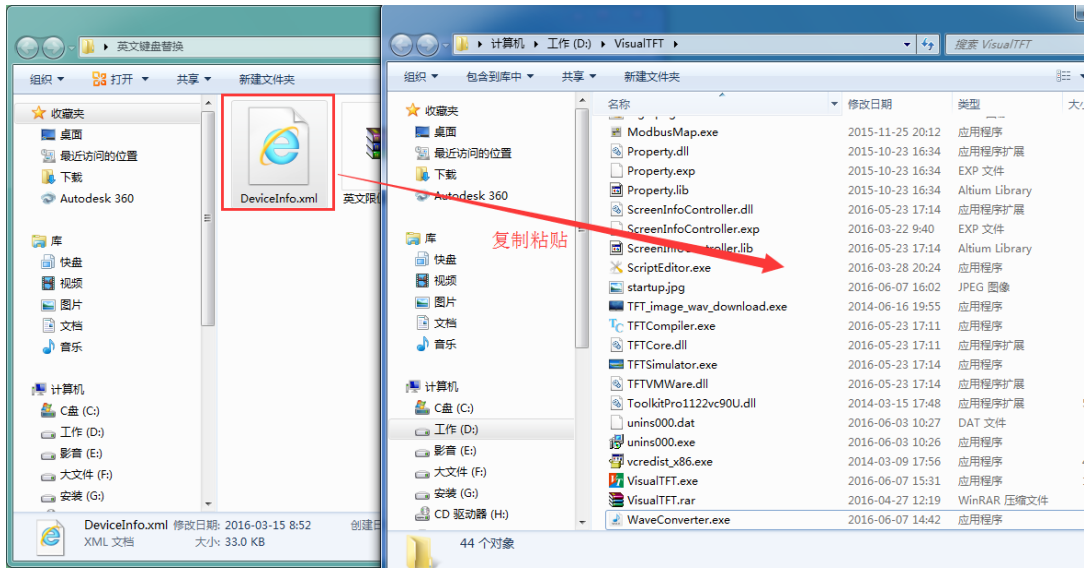

Map 1-3 copy and paste

3 At this time comes. " DeviceInfo.xml "Chinese profile with the same name will replace conflict, the pop-up prompt us to click on" Copy and Replace ", as 1-4 Fig.

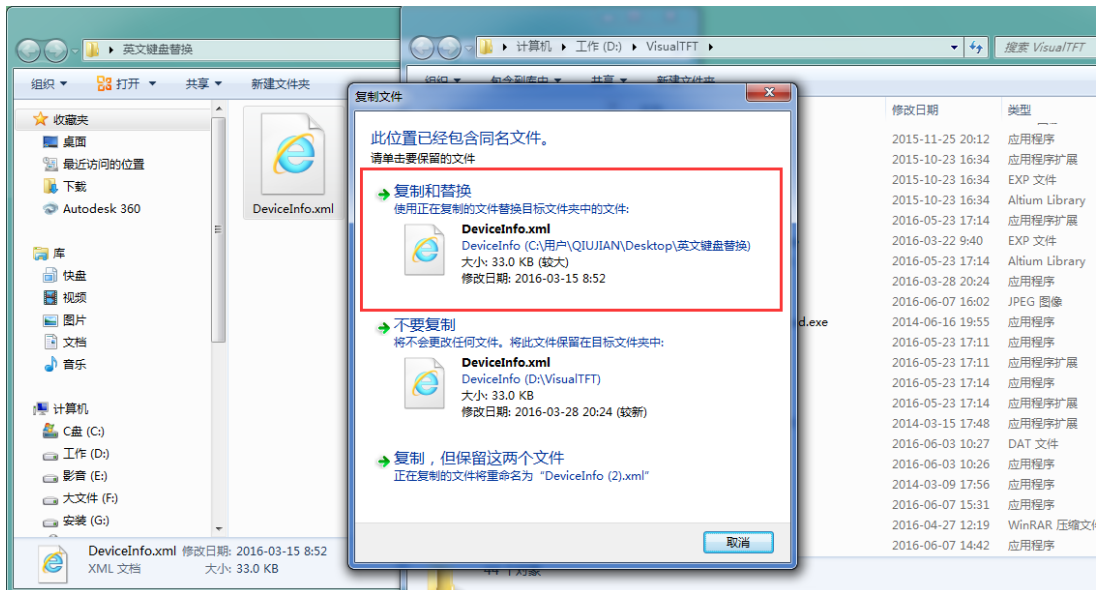

Map 1-4 Copy and Replace

1.2.3 Project Configuration


1, Reposition the text control, configure text control, configuration as shown.

输入设置	
输入方式	弹出系统键盘输入
键盘类型	小键盘
初始值	有
文本长度	255
数值限定	
	是
小数位数	0
最大值	100
最小值	0

Map 1-5 Text Control Configuration


Note: If it is not placed before the file replacement text control, proposed to delete, reposition the text control.

2, Once configured, download the project, with "production wizard" to download, select the download font download resources and system resources, as 1-6 Fig.

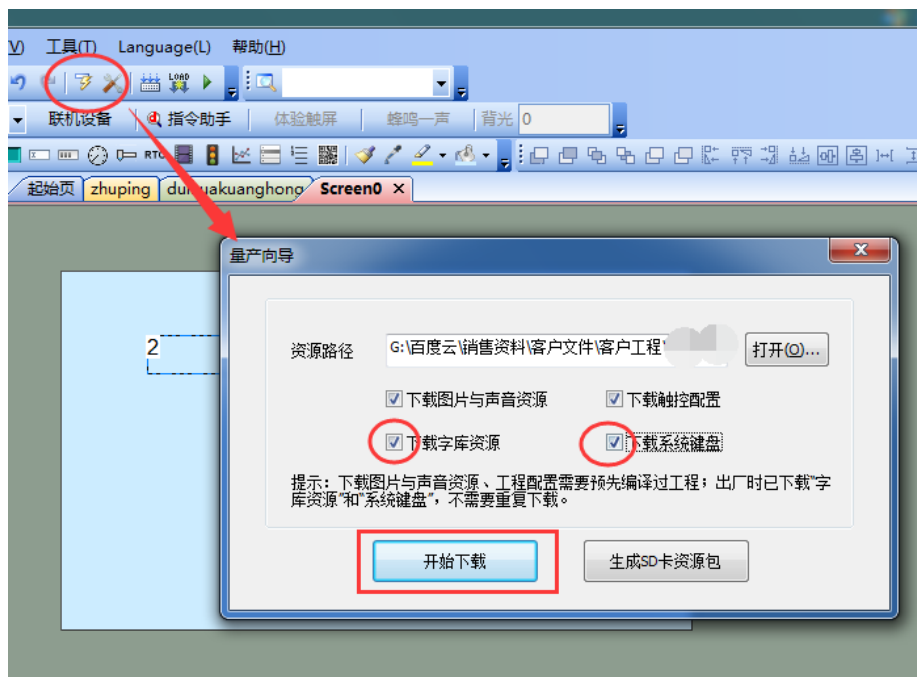

Map 1-6 Download keyboard font resources

3 We limit set above as "0-100 "When we enter." 101 ", The actual effect as shown in 1-7 Fig.

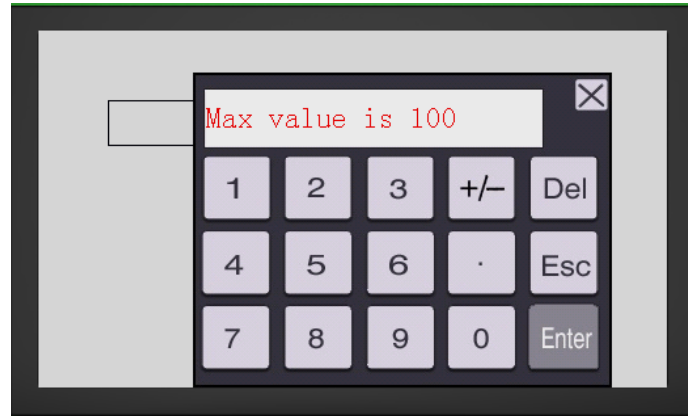

Map 1-7 actual effect

1.3 Notices and Services

Thank you for choosing large color products, if you have any objections or questions about documentation, please feel free to get in touch with us.

phone: 020-82186683-601 , Email: hmi@gz-dc.com . Of course, if the document has any error or misunderstanding, welcome comments and suggestions to us, we will promptly correct and improve.